

Electical Service Manual


Wheelchair-Accessible Lowered Floor Conversion (Foldout Ramp) featuring 2004 & 2005* **Chrysler Minivans**

*(including some late 2003 conversions)



Because Life is a Moving Experience

⚠ WARNING

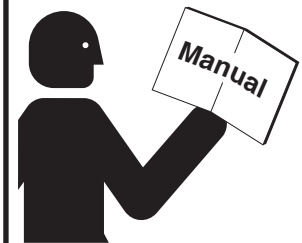

Read manual
before servicing.
Failure to do so
may result in
serious bodily
injury and/or
property damage.

Safety Precautions	2
---------------------------------	----------

Below Floor Obstructions

2004 & 2005* Chrysler Lowered Floor Minivan (Foldout Ramp) Conversion	3
2005 & 2006** Chrysler Lowered Floor Minivan (Foldout Ramp) Conversion	4

*** Wiring Diagrams & Electrical Schematics - Oaktech**

Wiring Diagram - Main - Oaktech Controller	5A, 6A
Electrical Schematic - Main - Oaktech Controller	5B, 6B
Wiring Diagram - Front Seat - Driver Power w/ Memory - Passenger Power w/o Memory	7A, 8A
Electrical Schematic - Front Seat - Driver Power w/ Memory - Passenger Power w/o Memory	7B, 8B
Wiring Diagram - Front Seat - Driver Power w/o Memory - Passenger w/o Power	9A, 10A
Electrical Schematic - Front Seat - Driver Power w/o Memory - Passenger w/o Power	9B, 10B
Wiring Diagram - Front Seat - Driver Power w/o Memory - Passenger Power w/o Memory...11A, 12A	
Electrical Schematic - Front Seat - Driver Power w/o Memory - Passenger Power w/o Memory	11B, 12B
Wiring Diagram - Front Seat - Driver w/o Power - Passenger w/o Power	13A, 14A
Electrical Schematic - Front Seat - Driver w/o Power - Passenger w/o Power	13B, 14B

**** Wiring Diagrams & Electrical Schematics - Braun**

Wiring Diagram - Main - Braun Controller	15A, 16A
Wiring Diagram - Dash Mounted Switches - w/ Side Air Bags	15B
Wiring Diagram - Dash Mounted Switches - w/o Side Air Bags	16B
Electrical Schematic - Main - Braun Controller	17A, 18A

*** Note:** Includes some late 2003 conversions.

**** Note:** Includes up to "0602" conversions.

Electrical Schematic - Dash Mounted Switches - w/ Side Air Bags	17B
--	-----

Electrical Schematic - Dash Mounted Switches - w/o Side Air Bags	18B
---	-----

Wiring Diagram - Front Seat - Driver Power w/ Memory - Passenger Universal - Rev A-E..19A, 20A	
---	--

Electrical Schematic - Front Seat - Driver Power w/ Memory - Passenger Universal - Rev A-E..19B, 20B	
---	--

Wiring Diagram - Front Seat - Driver Power w/ Memory - Passenger Universal - Rev F ...	21A, 22A
---	----------

Electrical Schematic - Front Seat - Driver Power w/ Memory - Passenger Universal - Rev F ...	21B, 22B
---	----------

Wiring Diagram - Front Seat - Driver Power w/o Memory - Passenger Universal	23A, 24A
--	----------

Electrical Schematic - Front Seat - Driver Power w/o Memory - Passenger Universal	23B, 24B
--	----------

Wiring Diagram - Extensions - Overhead B-Pillar	25A, 26A
--	----------

Electrical Schematic - Extensions - Overhead B-Pillar	25B, 26B
--	----------

Wiring Diagram - Extensions - Driver / Passenger Slide Door	27A
--	-----

Wiring Diagram - Extensions - Fuel Pump	28A
---	-----

Electrical Schematic - Extensions - Driver / Passenger Slide Door	27B
--	-----

Electrical Schematic - Extensions - Fuel Pump	28B
--	-----

Wiring Diagram - Extensions - B Pillar Switch & Full Open Switch	29A
---	-----

Wiring Diagram - Extensions - Air Bag Sensor	30A
--	-----

Electrical Schematic - Extensions - B Pillar Switch & Full Open Switch	29B
---	-----

Electrical Schematic - Extensions - Air Bag Sensor	30B
---	-----

Wiring Diagram - Extensions - Driver Slide Door	31A, 32A
--	----------

Electrical Schematic - Extensions - Driver Slide Door	31B, 32B
--	----------

Wiring Diagram - Extensions - Passenger Slide Door	33A, 34A
---	----------

Electrical Schematic - Extensions - Passenger Slide Door	33B, 34B
---	----------

SAFETY PRECAUTIONS

Safety Precautions

⚠ WARNING

Read this manual, the conversion's operator's manual and supplements before performing operation, maintenance or service procedures. Failure to do so may result in serious bodily injury and/or property damage.

- ⚠ WARNING** Maintenance and service procedures must be performed only by authorized service personnel.
- ⚠ WARNING** Perform maintenance and lubrication procedures exactly as outlined in the Maintenance and Lubrication Schedule contained in this manual.
- ⚠ WARNING** Perform troubleshooting and service procedures as outlined in this manual and/or service bulletins supplied with replacement parts.
- ⚠ WARNING** Replacement parts must be Braun authorized replacements.
- ⚠ WARNING** Do not attempt to interface aftermarket control systems without authorization from The Braun Corporation.

- ⚠ WARNING** Do not use accessory devices not authorized by The Braun Corporation.
- ⚠ WARNING** Keep clear of area in which the vehicle kneels (lowers).
- ⚠ WARNING** Keep clear of area in which ramp operates.
- ⚠ WARNING** Never modify (alter) a Braun Corporation lowered floor minivan conversion.
- ⚠ WARNING** Do not install a raised top on a Braun Corporation lowered floor minivan conversion.
- ⚠ WARNING** Use of a Braun Corporation lowered floor minivan conversion for towing is prohibited.
- ⚠ WARNING** Failure to follow these safety precautions may result in serious bodily injury and/or property damage.

BELOW FLOOR OBSTRUCTIONS

2004 & 2005* Chrysler Lowered Floor Minivan (Foldout Ramp) Conversion

When installing an electrical tie-down, power seat or other auxiliary device, obstructions below the floor must be avoided. Obstructions include wiring, fuel system, brake lines, etc. Installers must be aware of these obstructions.

Refer to this illustration when installing aftermarket equipment to avoid contacting or damaging vital components under the floor.


Drilling or cutting into such obstructions may result in potential hazards as well as property damage.

Note: Some wiring harnesses shown may not be present. Avoid all harness locations.

*** Note:** Diagram includes some late 2003 conversions.

⚠ WARNING

Check for obstructions such as wires, gas lines, exhaust, etc. before drilling or cutting through floor. Failure to do so may result in serious bodily injury and/or property damage.

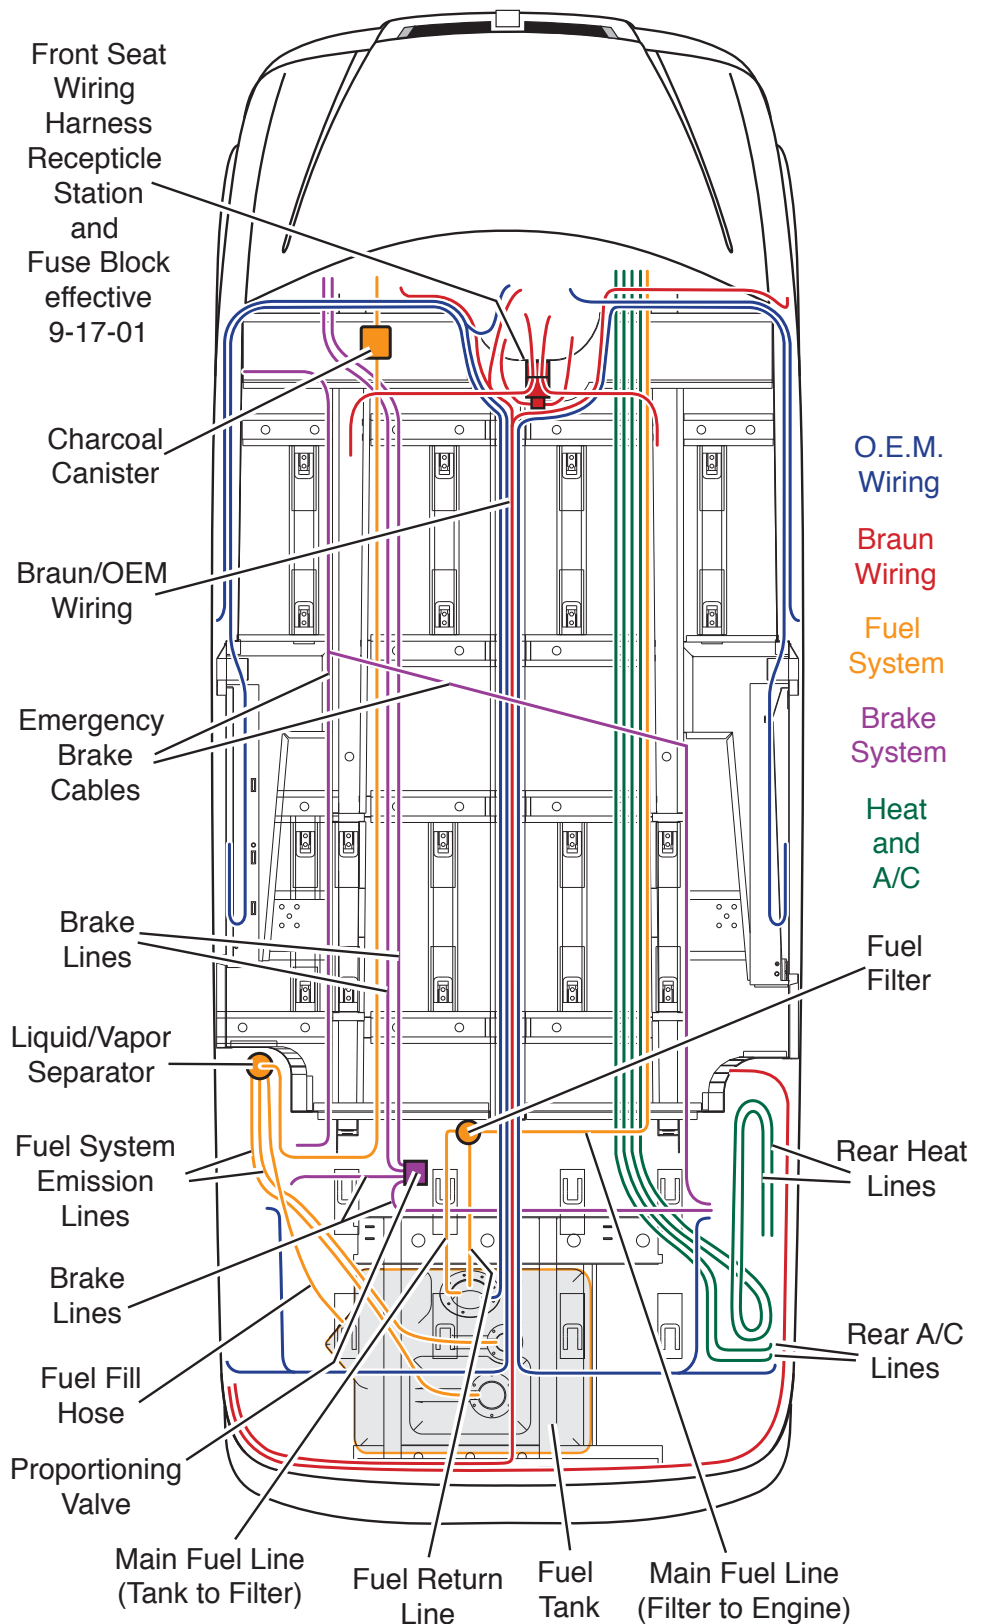

BELOW FLOOR OBSTRUCTIONS

2005 & 2006** Chrysler Lowered Floor Minivan (Foldout Ramp) Conversion

When installing an electrical tie-down, power seat or other auxiliary device, obstructions below the floor must be avoided. Obstructions include wiring, fuel system, brake lines, etc. Installers must be aware of these obstructions.

Refer to this illustration when installing aftermarket equipment to avoid contacting or damaging vital components under the floor.


Drilling or cutting into such obstructions may result in potential hazards as well as property damage.

Note: Some wiring harnesses shown may not be present. Avoid all harness locations.

*** Note:** Diagram includes up to "0602" conversions.


⚠ WARNING

Check for obstructions such as wires, gas lines, exhaust, etc. before drilling or cutting through floor. Failure to do so may result in serious bodily injury and/or property damage.

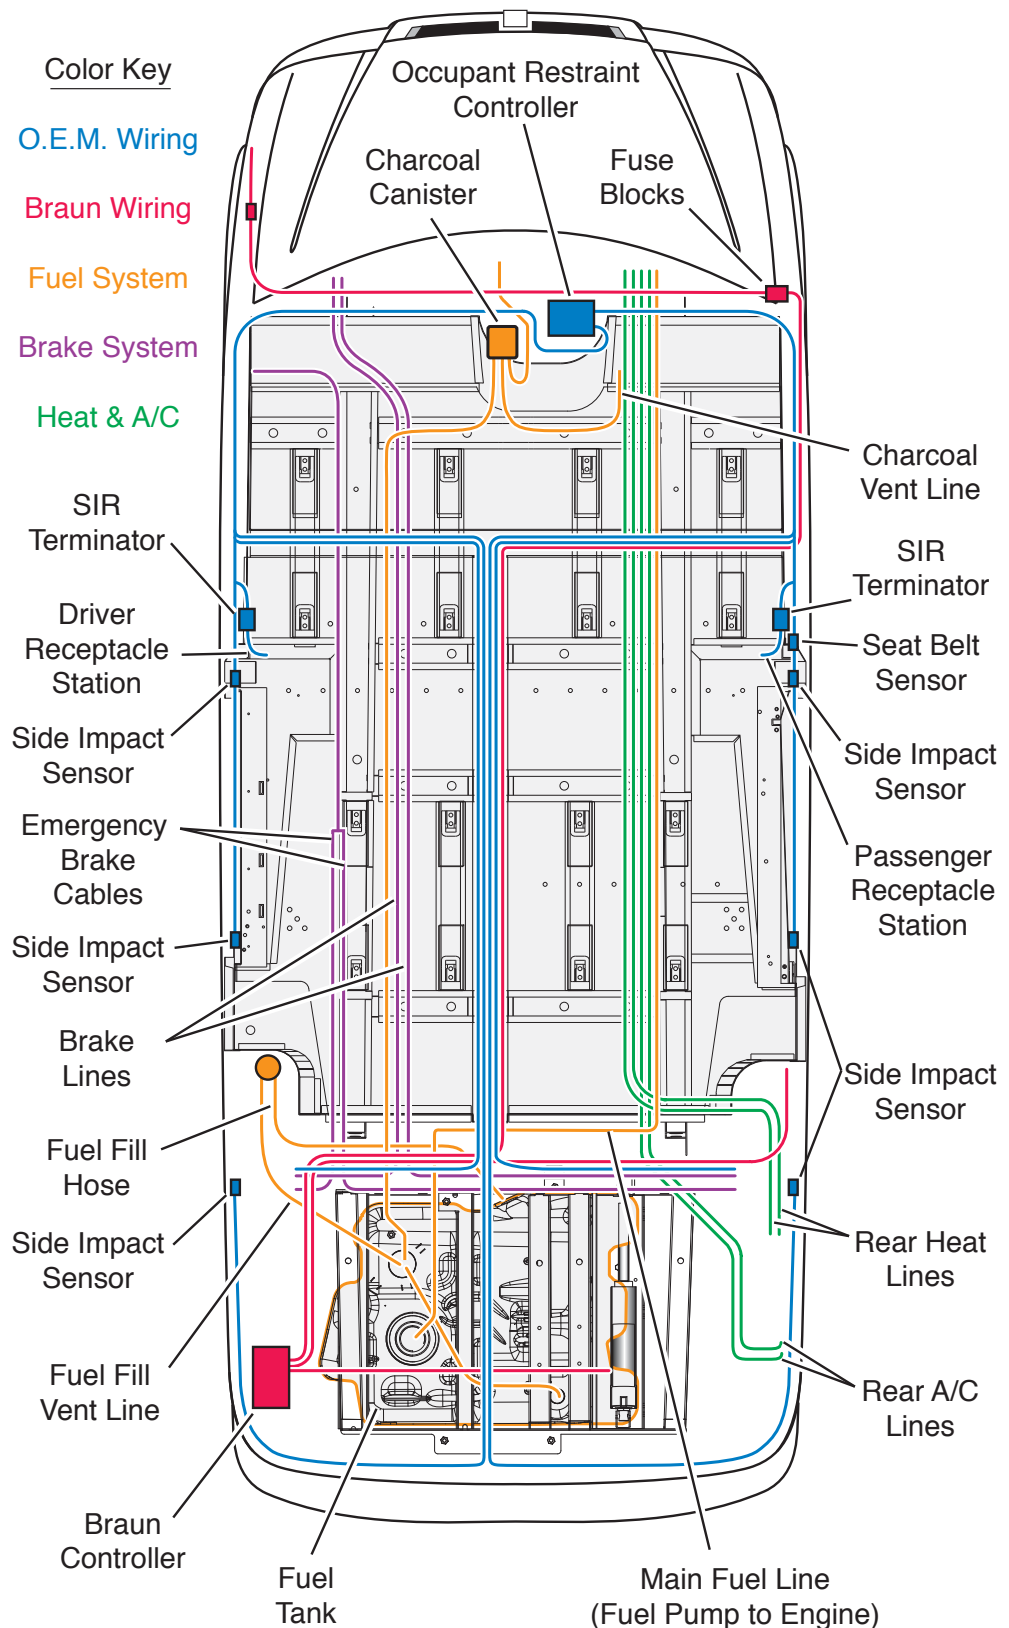


WIRING DIAGRAM - MAIN - OAKTECH CONTROLLER

Note: Diagram includes some late 2003 conversions.

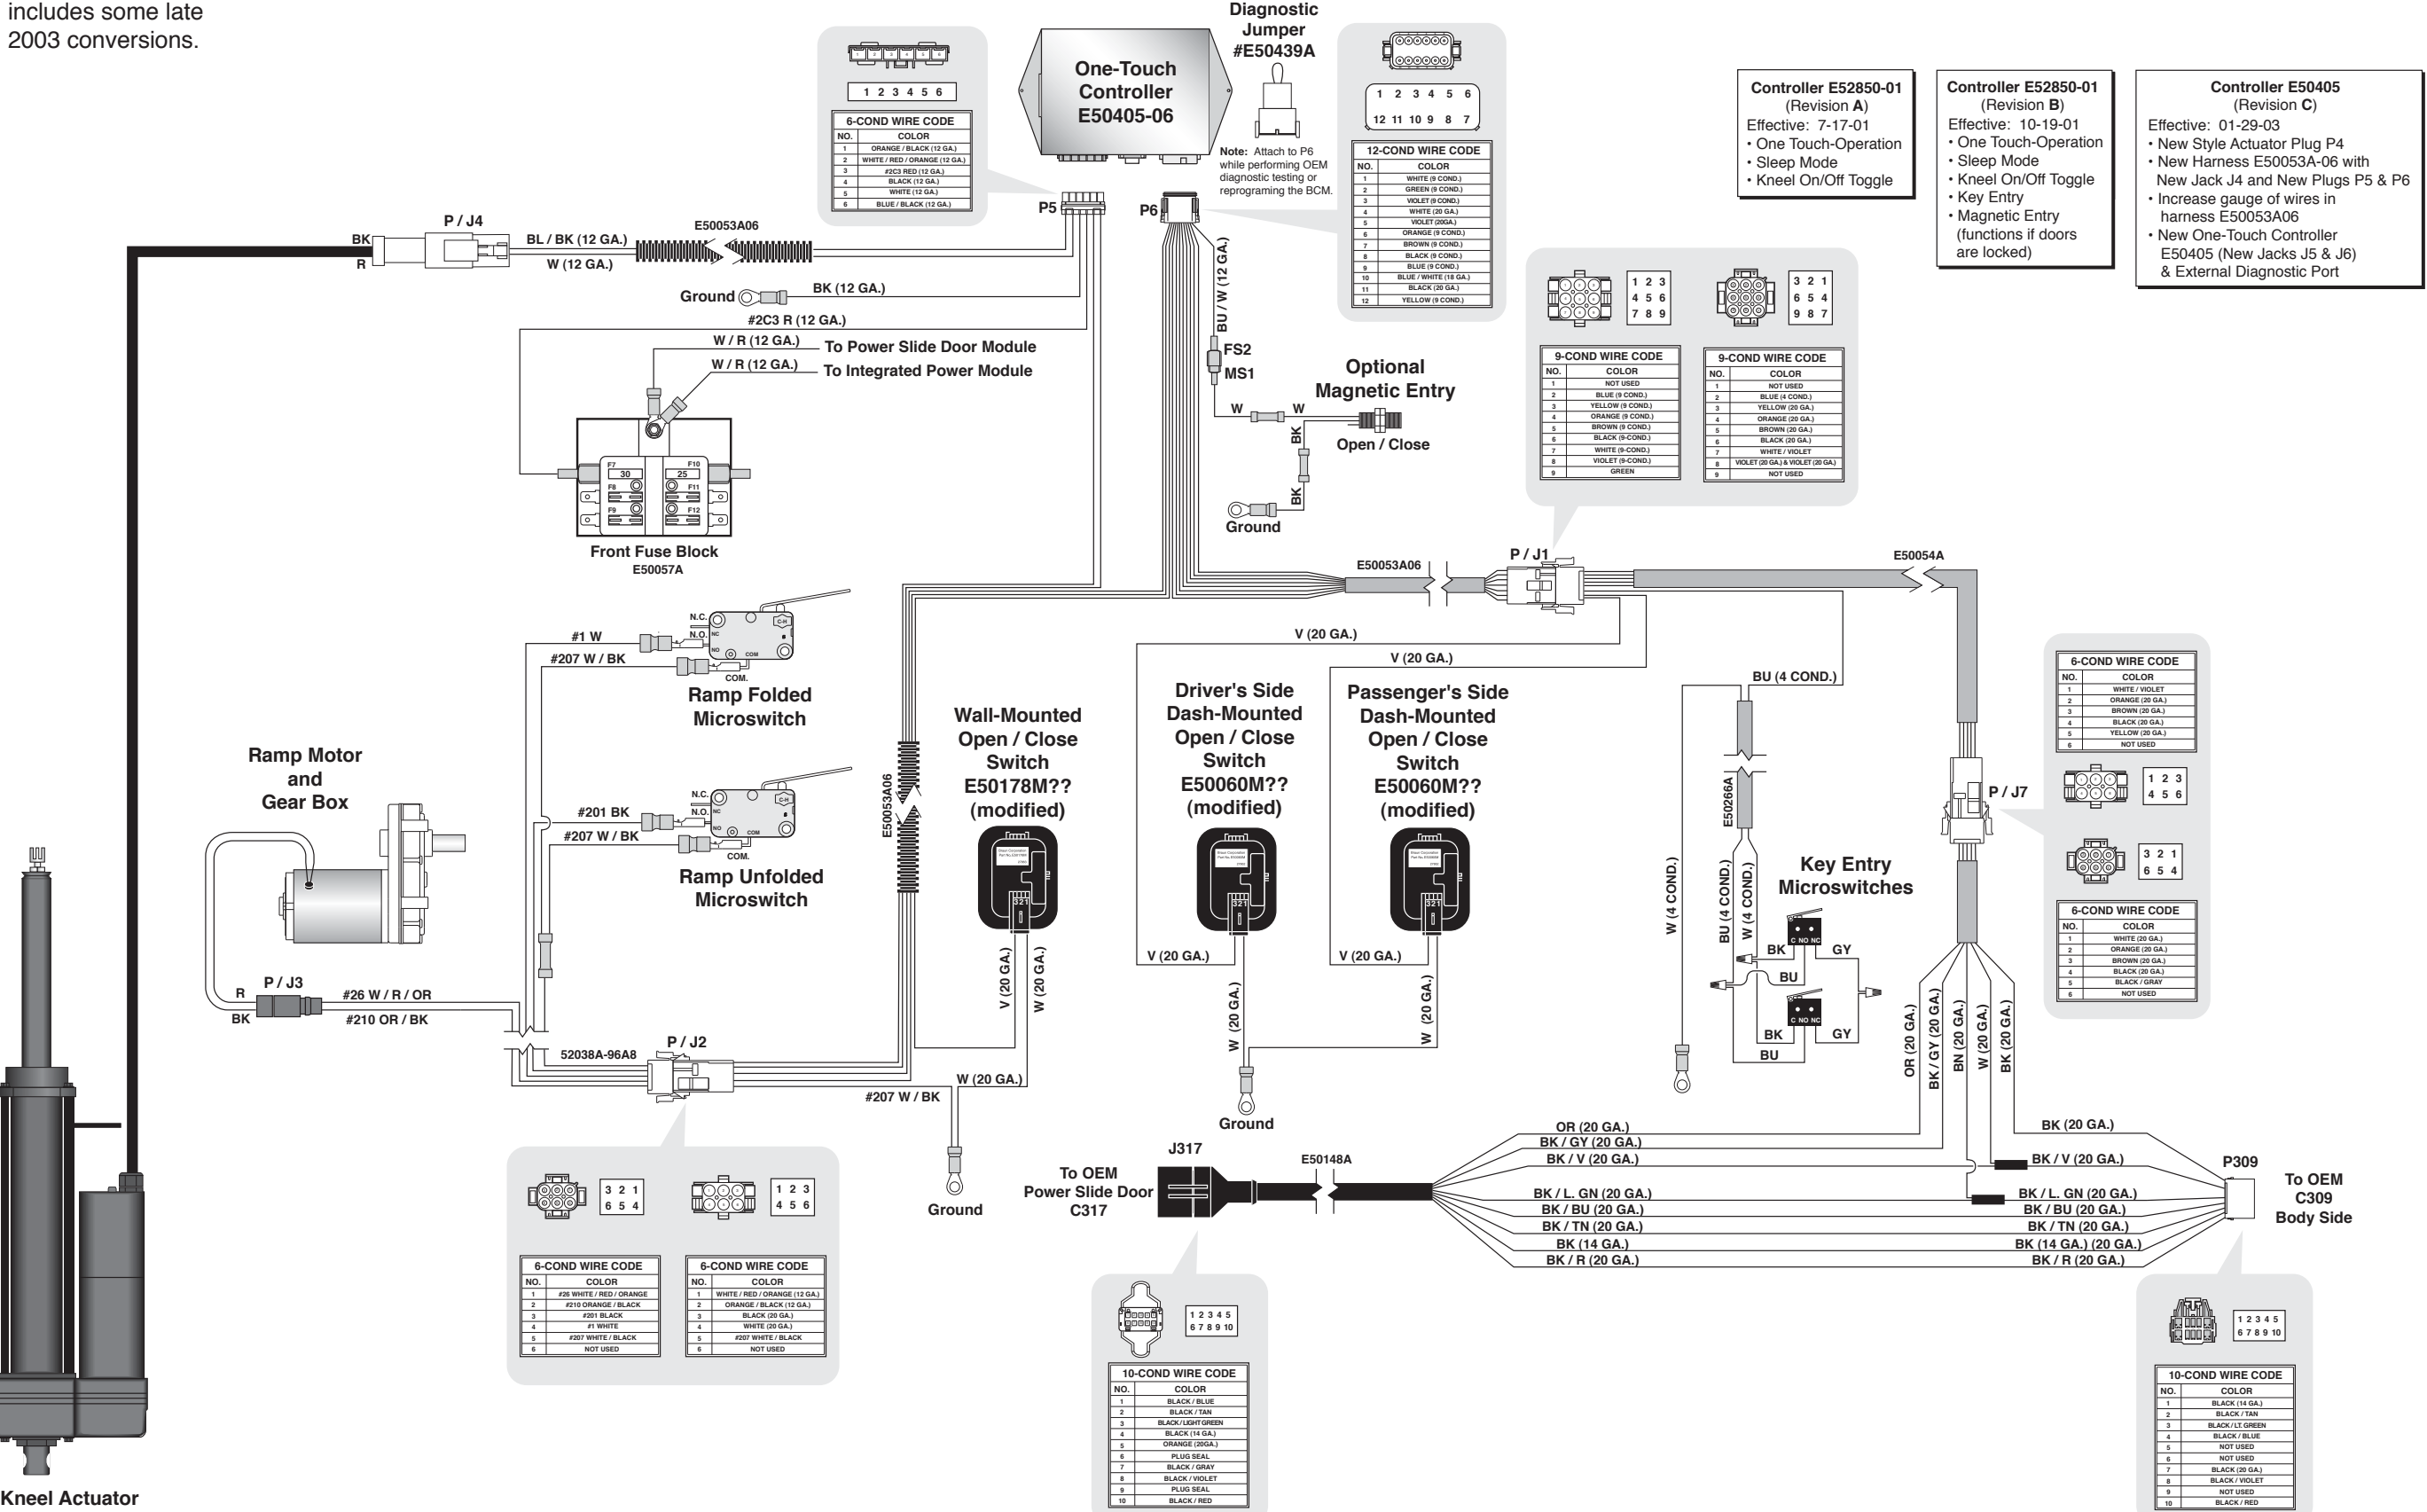

ELECTRICAL SCHEMATIC - MAIN - OAKTECH CONTROLLER

Note: Diagram includes some late 2003 conversions.

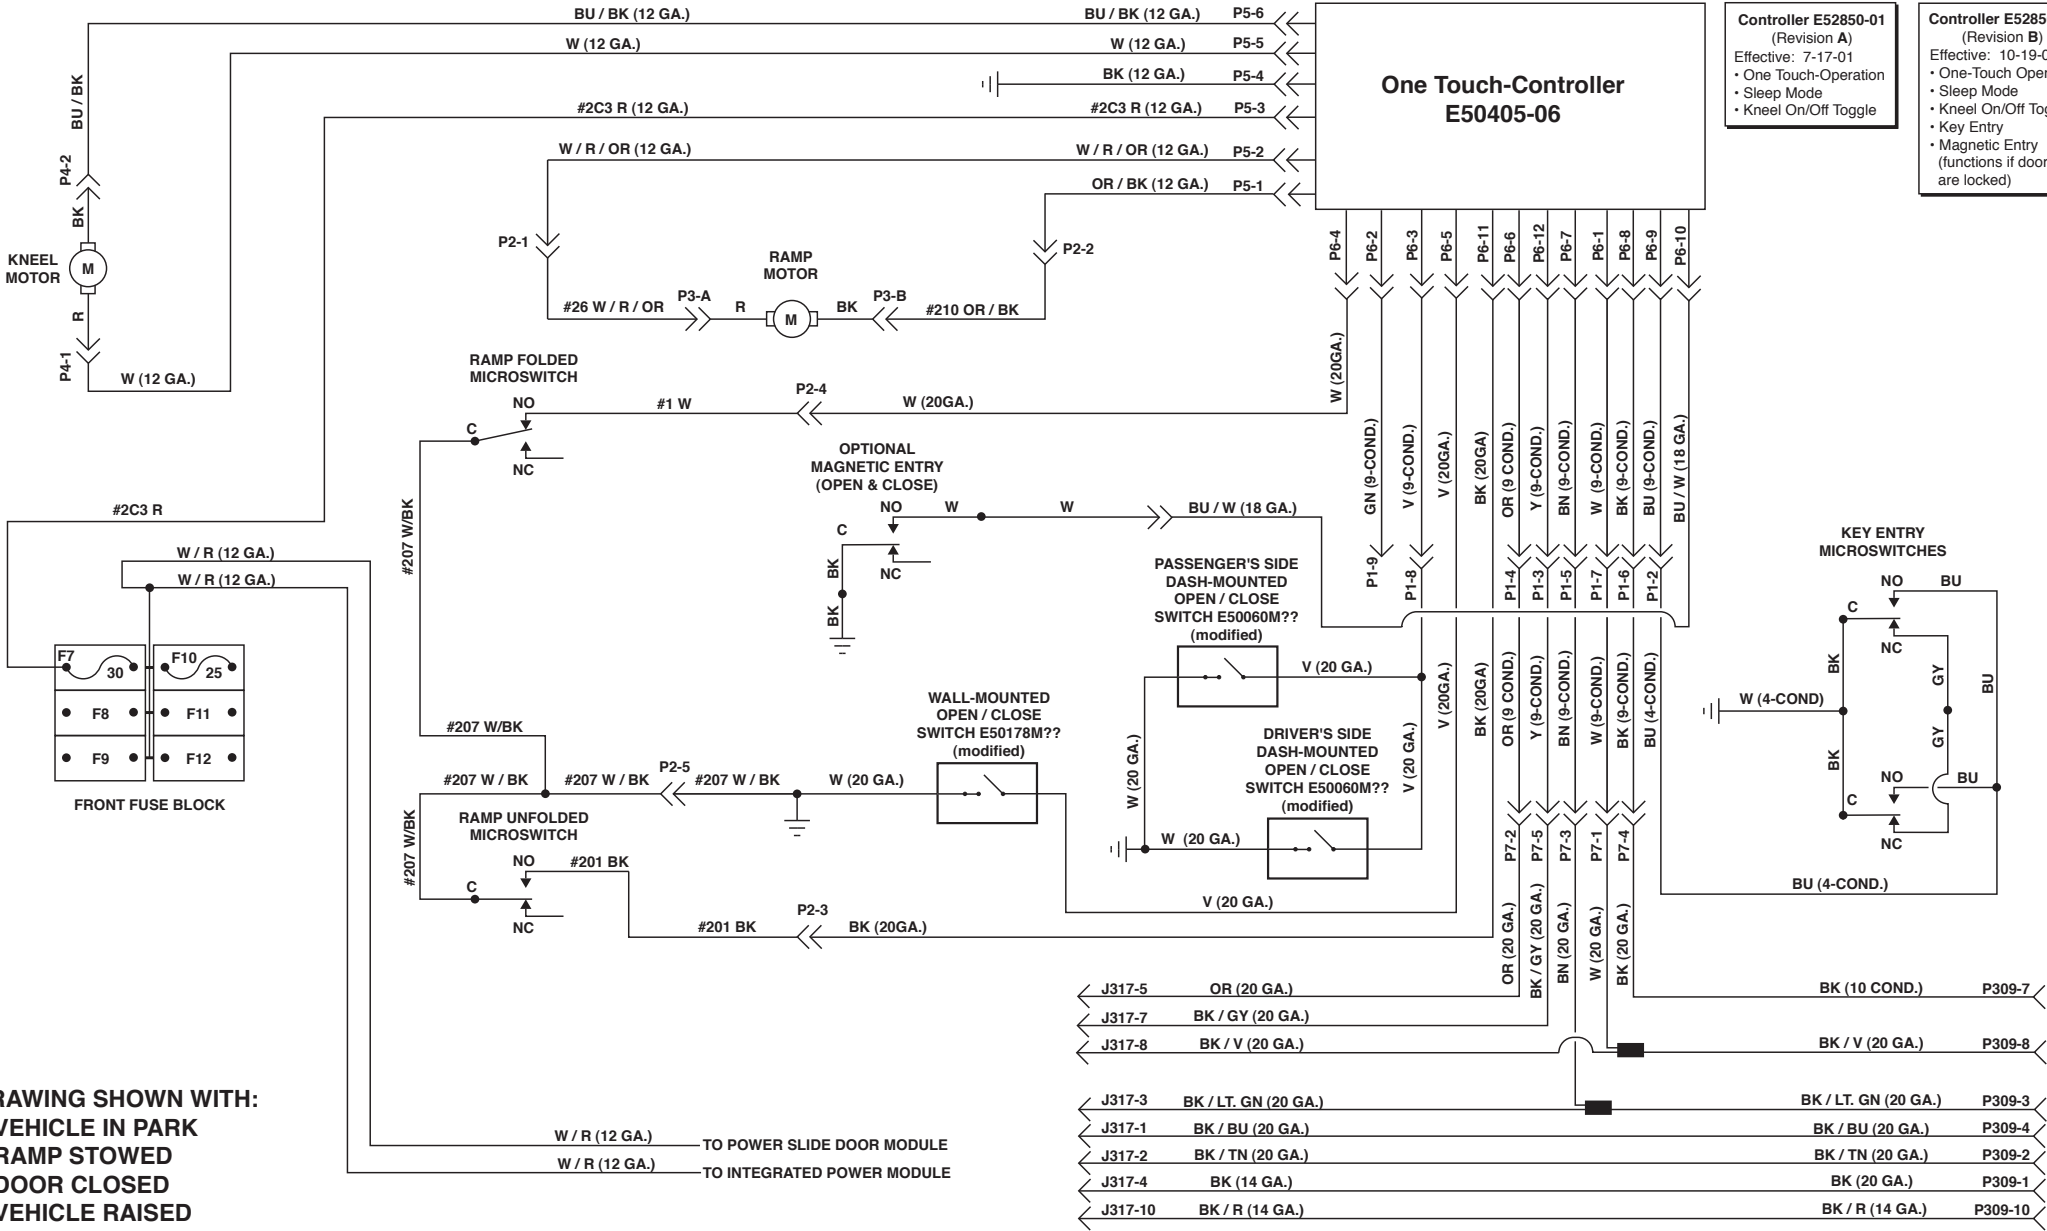

DRAWING SHOWN WITH:

- VEHICLE IN PARK
- RAMP STOWED
- DOOR CLOSED
- VEHICLE RAISED

Controller E52850-01
(Revision A)
Effective: 7-17-01

- One Touch-Operation
- Sleep Mode
- Kneel On/Off Toggle

Controller E52850-01
(Revision B)
Effective: 10-19-01

- One-Touch Operation
- Sleep Mode
- Kneel On/Off Toggle
- Key Entry
- Magnetic Entry (functions if doors are locked)

Controller E50405
(Revision C)
Effective: 01-29-03


- New Style Actuator Plug P4
- New Harness E50053A-06 with New Jack J4 and New Plugs P5 & P6
- Increase gauge of wires in harness E50053A06
- New One-Touch Controller E50405 (New Jacks J5 & J6) & External Diagnostic Port

DESCRIPTION	SYMBOL
BATTERY	
CHASSIS GROUND	
CIRCUIT BREAKER	
CONNECTORS	
FUSE	
JUNCTION	
MOTOR	
SWITCH	
MICROSWITCH	




Unfold for:
Wiring Diagram
Front Seat
Driver Power w/ Memory
Passenger Power w/o Memory

ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER POWER w/ MEMORY - PASSENGER POWER w/o MEMORY

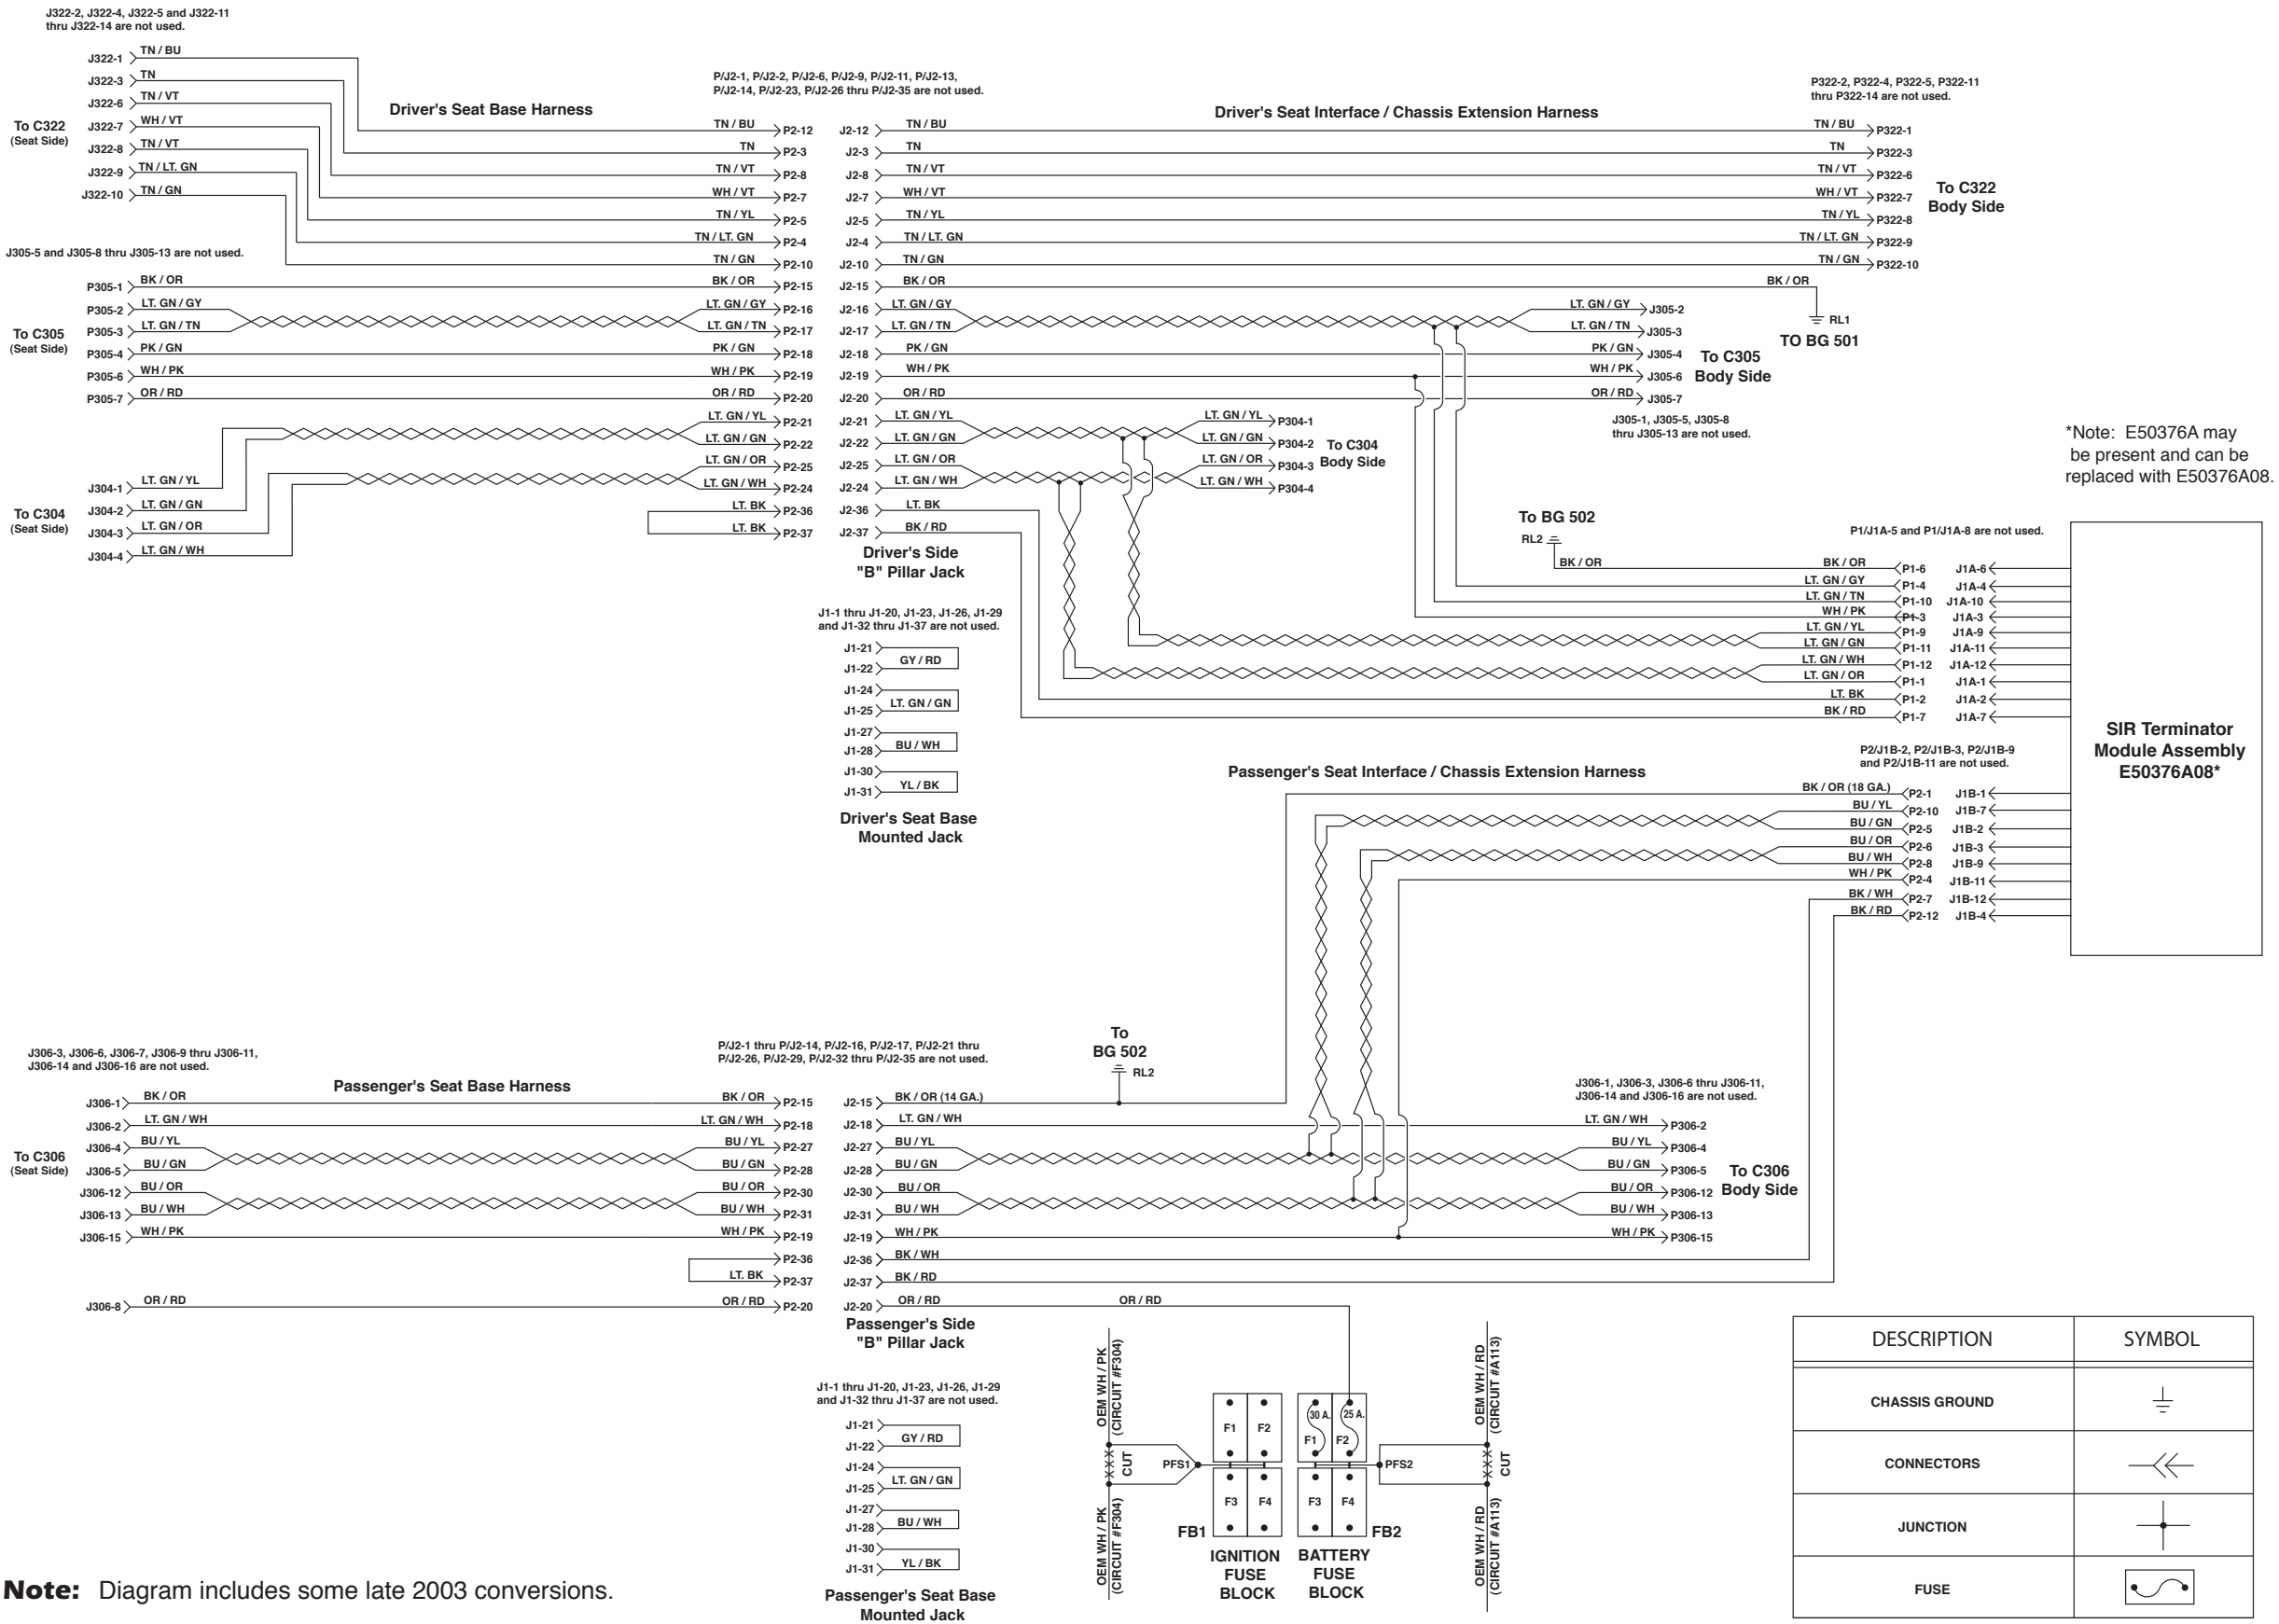


WIRING DIAGRAM - FRONT SEAT - DRIVER POWER w/o MEMORY - PASSENGER w/o POWER

Note: Diagram includes some late 2003 conversions.

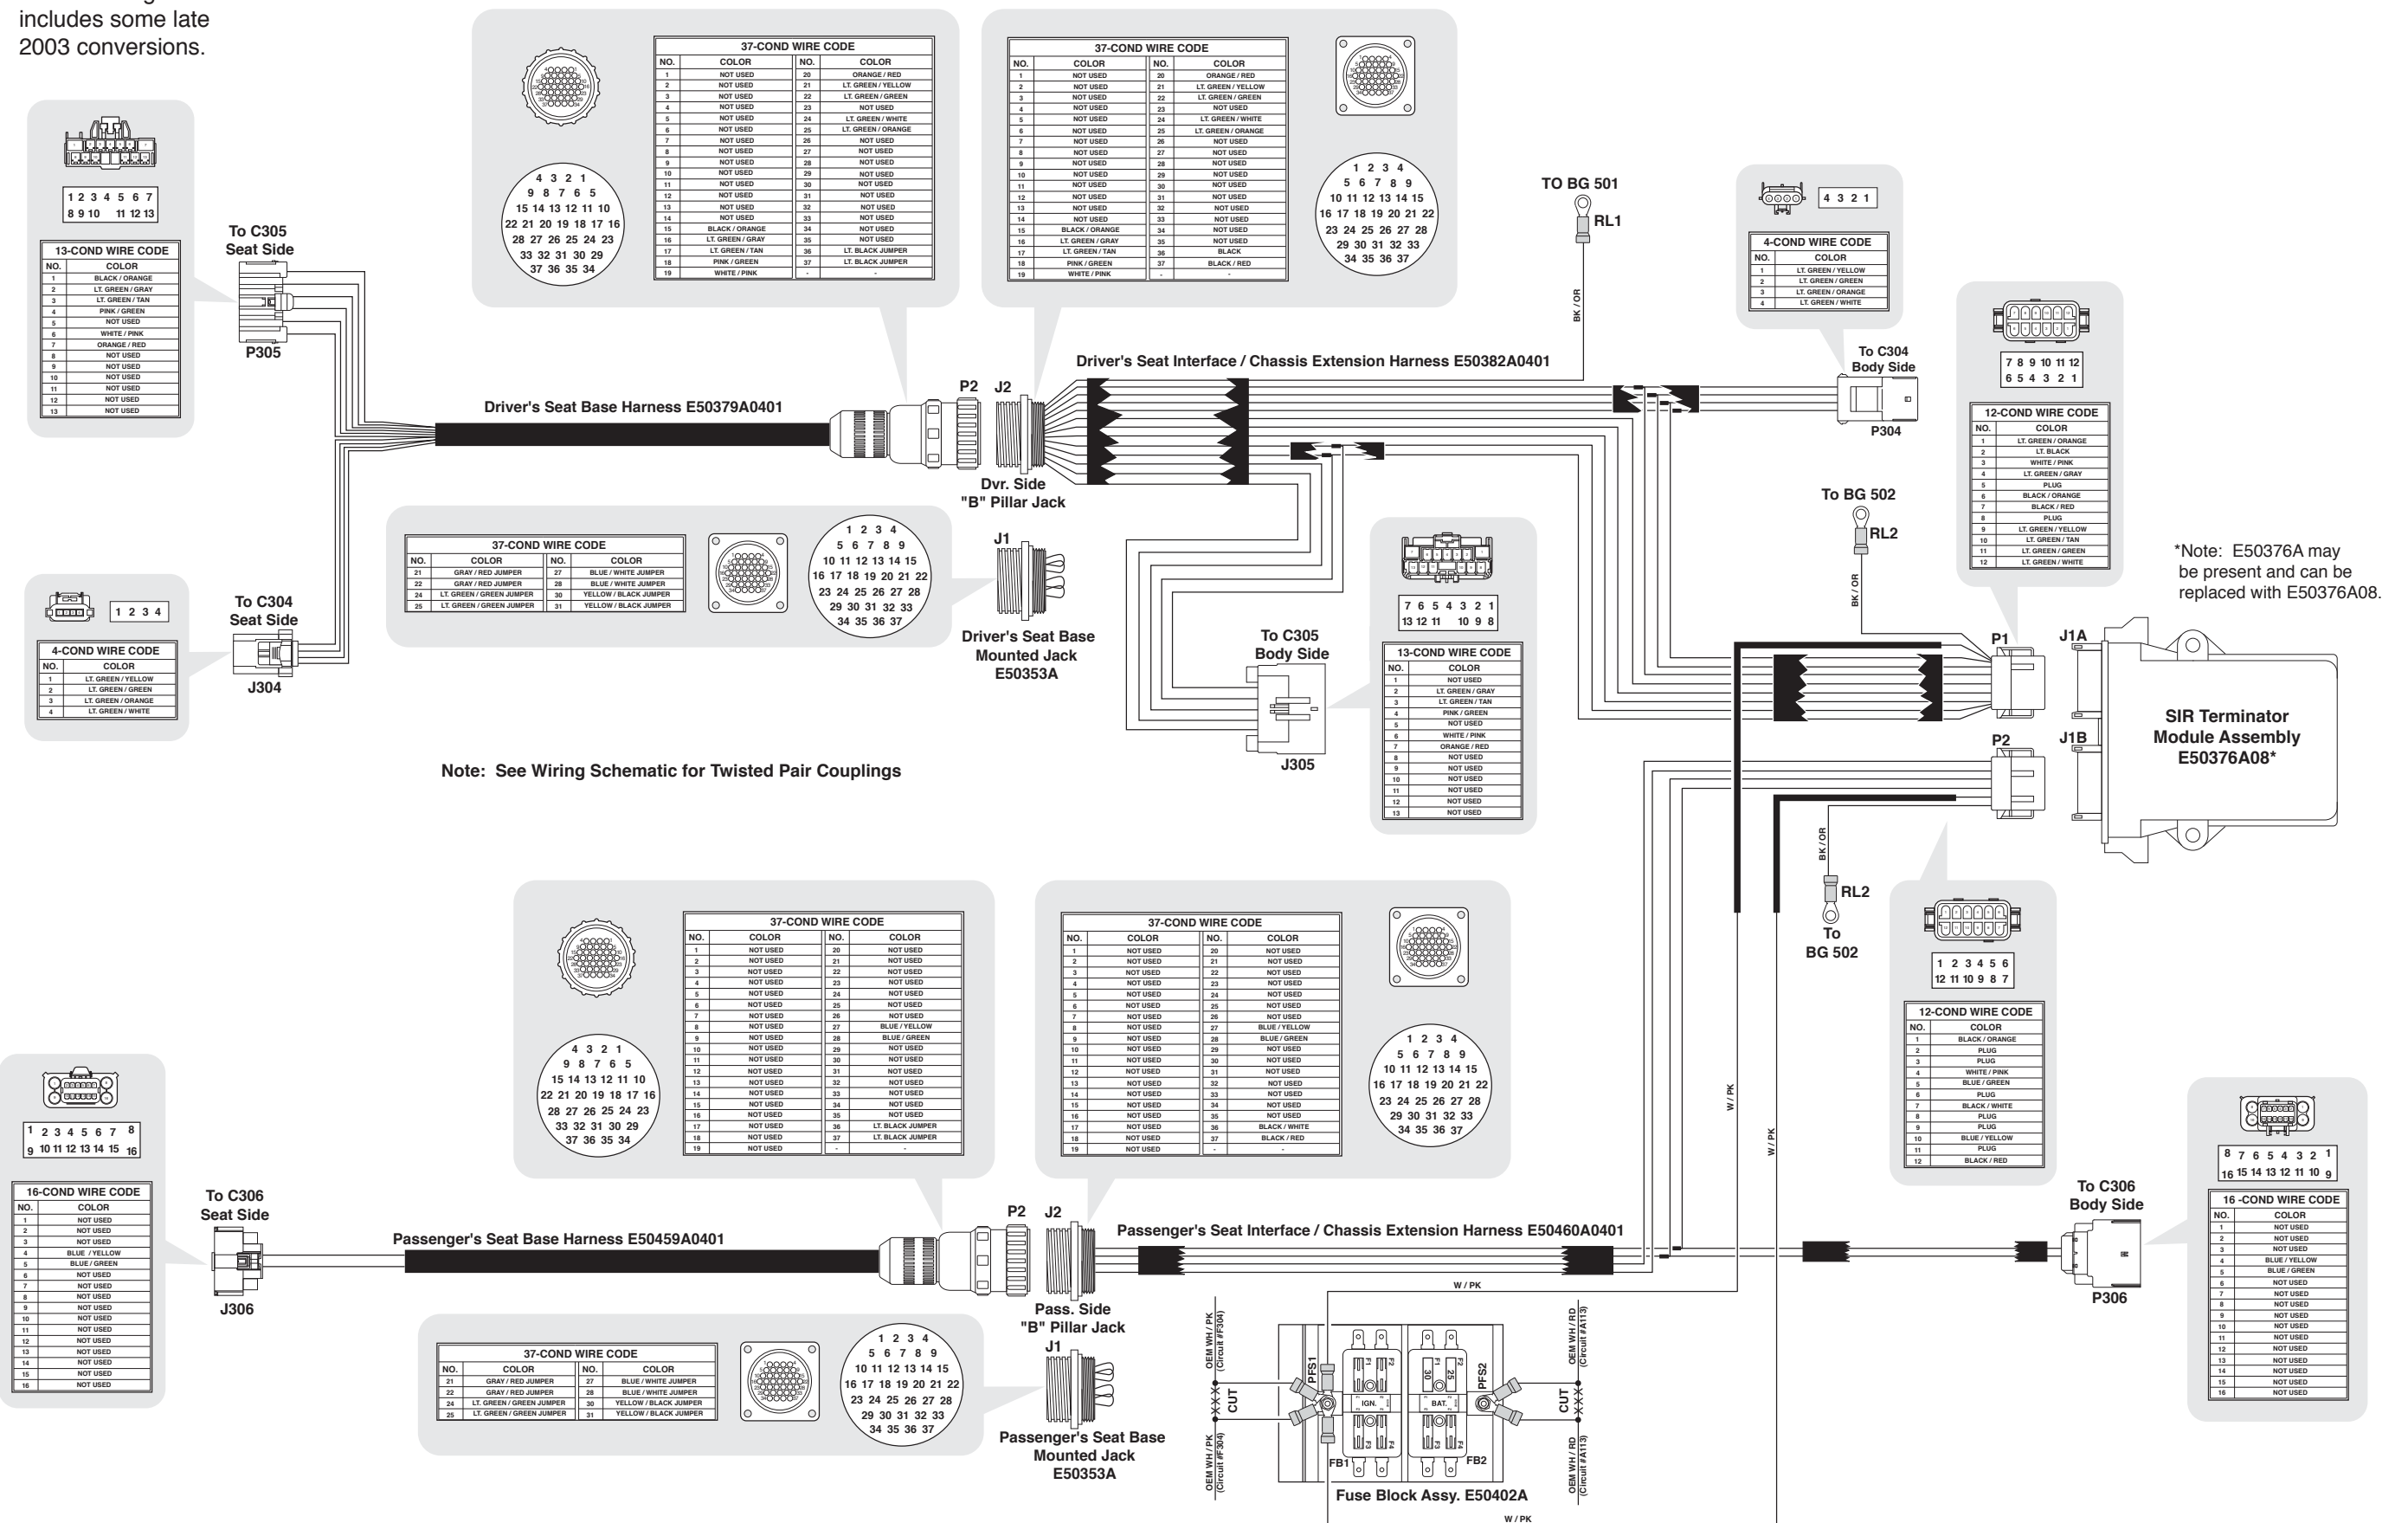

Unfold for:
Wiring Diagram
Front Seat
Driver Power w/o Memory
passenger w/o Power


ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER POWER w/o MEMORY - PASSENGER w/o POWER

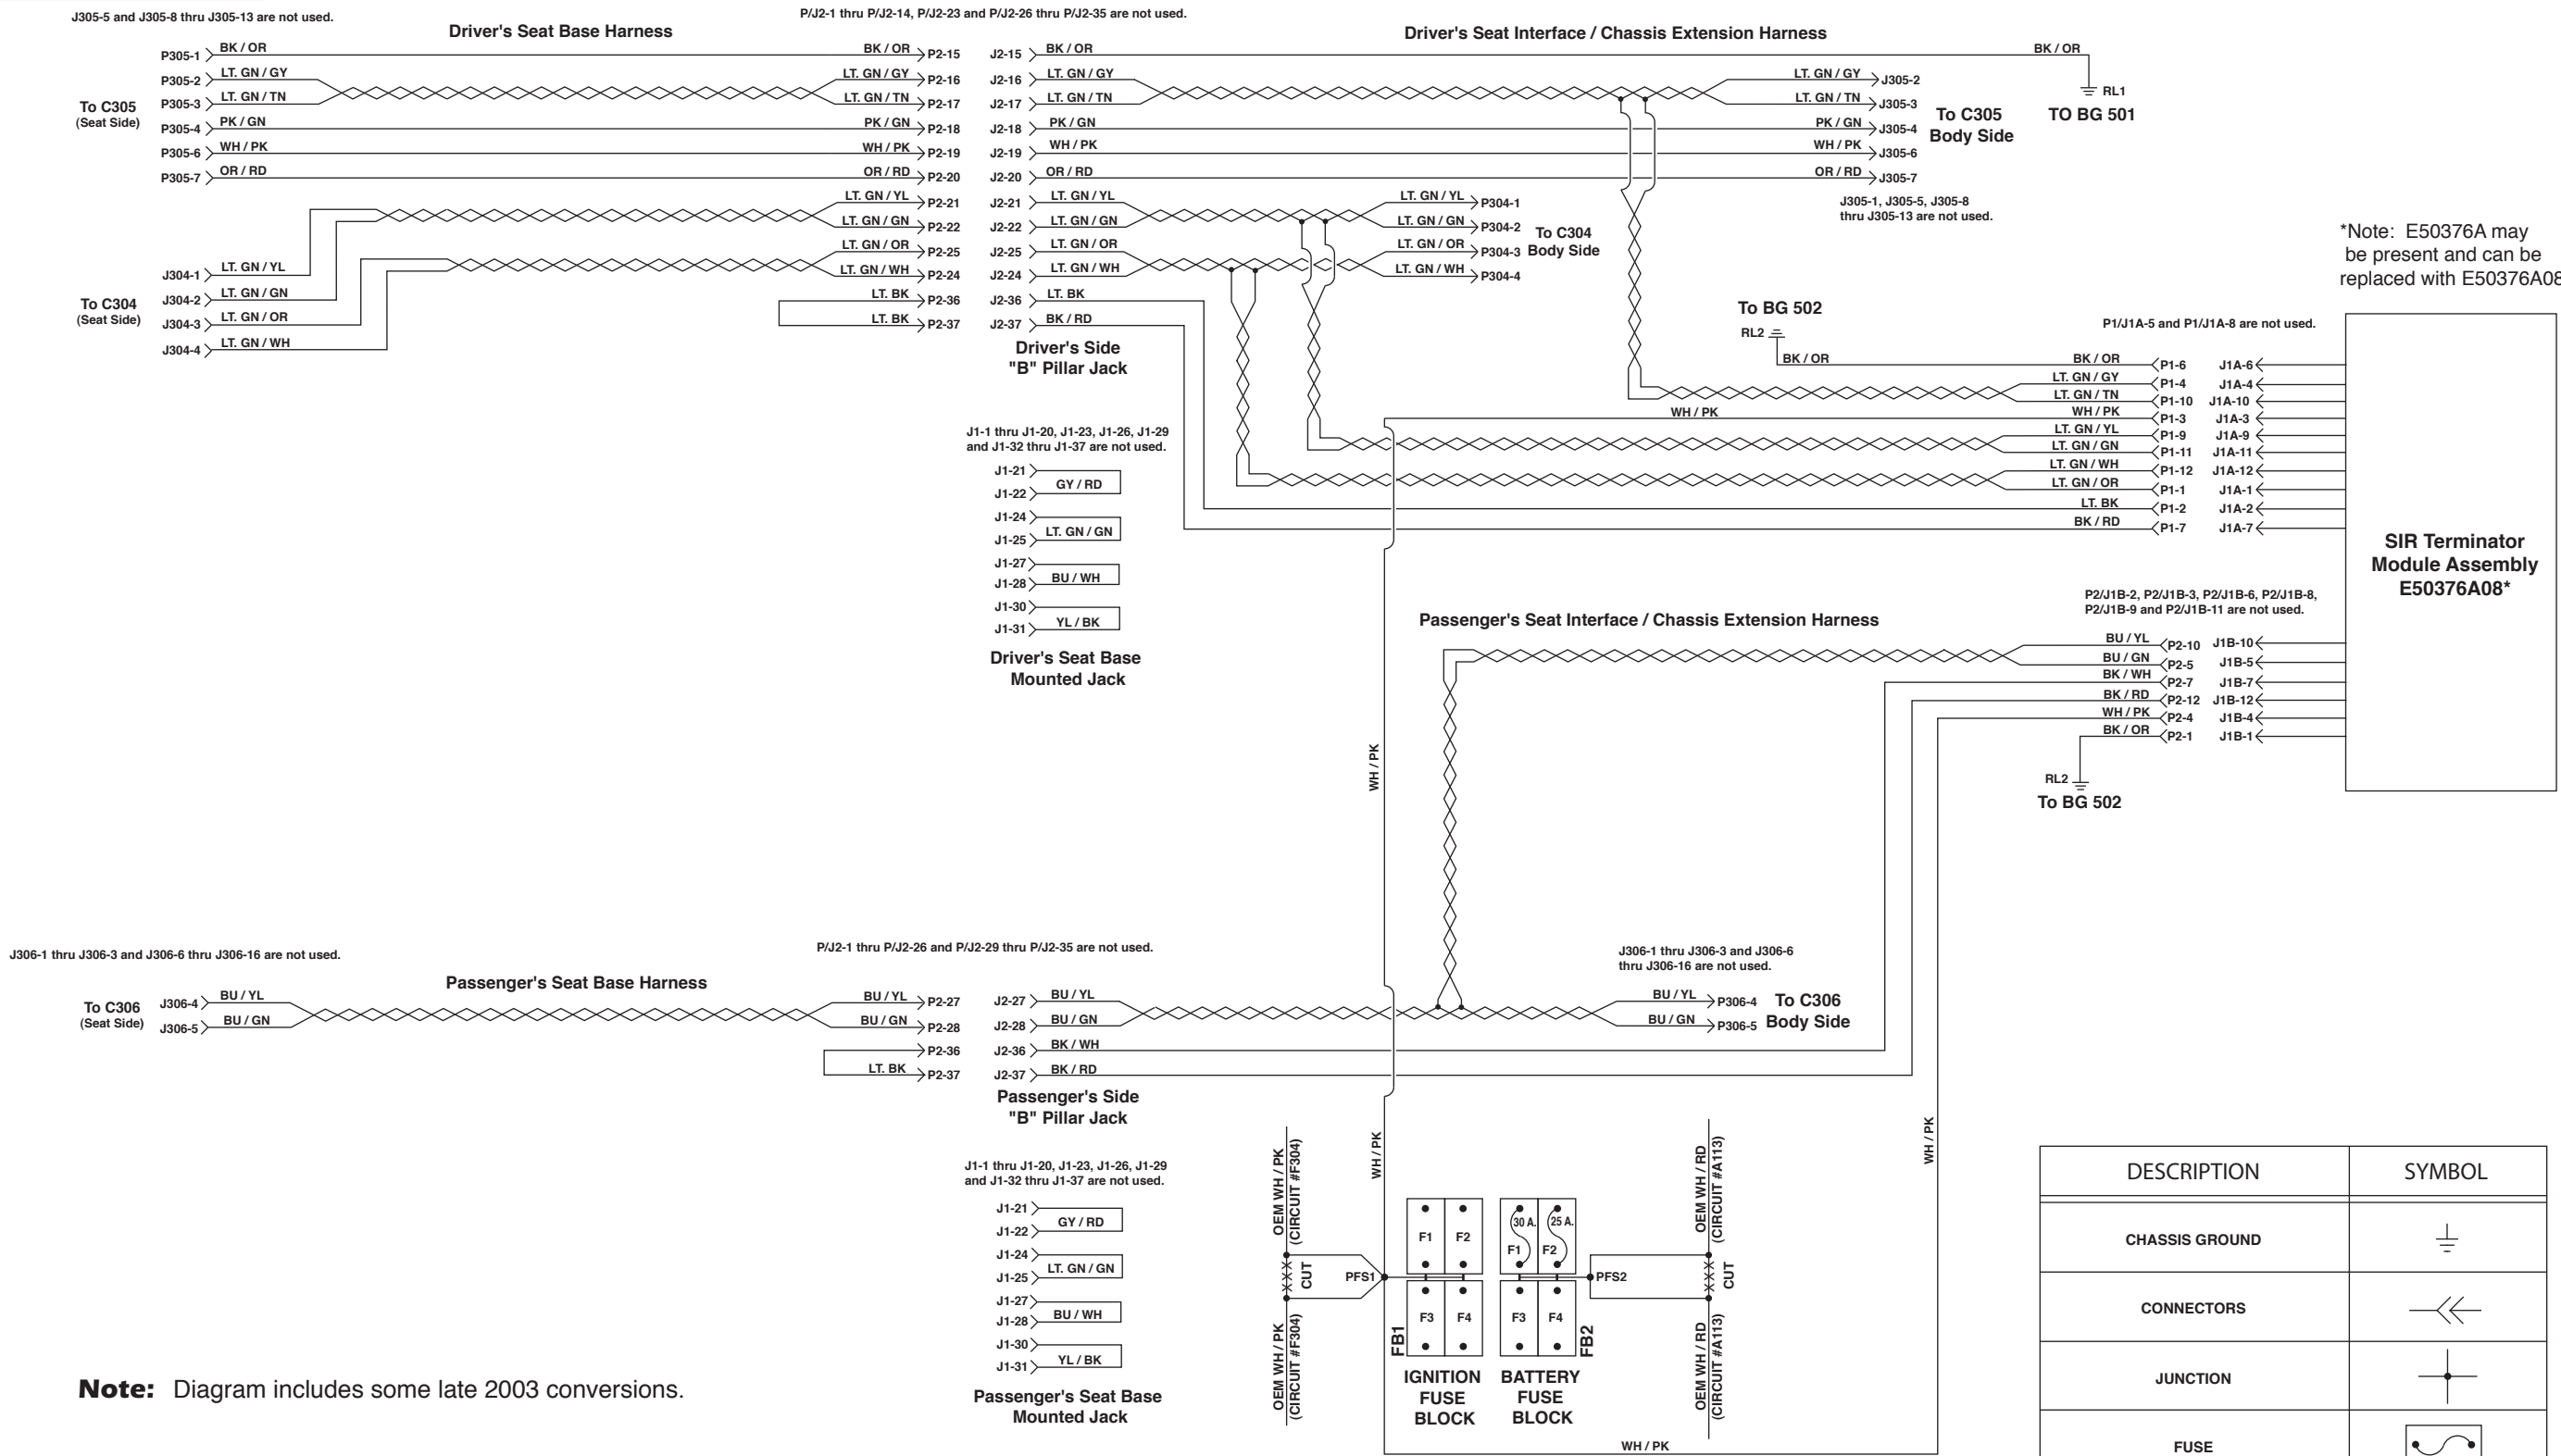

DESCRIPTION	SYMBOL
CHASSIS GROUND	
CONNECTORS	
JUNCTION	
FUSE	


WIRING DIAGRAM - FRONT SEAT - DRIVER POWER w/o MEMORY - PASSENGER POWER w/o MEMORY

Note: Diagram includes some late 2003 conversions.

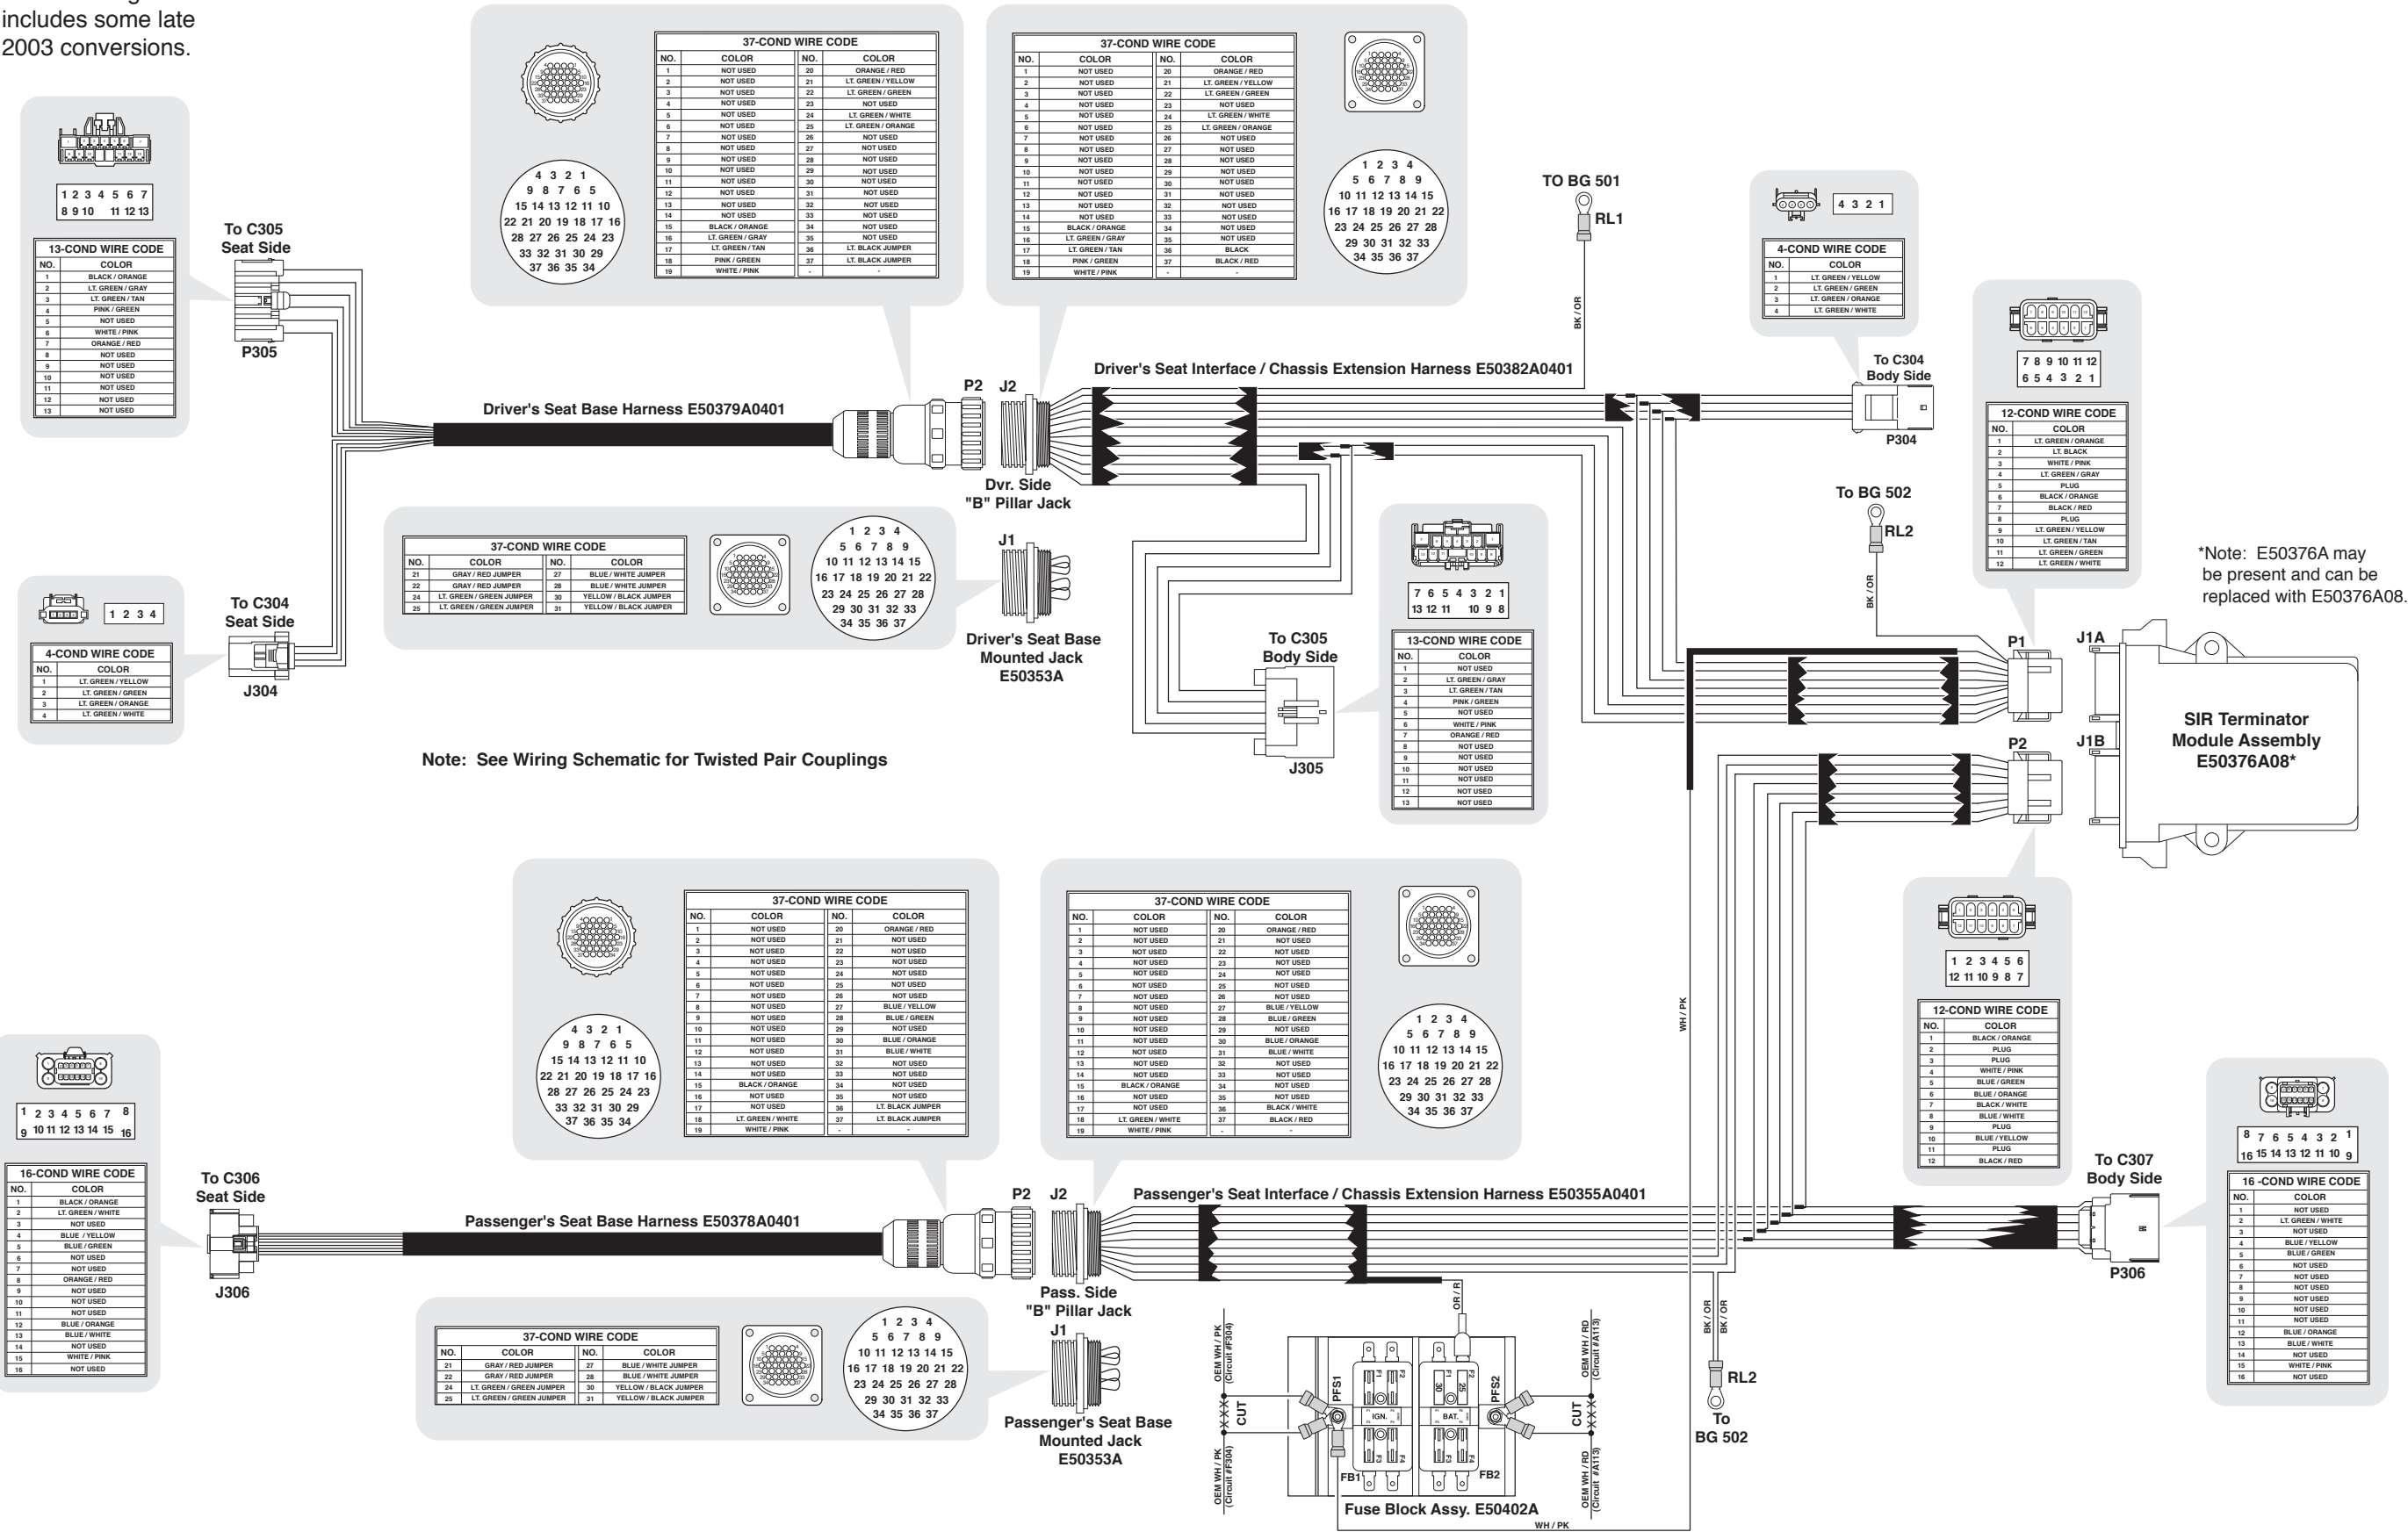


Unfold for:
Wiring Diagram
Front Seat
Driver Power w/o Memory
Passenger Power w/o Memory

ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER POWER w/o MEMORY - PASSENGER POWER w/o MEMORY

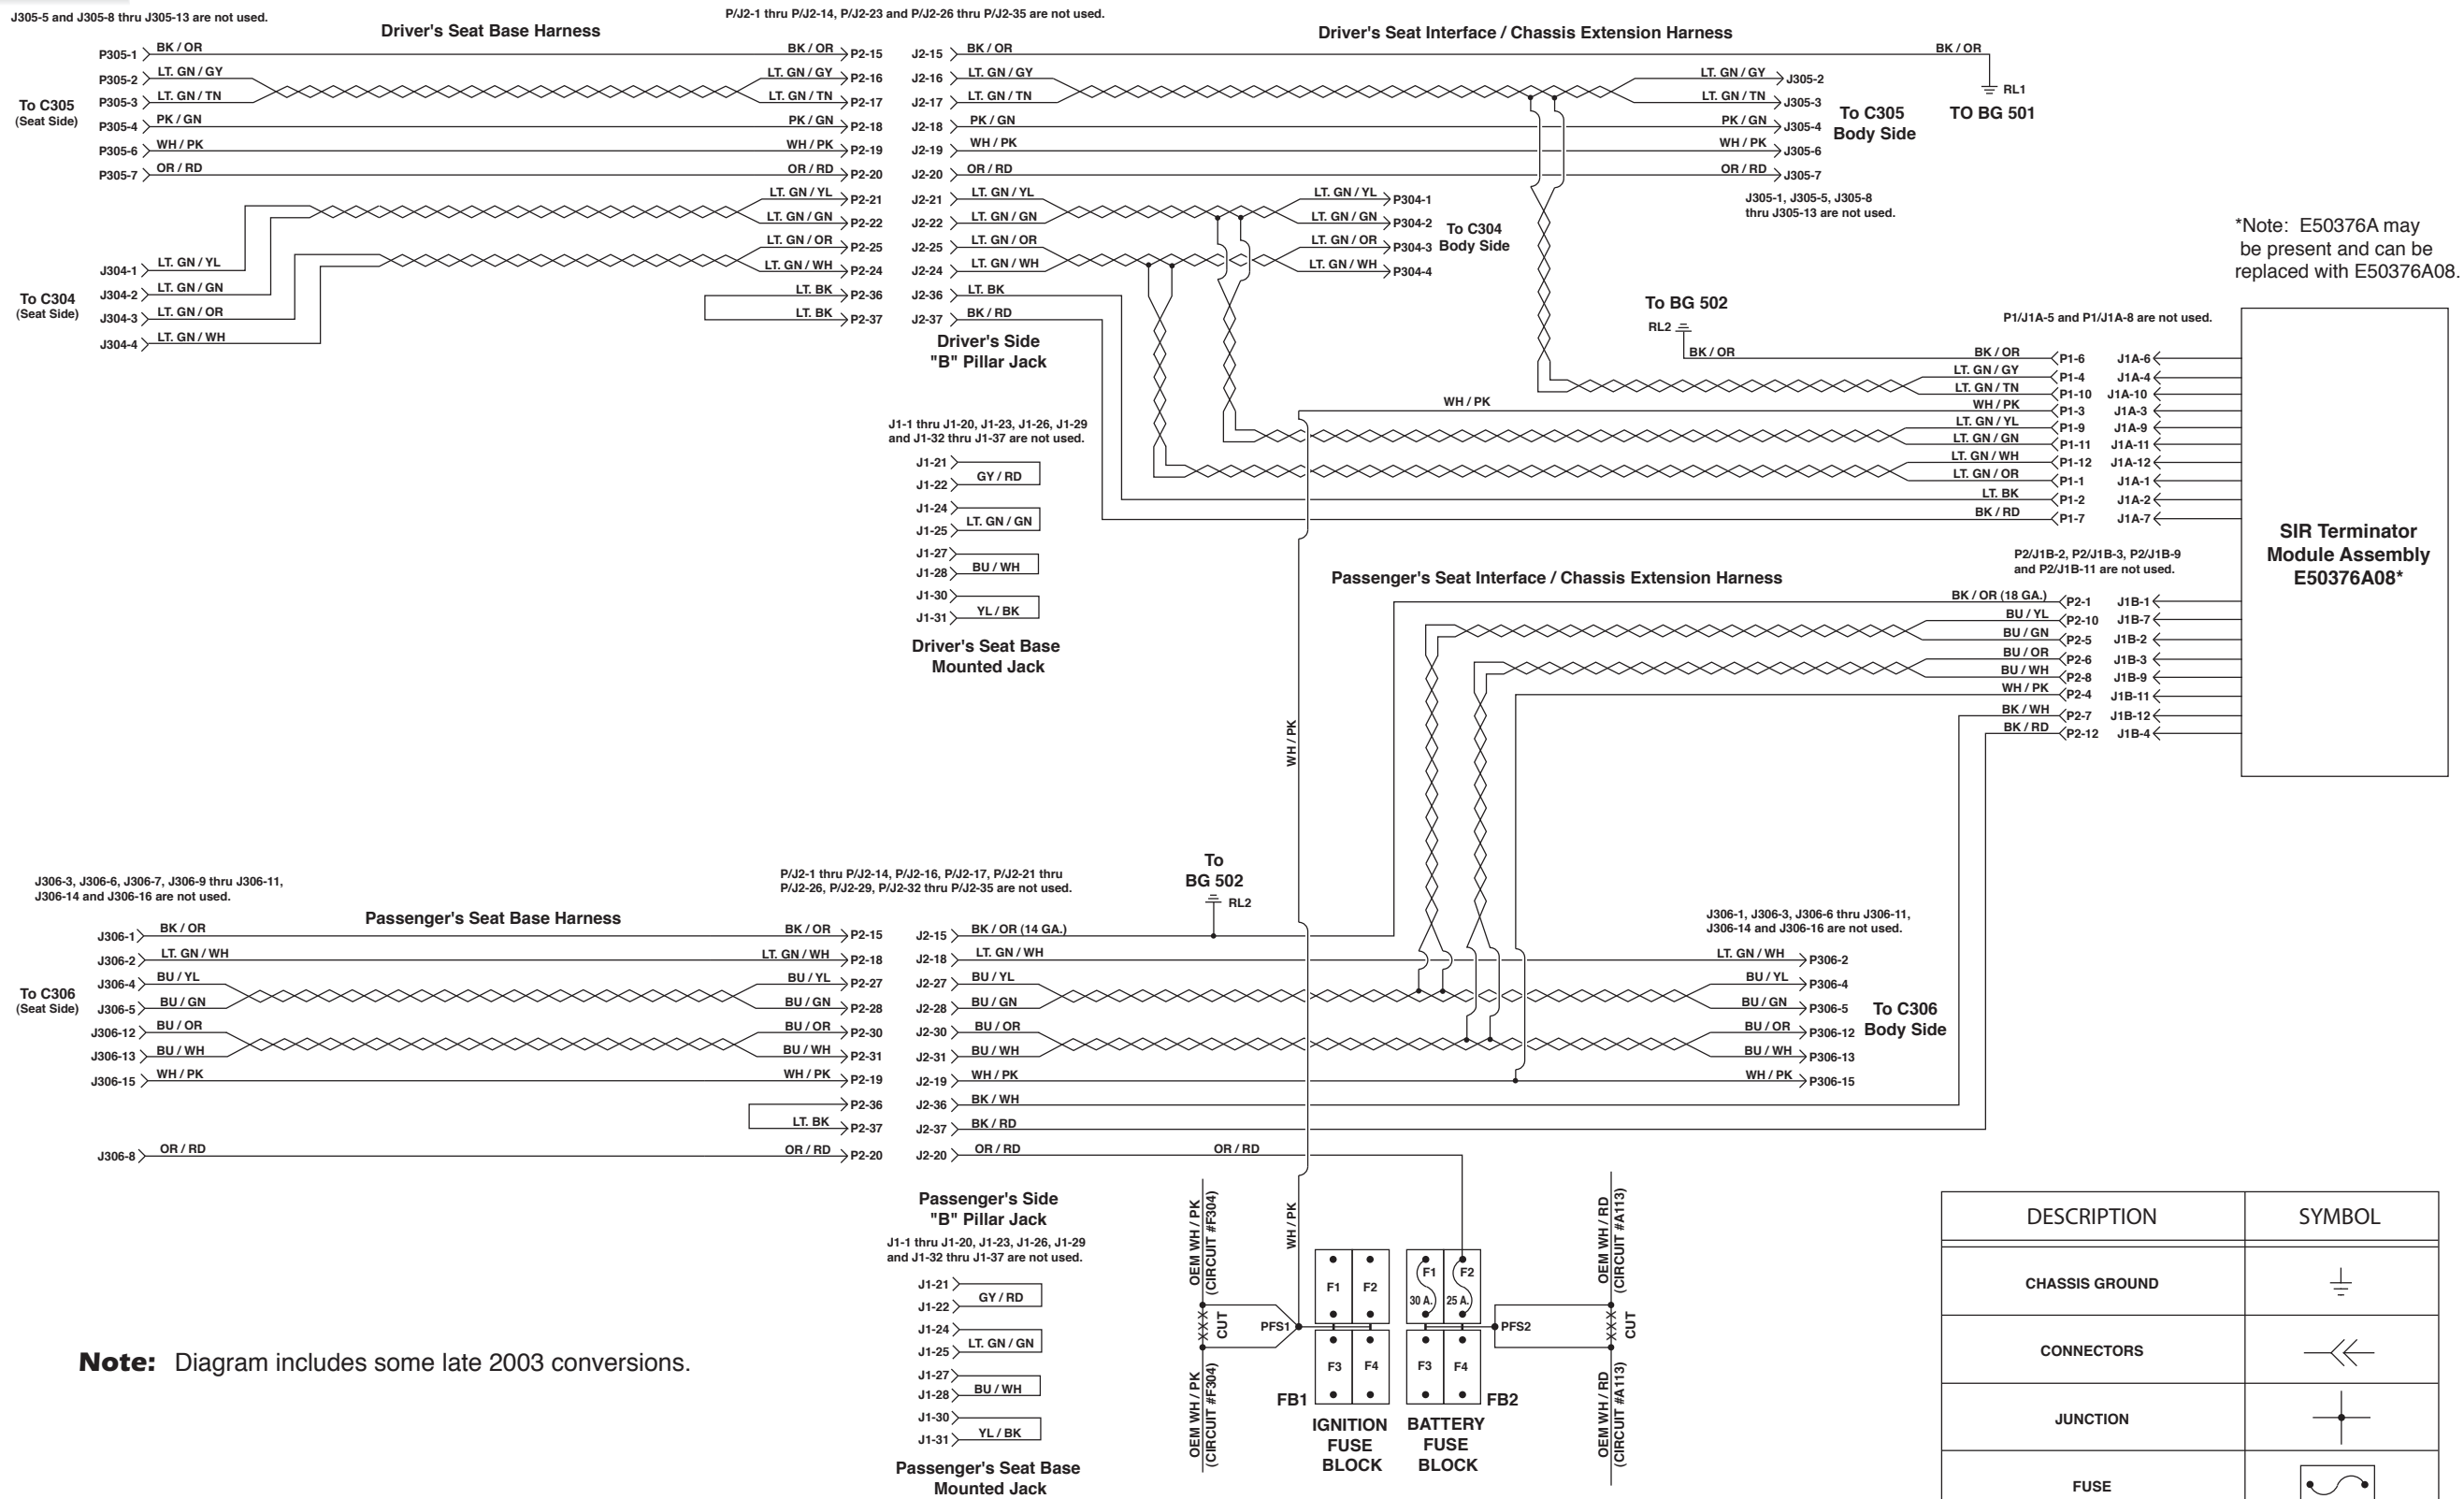

WIRING DIAGRAM - FRONT SEAT - DRIVER w/o POWER - PASSENGER w/o POWER

Note: Diagram includes some late 2003 conversions.

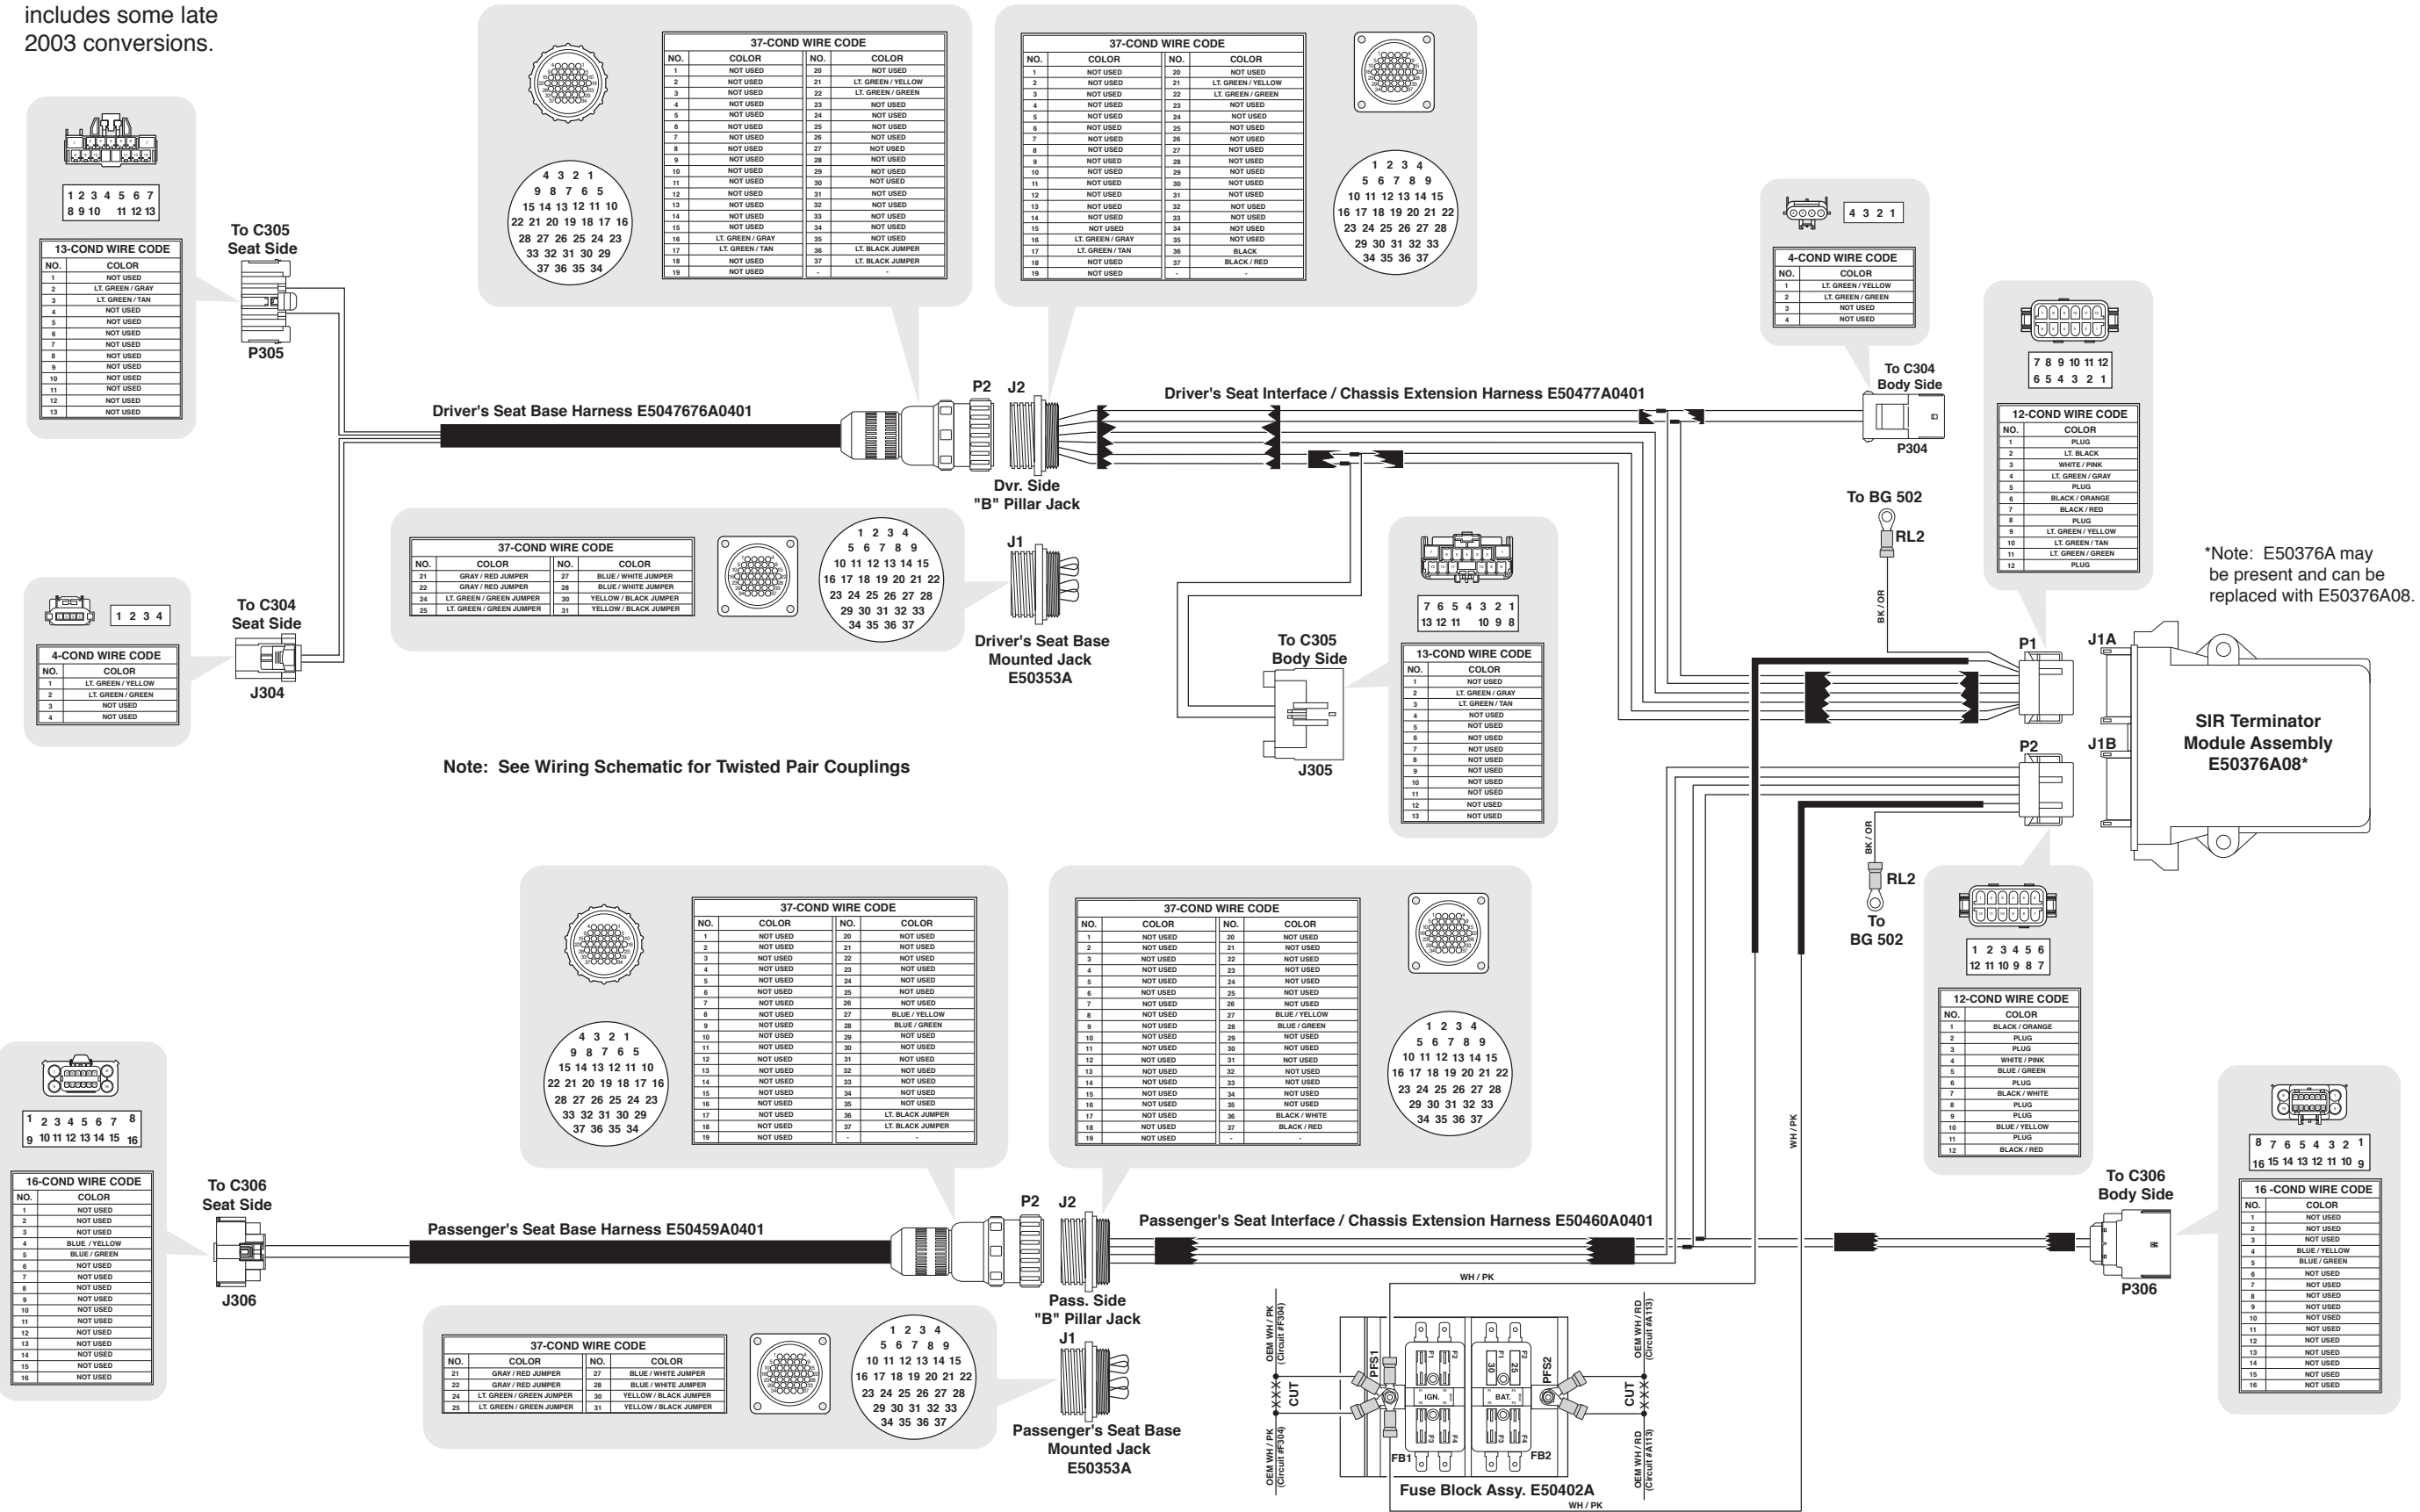


ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER w/o POWER - PASSENGER w/o POWER



WIRING DIAGRAM - MAIN - BRAUN CONTROLLER


Note: Includes up to "0602" conversions.

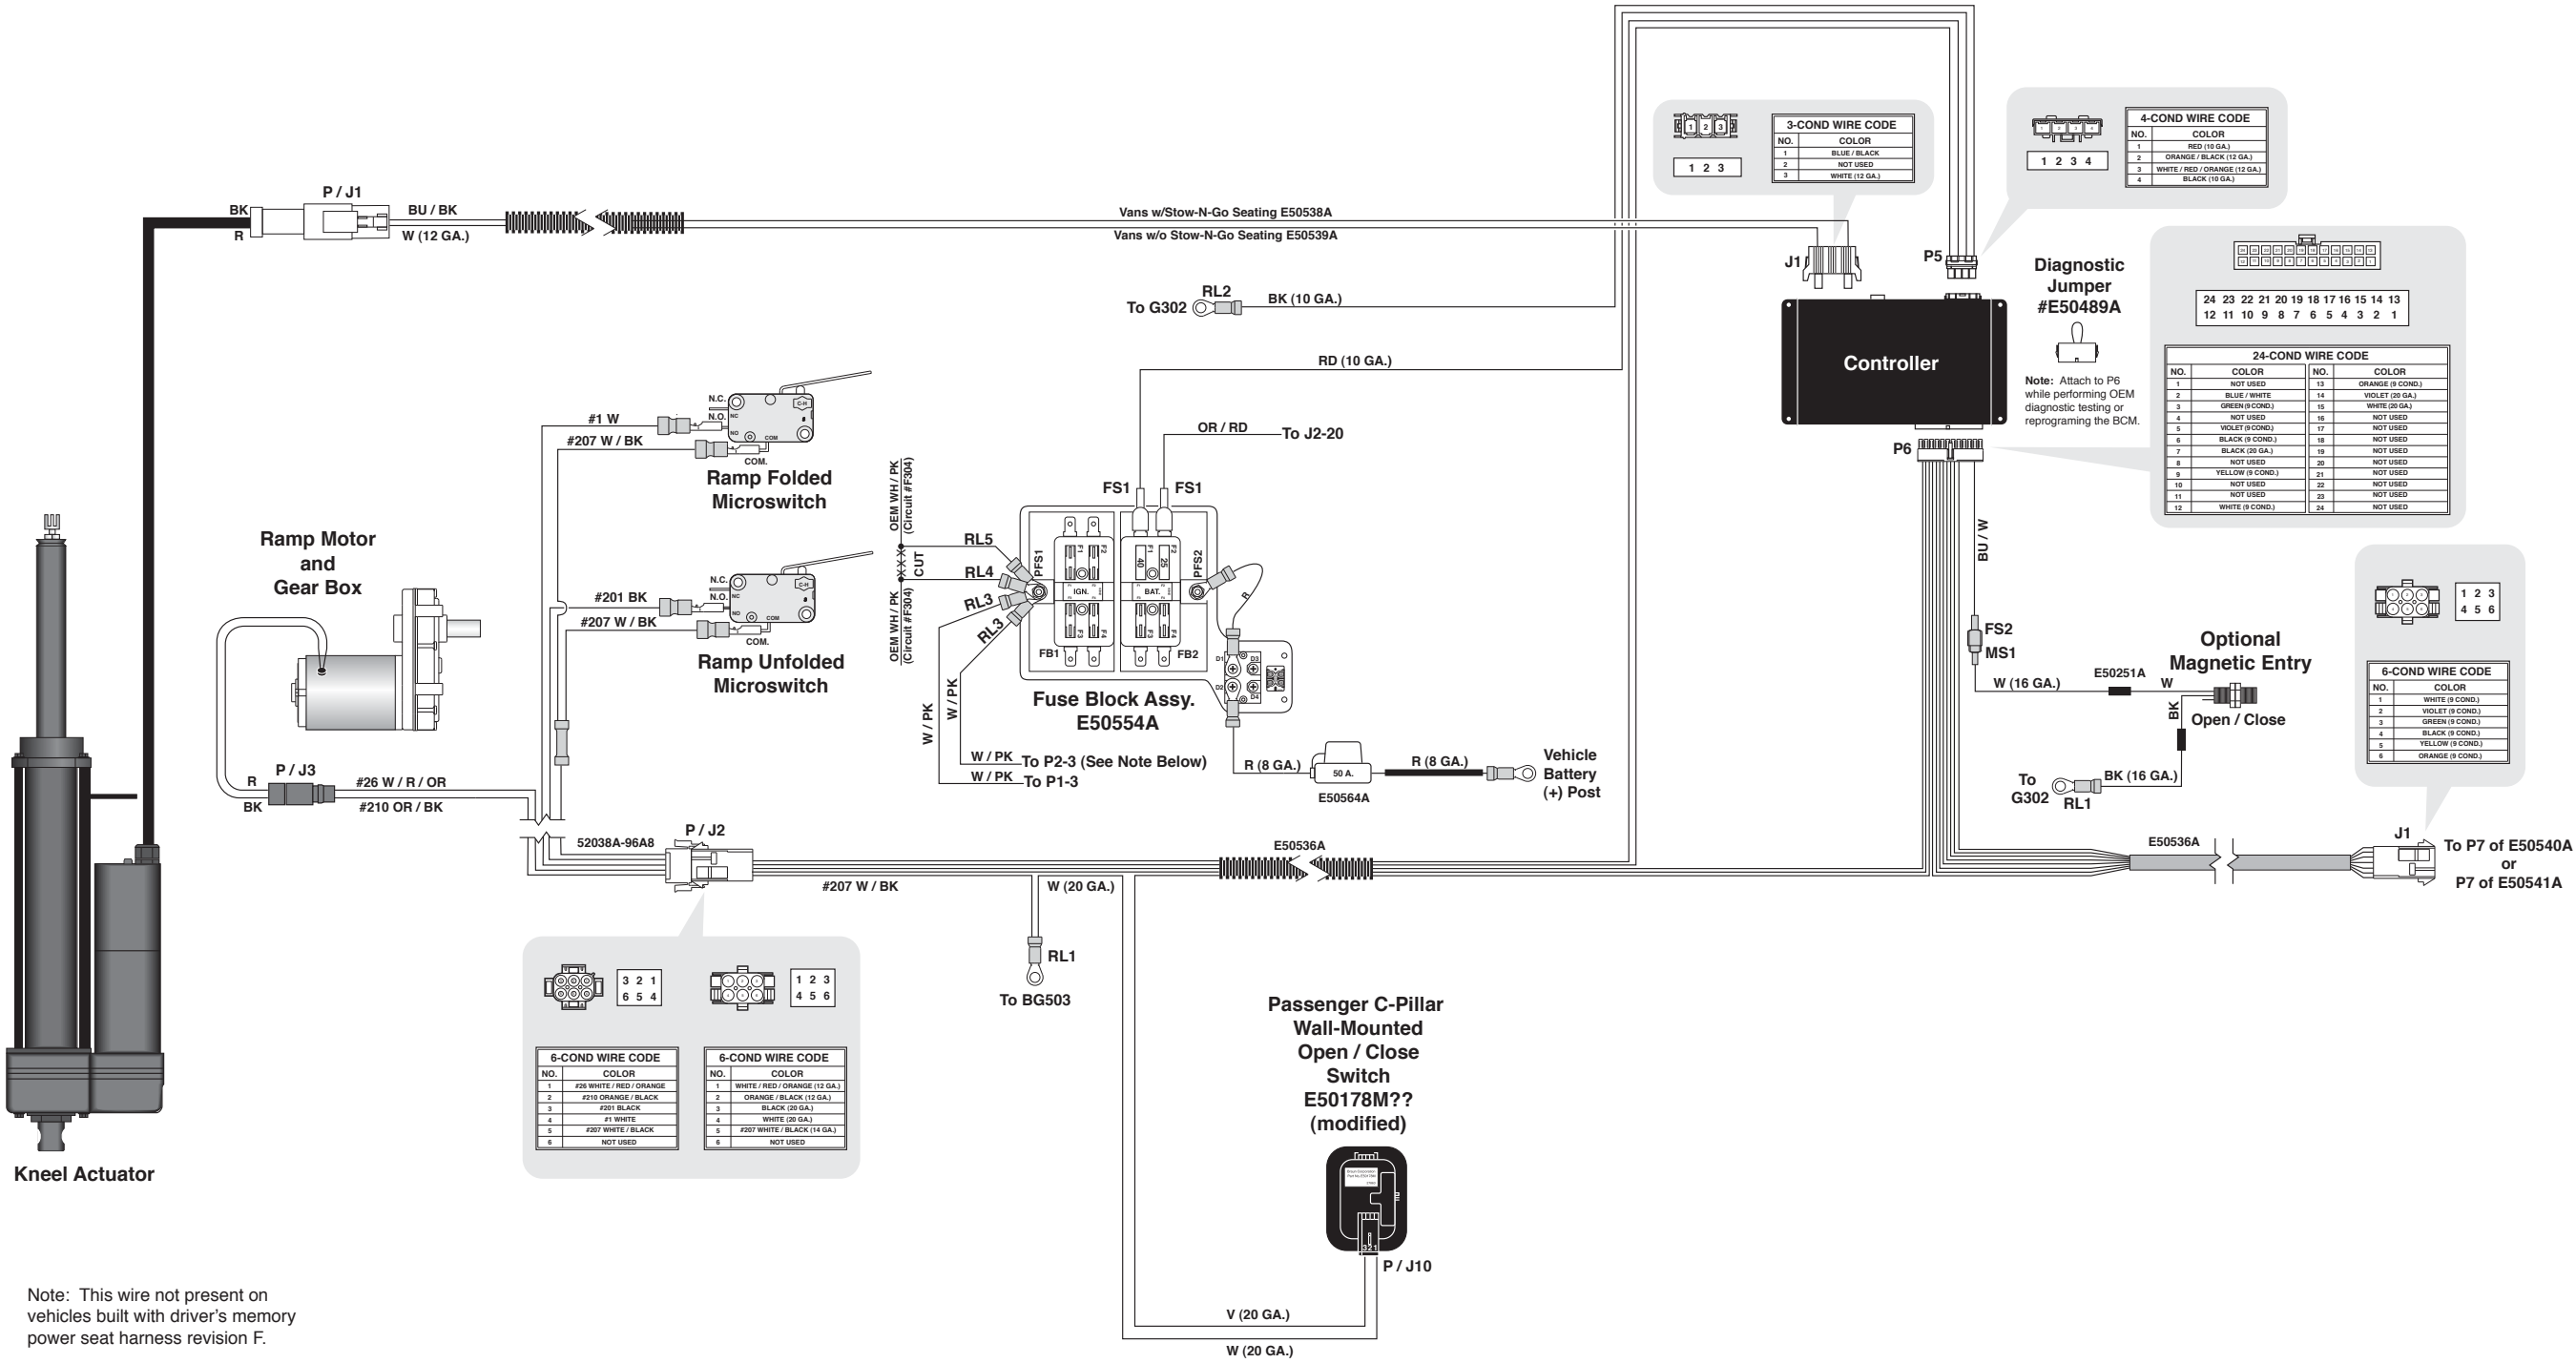


Note: This wire not present on vehicles built with driver's memory power seat harness revision F.

WIRING DIAGRAM - DASH MOUNTED SWITCHES - w/ SIDE AIR BAGS - w/o SIDE AIR BAGS

Note: Includes up to "0602" conversions.

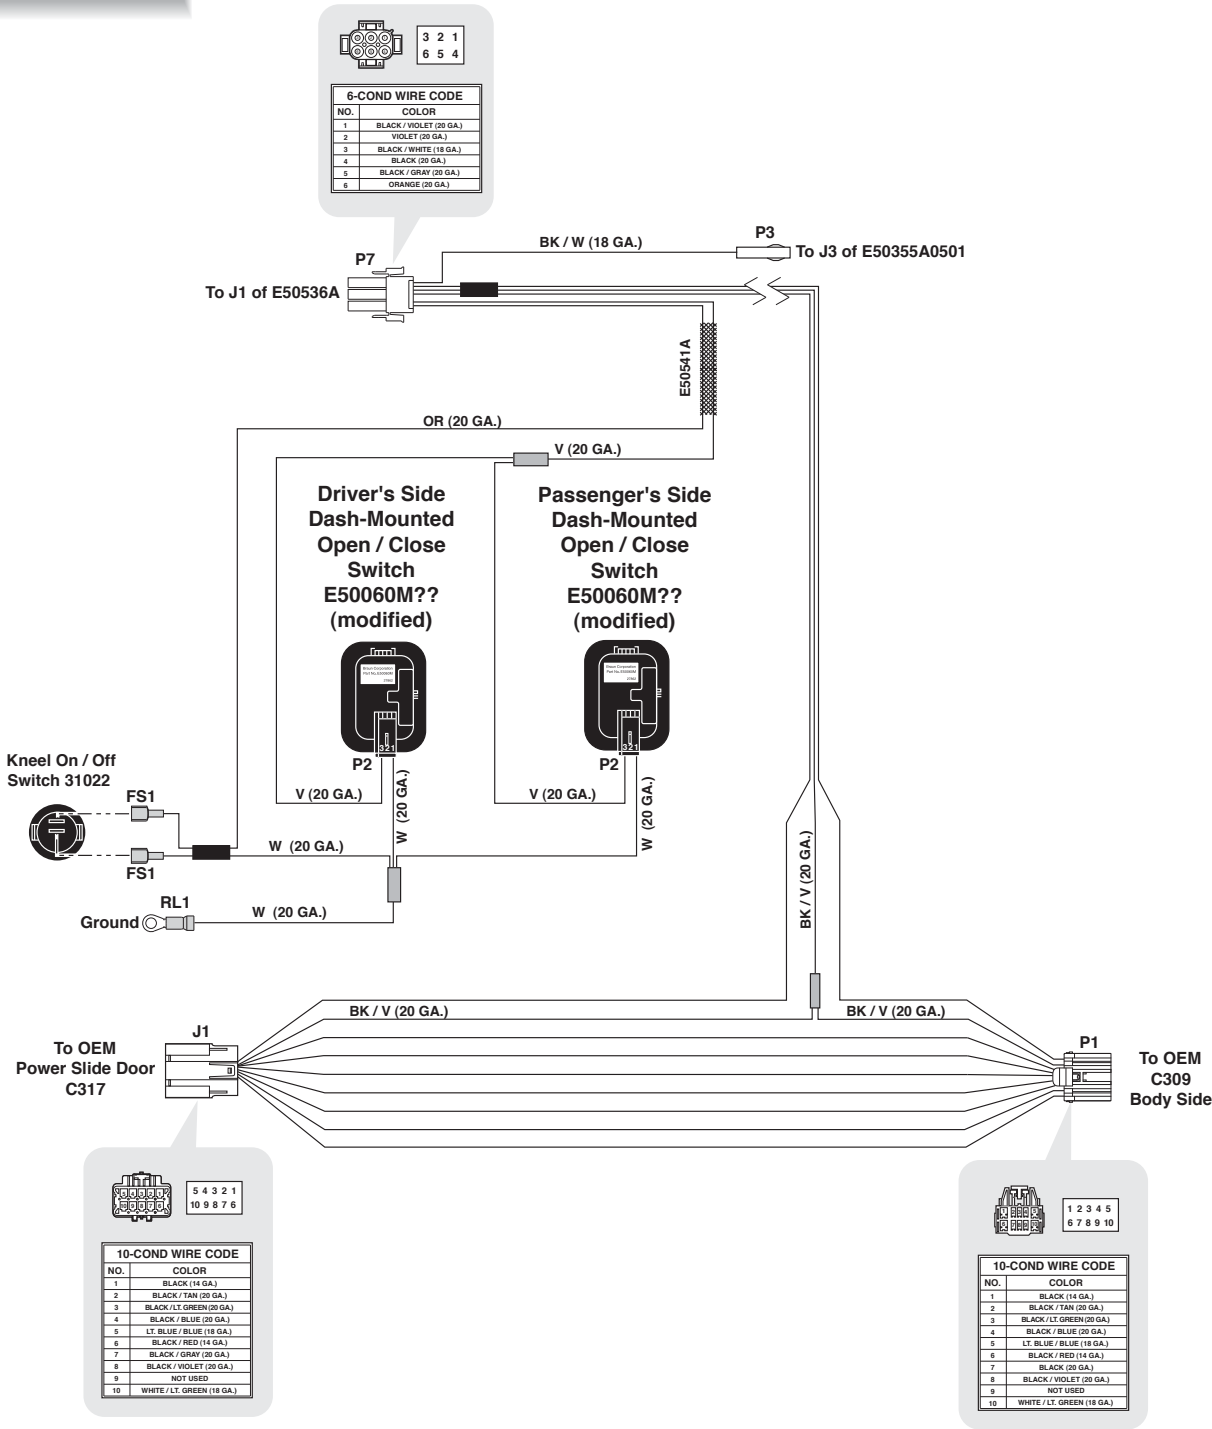


Wiring Diagram - Dash Mounted Switches - w/ Side Air Bags

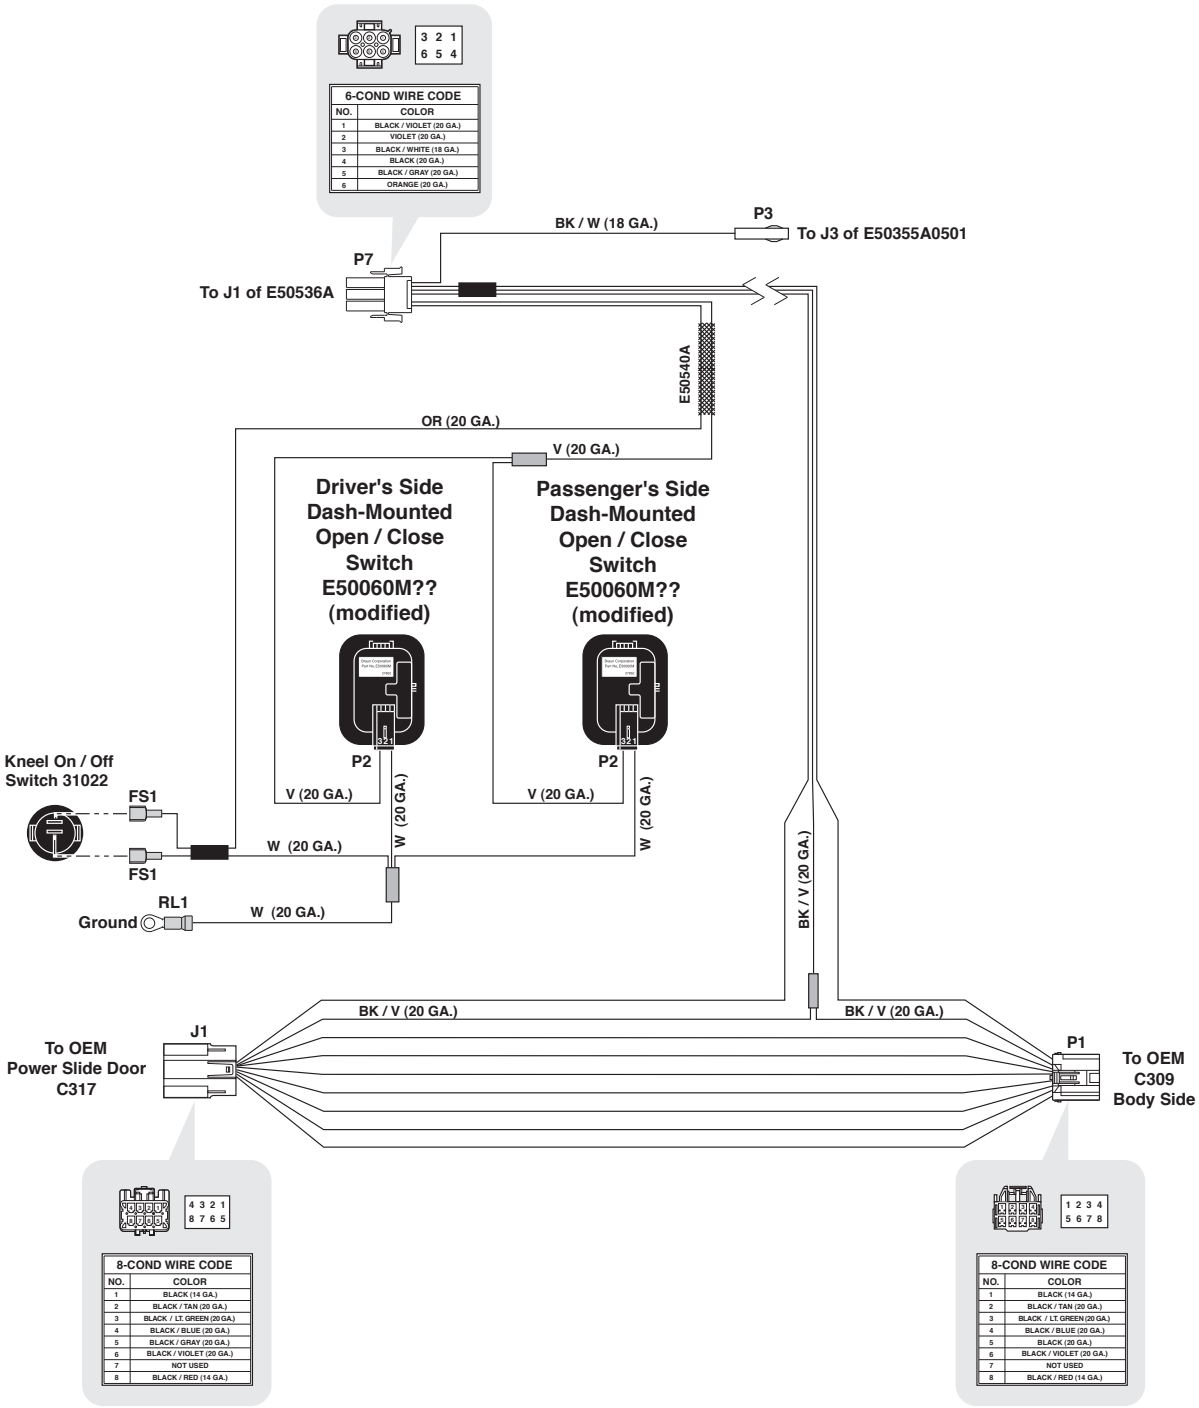

Wiring Diagram - Dash Mounted Switches - w/o Side Air Bags

ELECTRICAL SCHEMATIC - MAIN - BRAUN CONTROLLER


Note: Includes up to "0602" conversions.

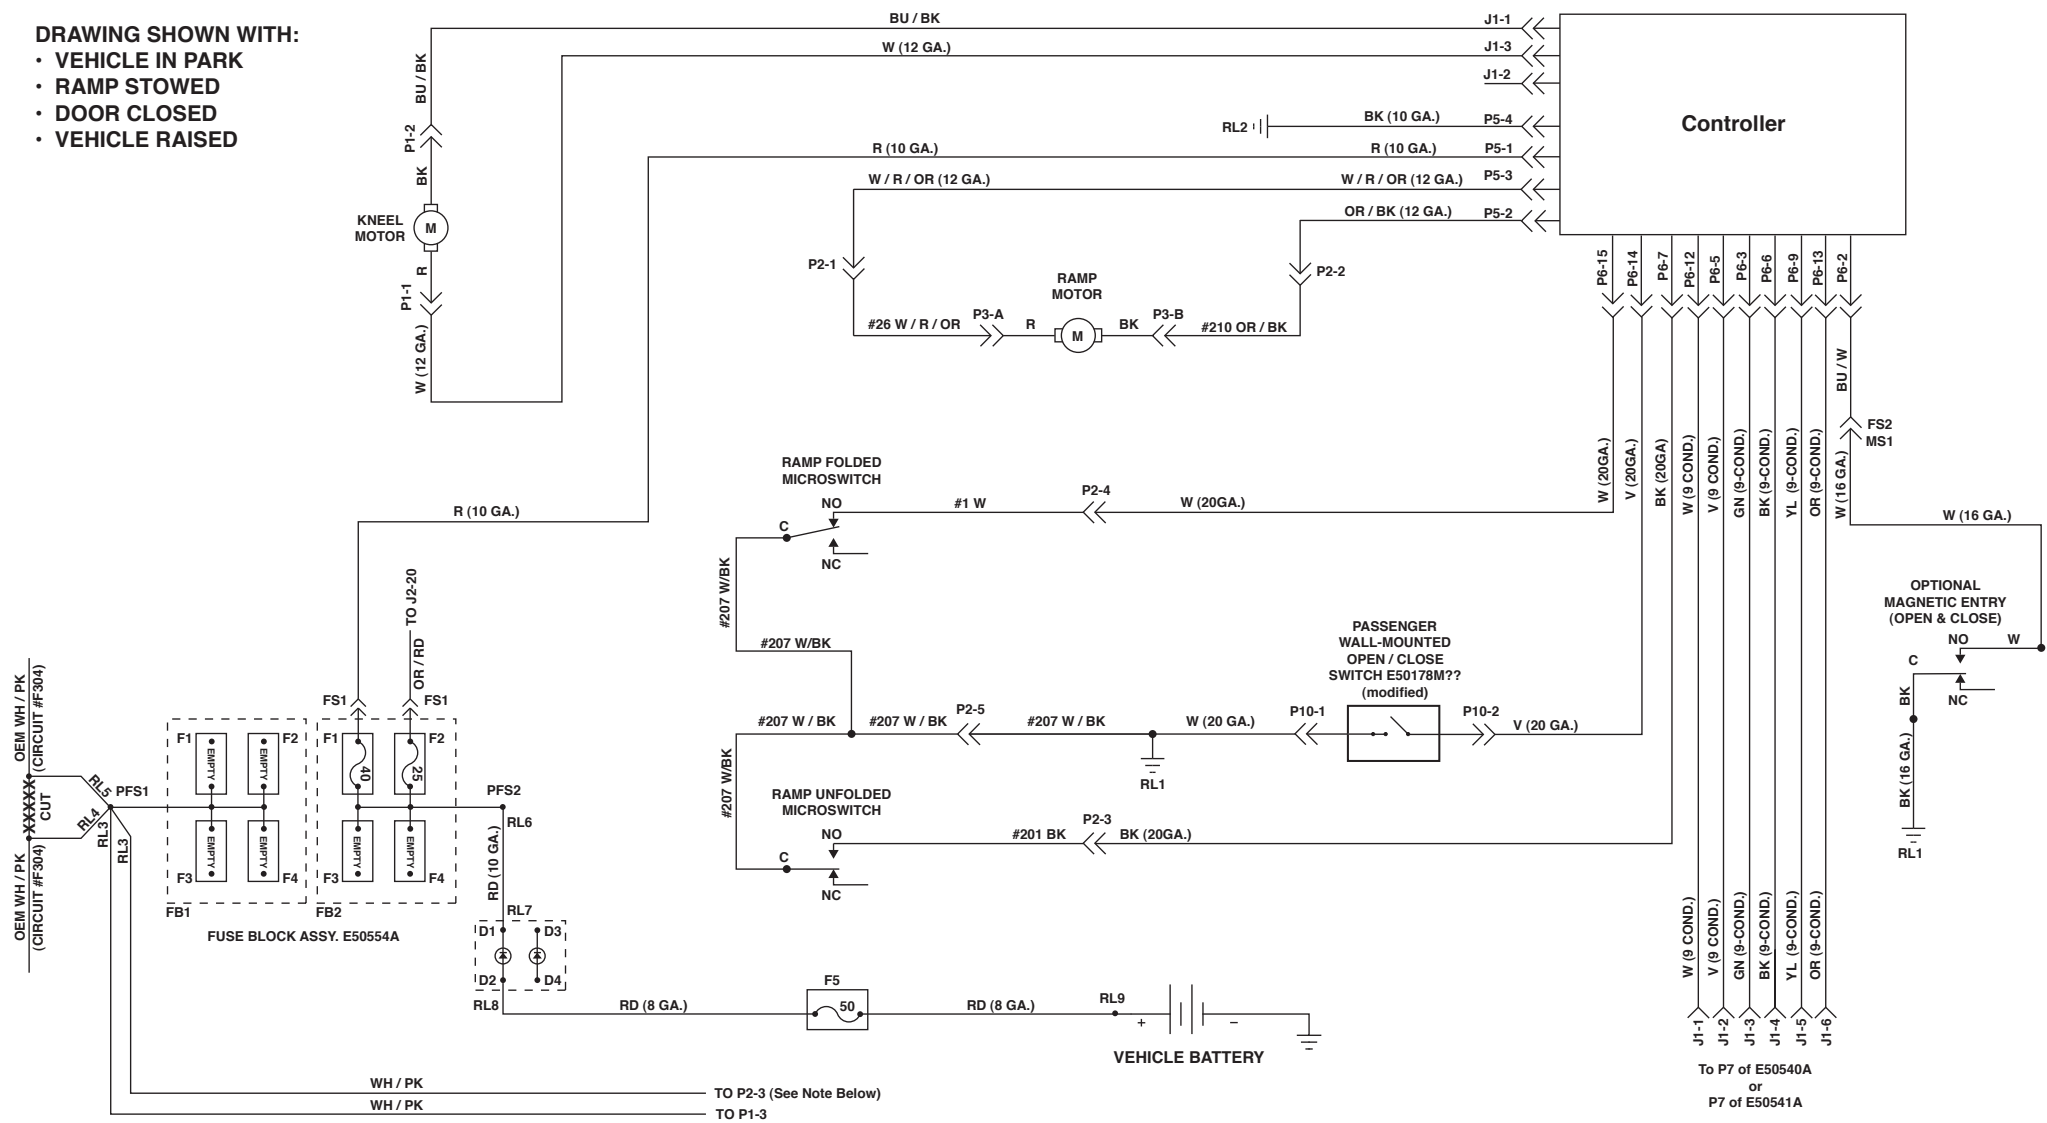


Note: This wire not present on vehicles with driver's memory power seat harness revision F.

ELECTRICAL SCHEMATIC - DASH MOUNTED SWITCHES - w/ SIDE AIR BAGS - w/o SIDE AIR BAGS

Note: Includes up to "0602" conversions.

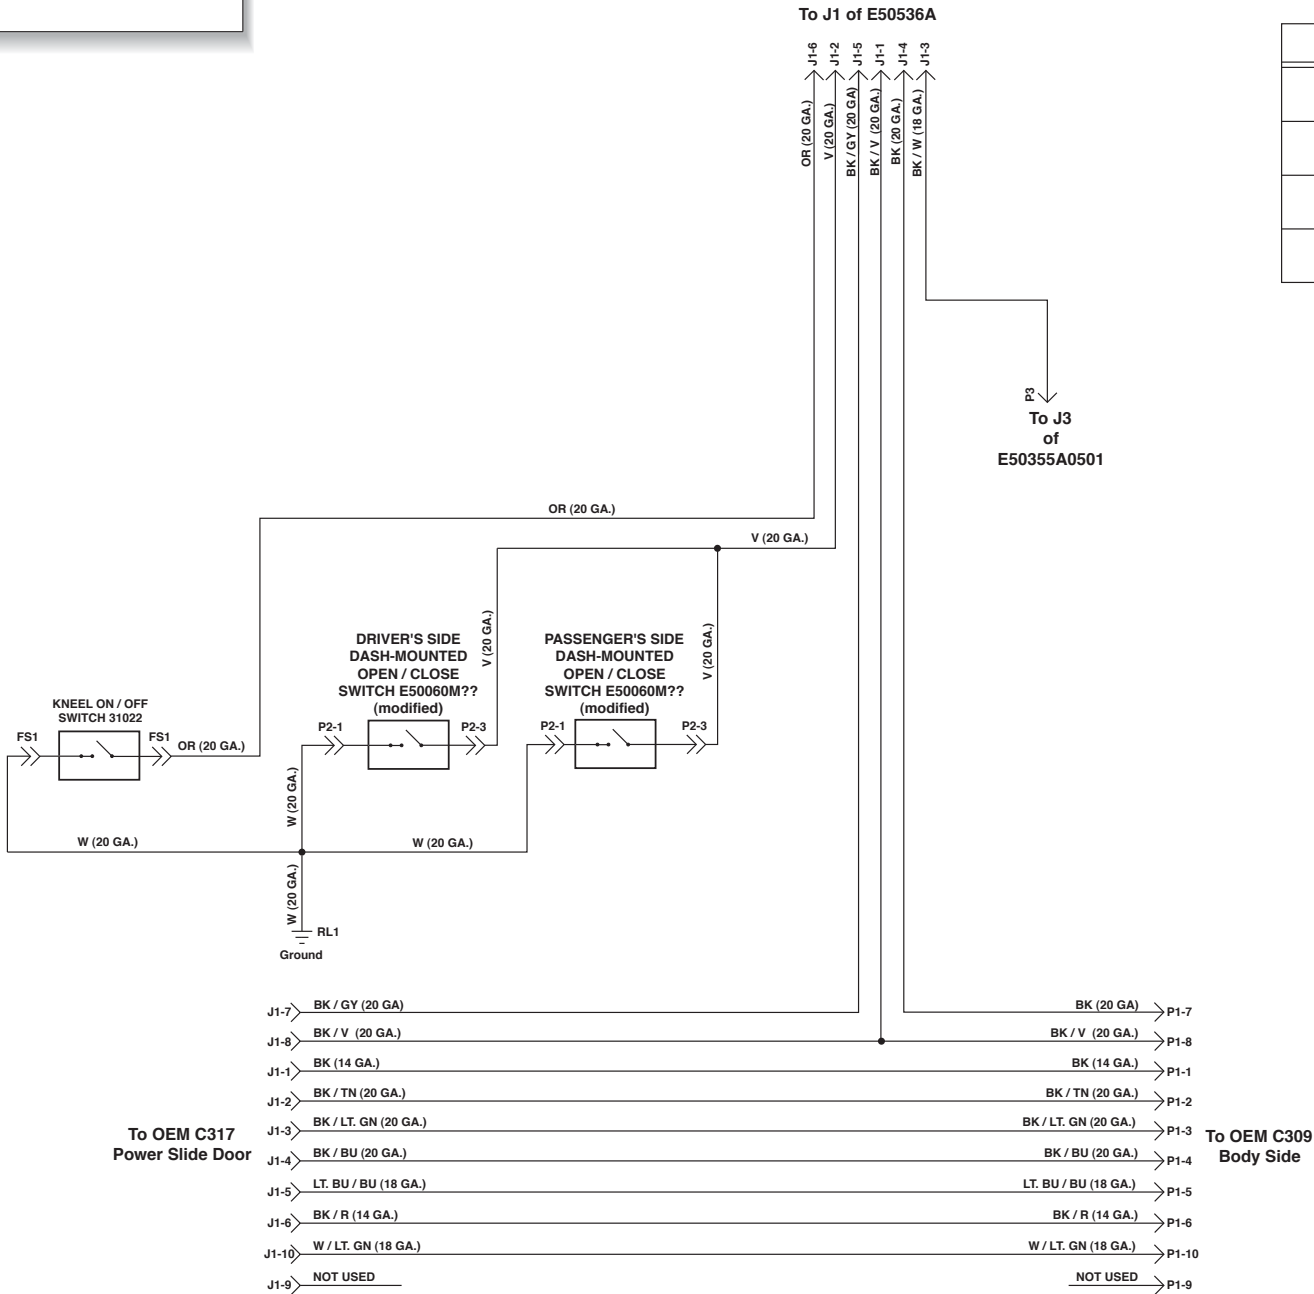


Electric Schematic - Dash Mounted Switches - w/ Side Air Bags

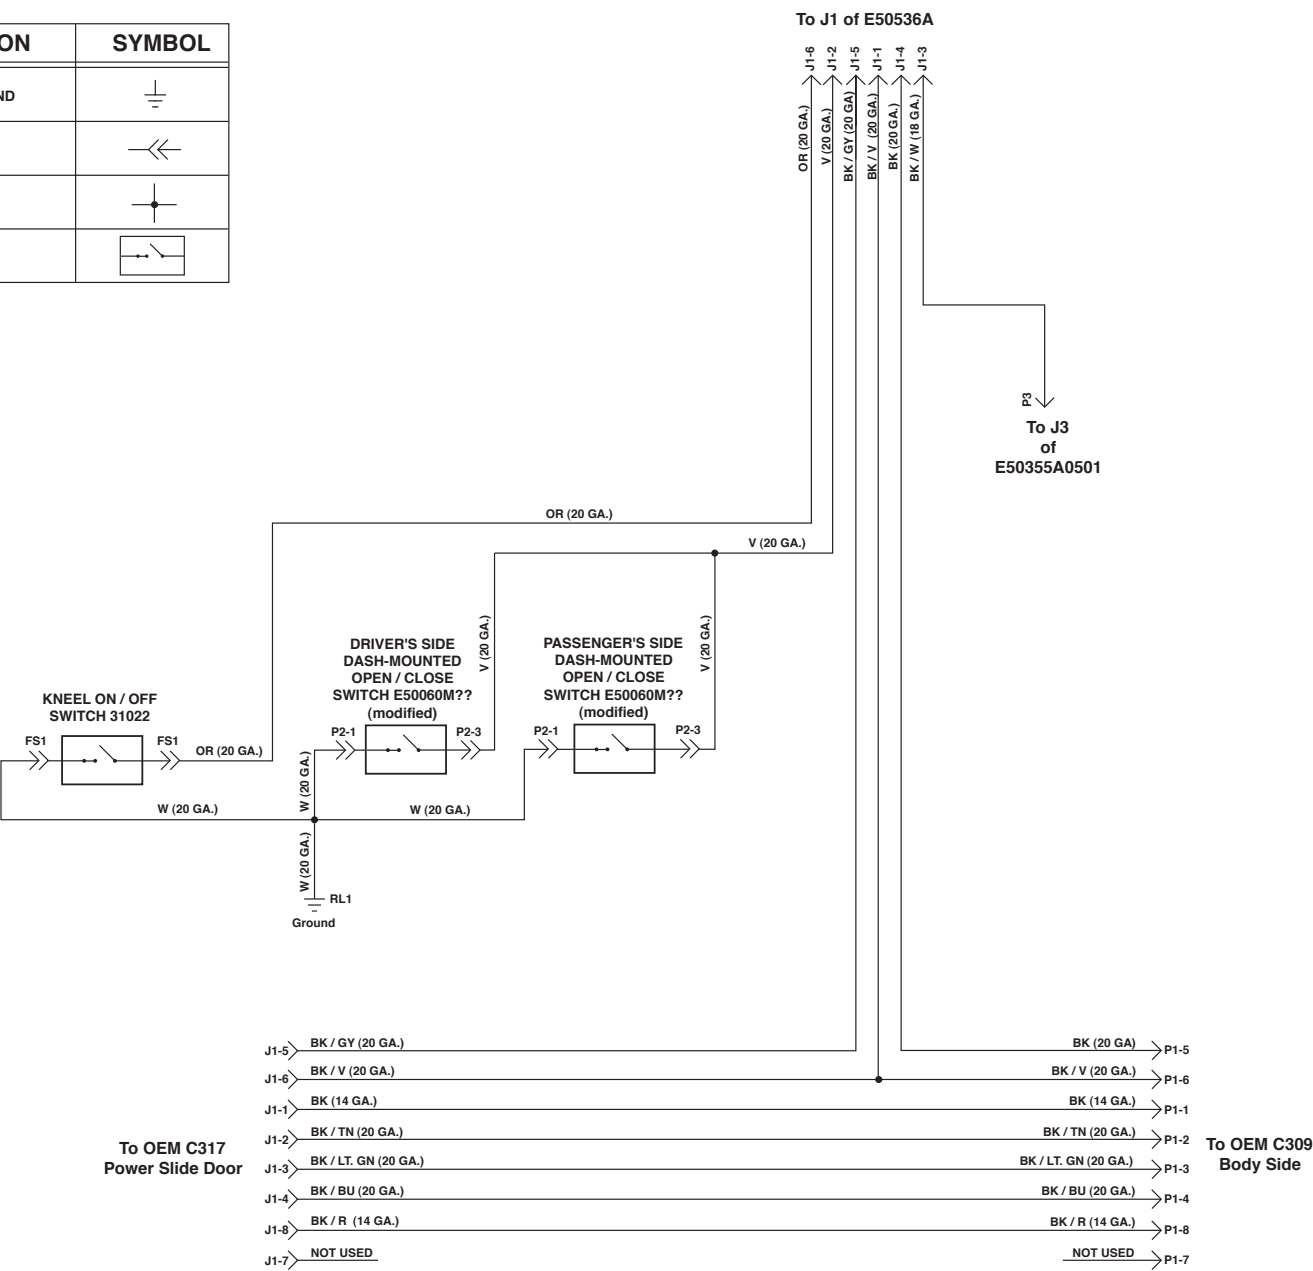


Electric Schematic - Dash Mounted Switches - w/o Side Air Bags

Note: Includes up to "0602" conversions.

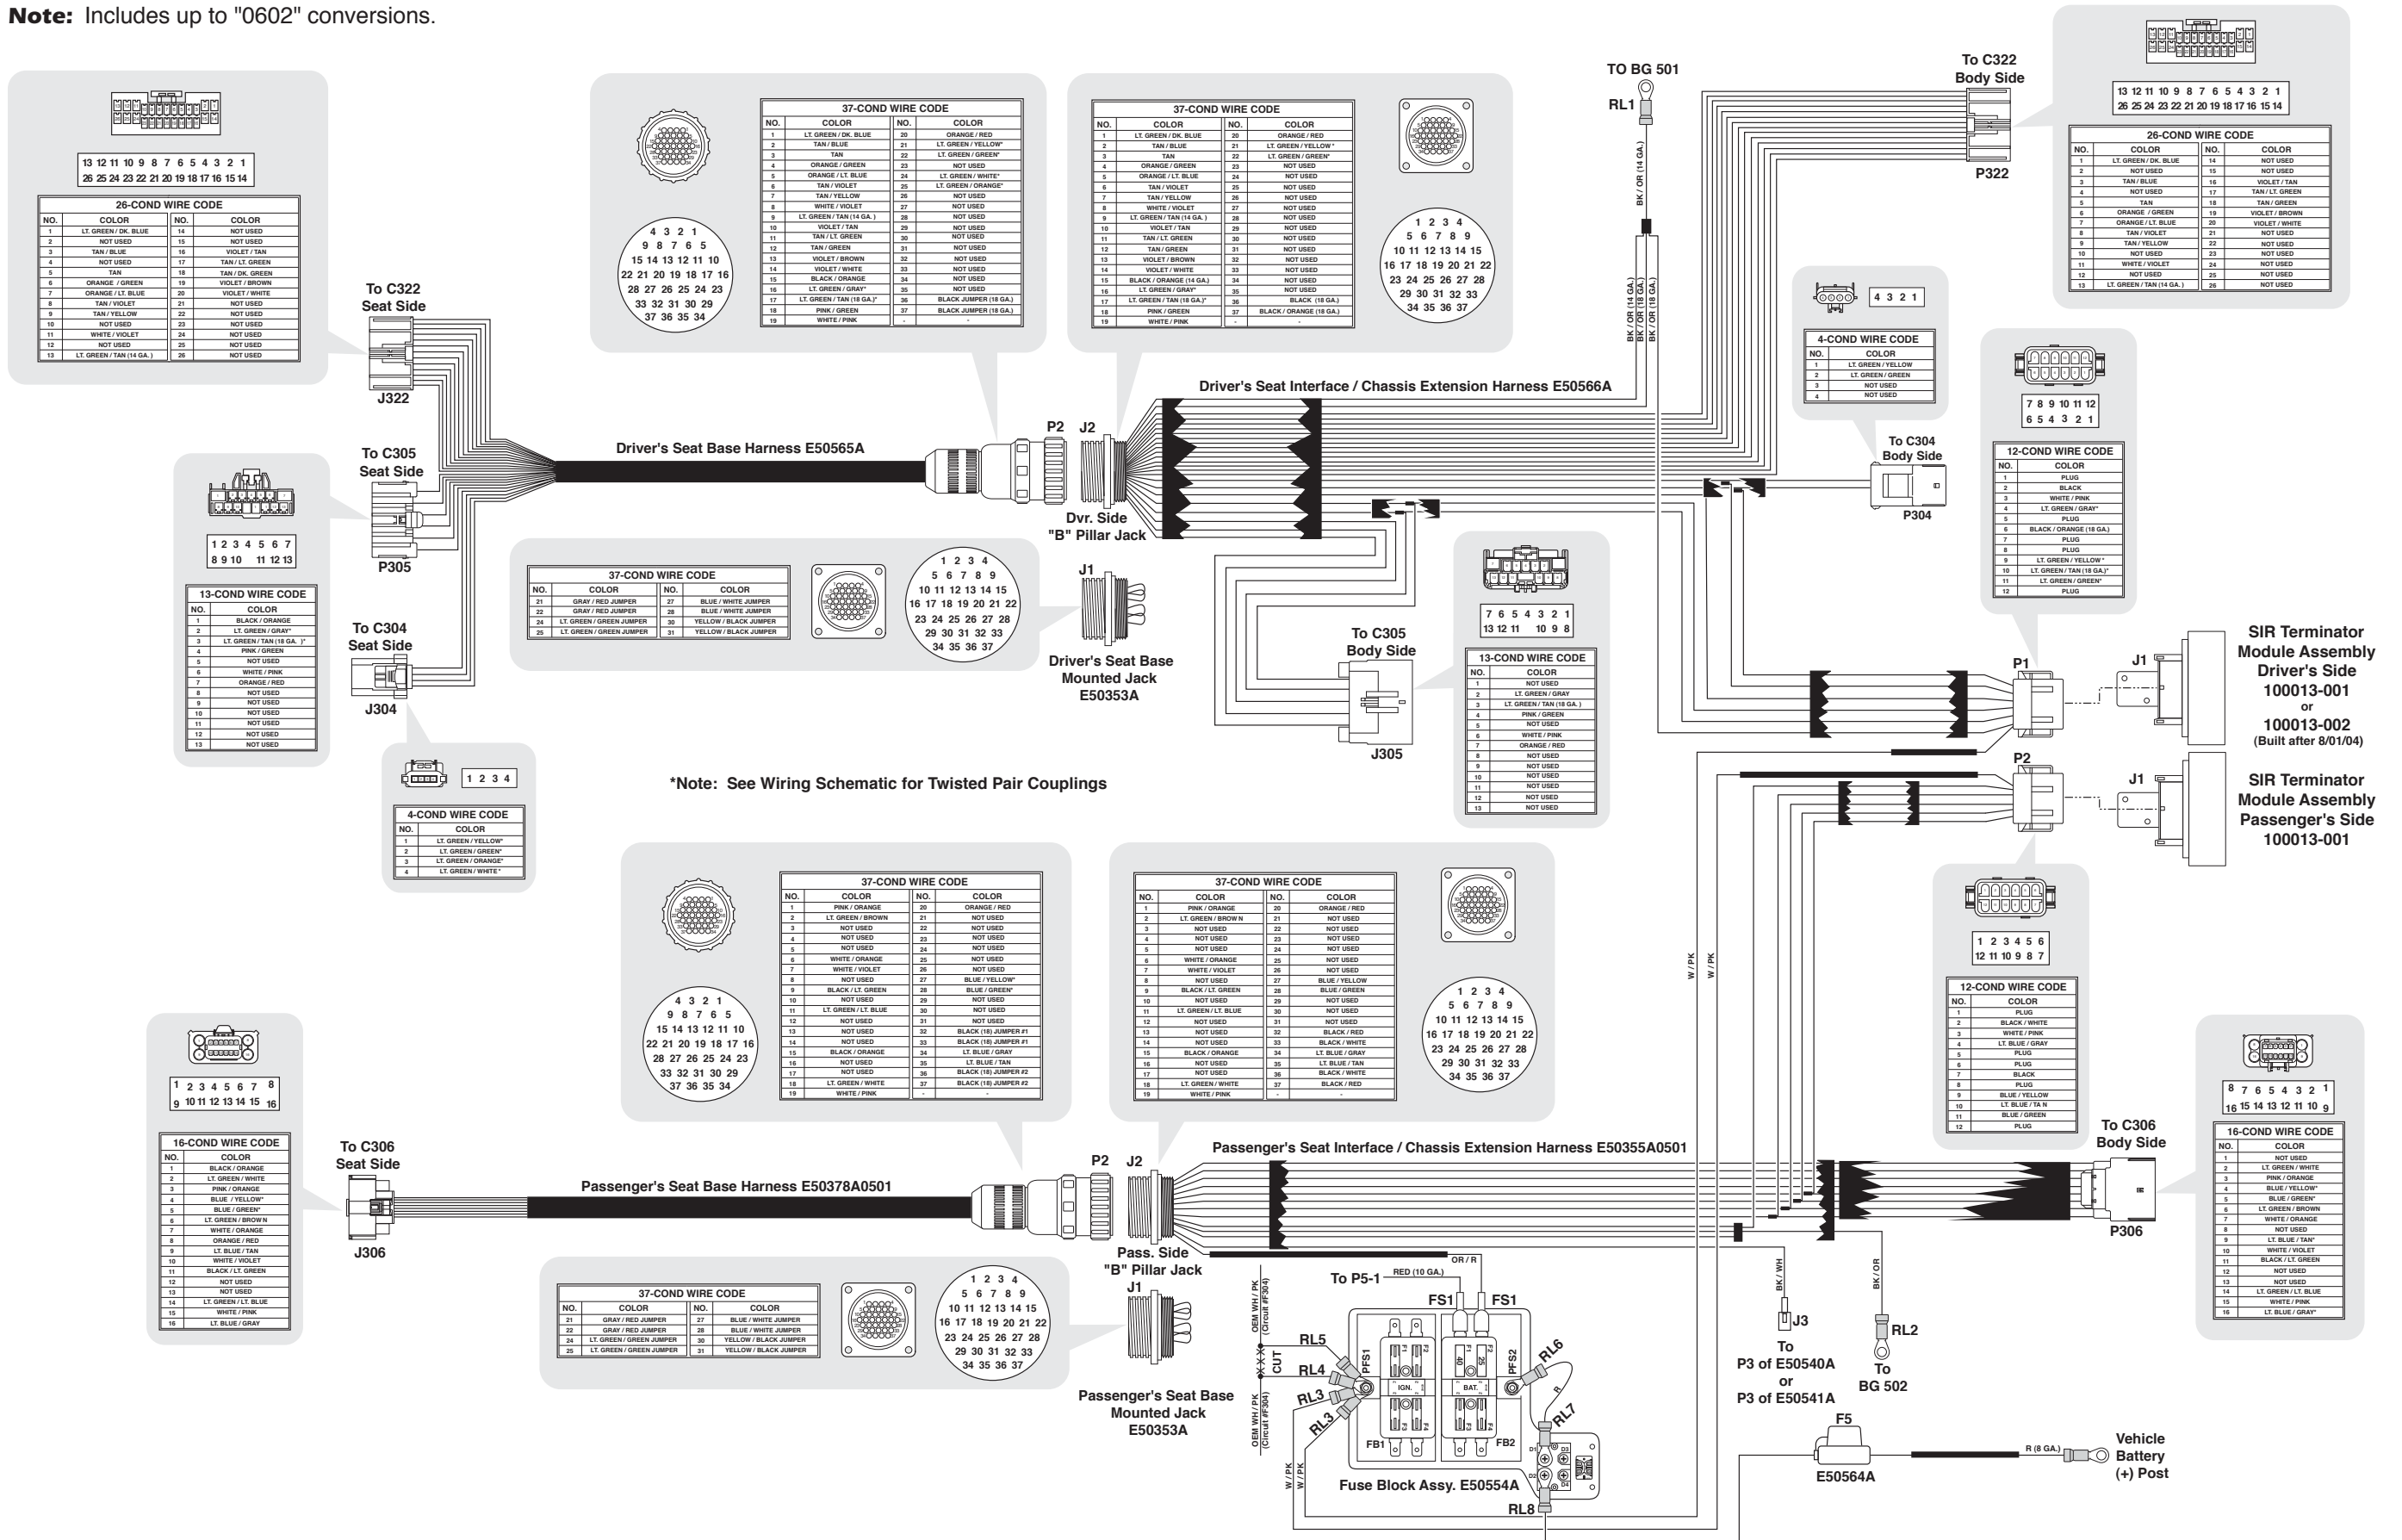


Unfold For:
Wiring Diagram
Front Seat
Driver Power w/ Memory
Passenger Universal - Rev A-E


ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER POWER w/ MEMORY - PASSENGER UNIVERSAL - REV A-E

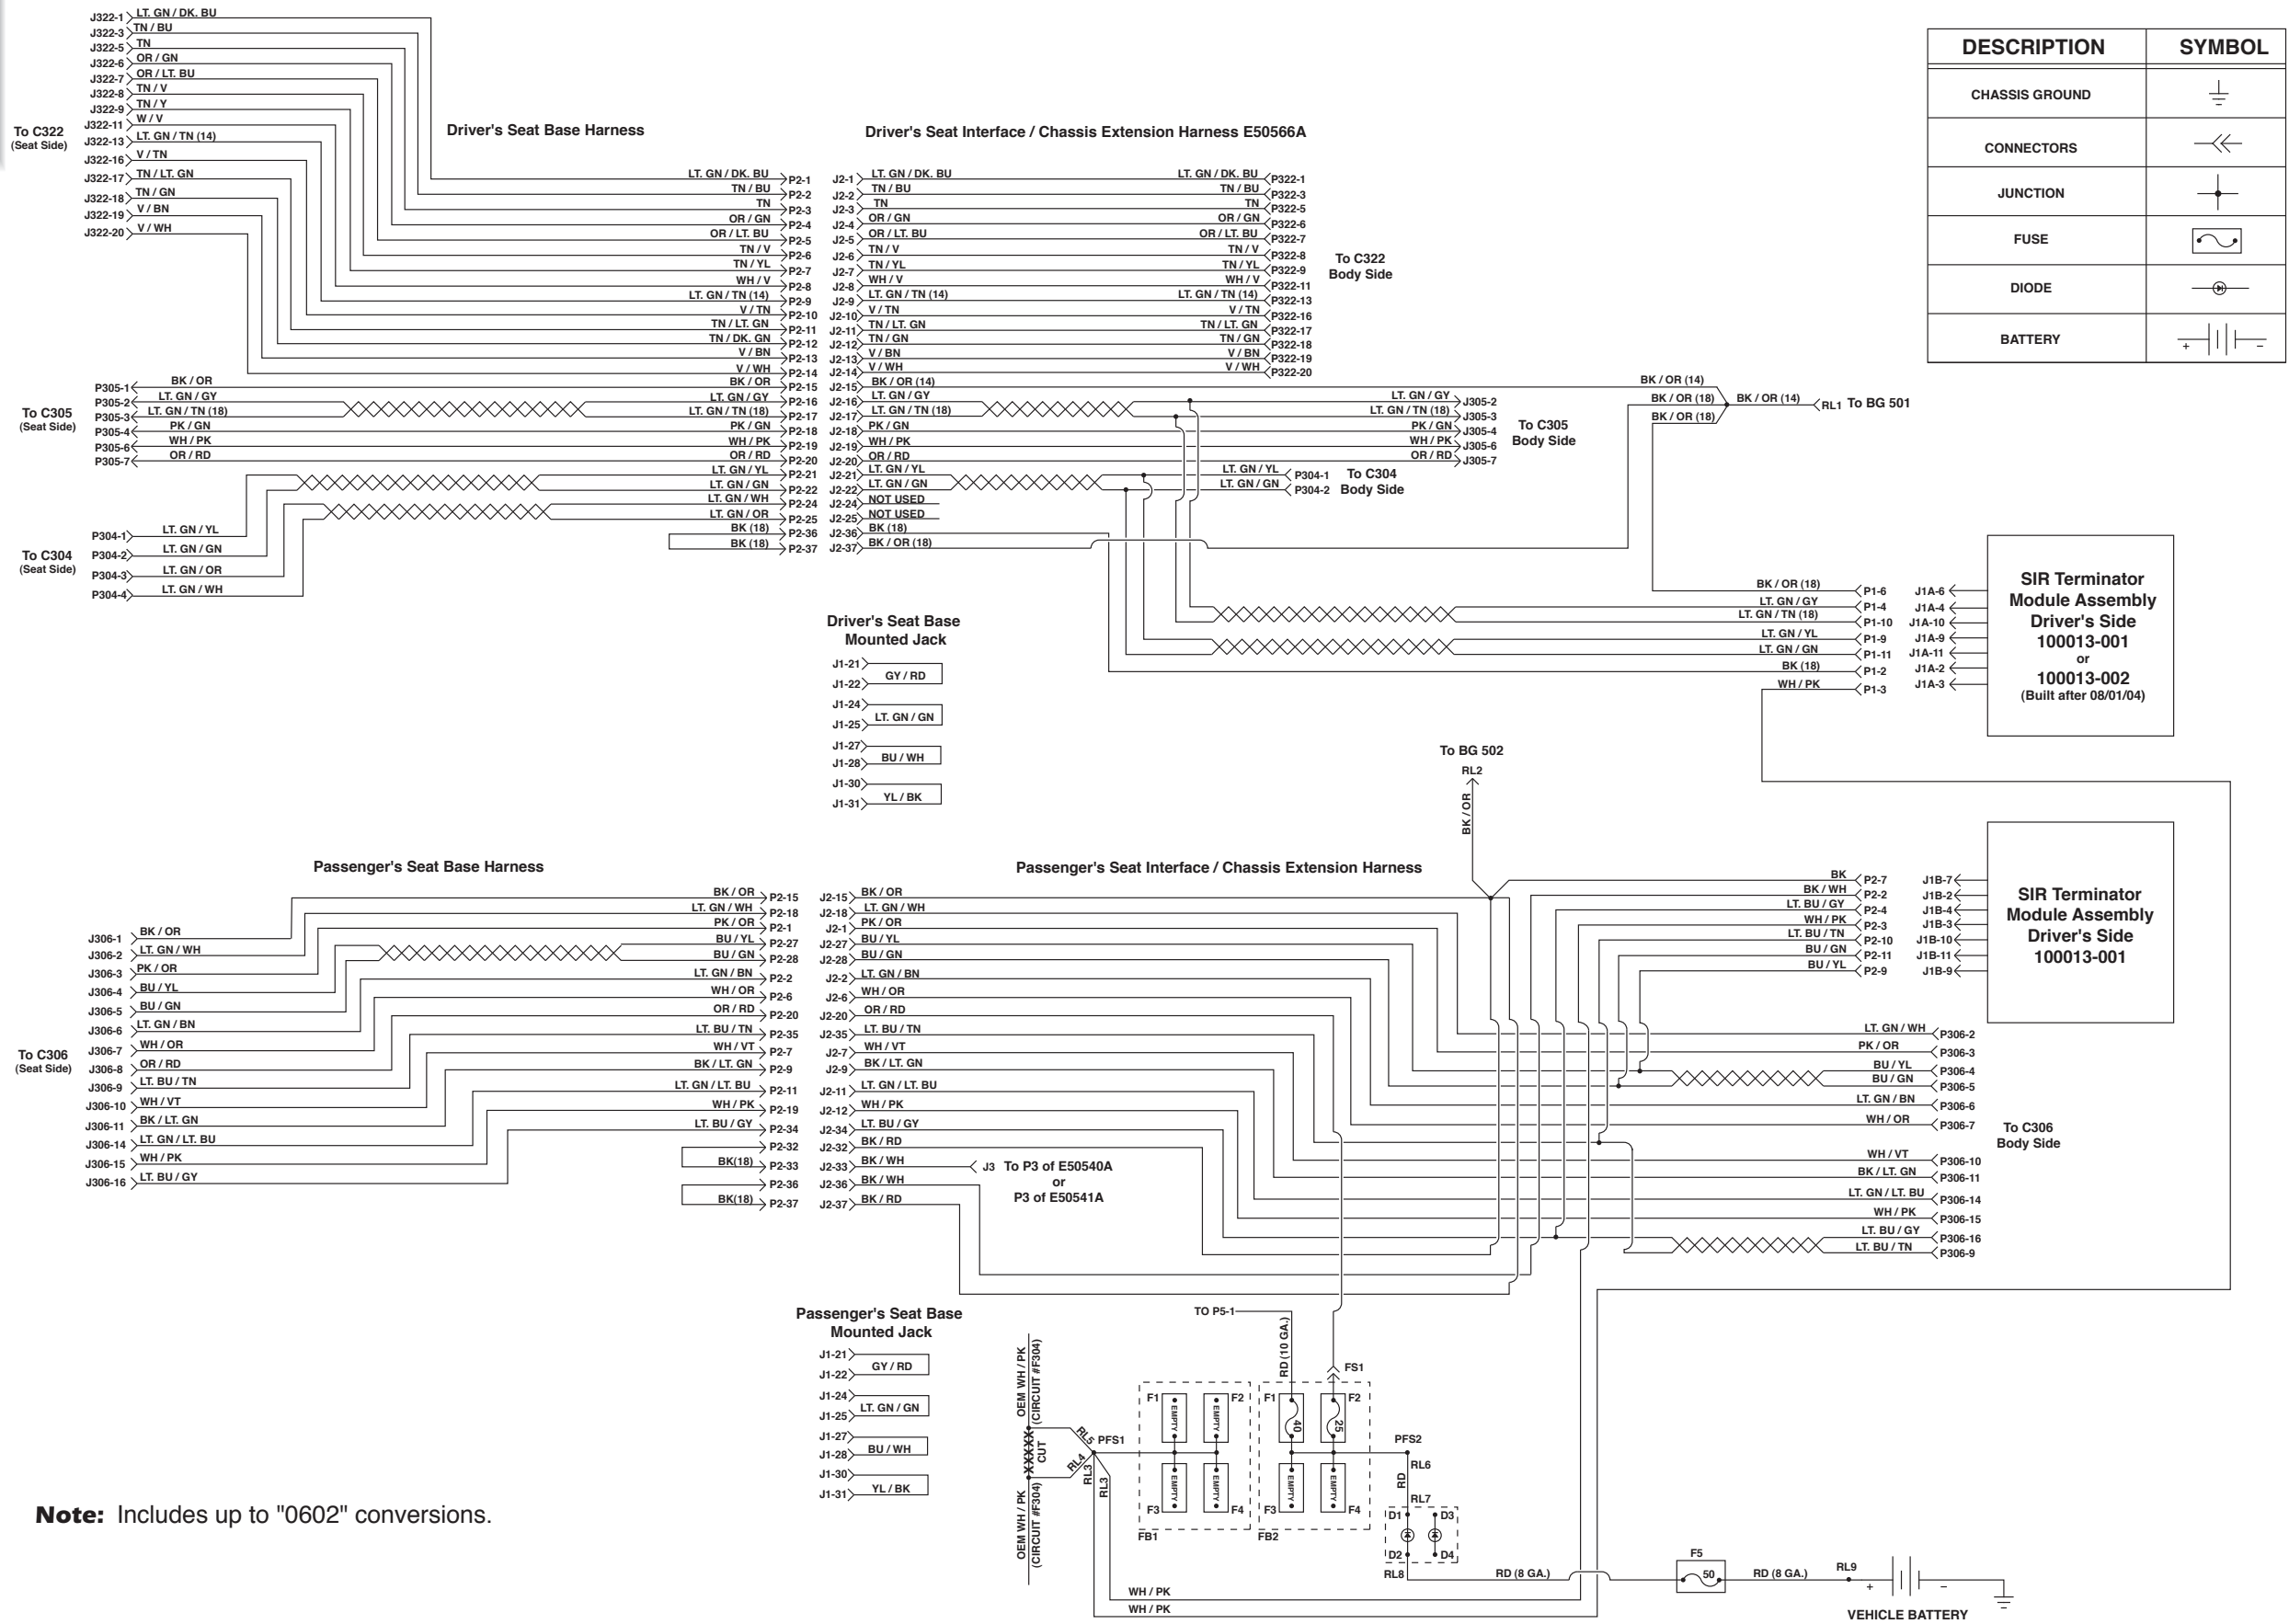

Note: Includes up to "0602" conversions.

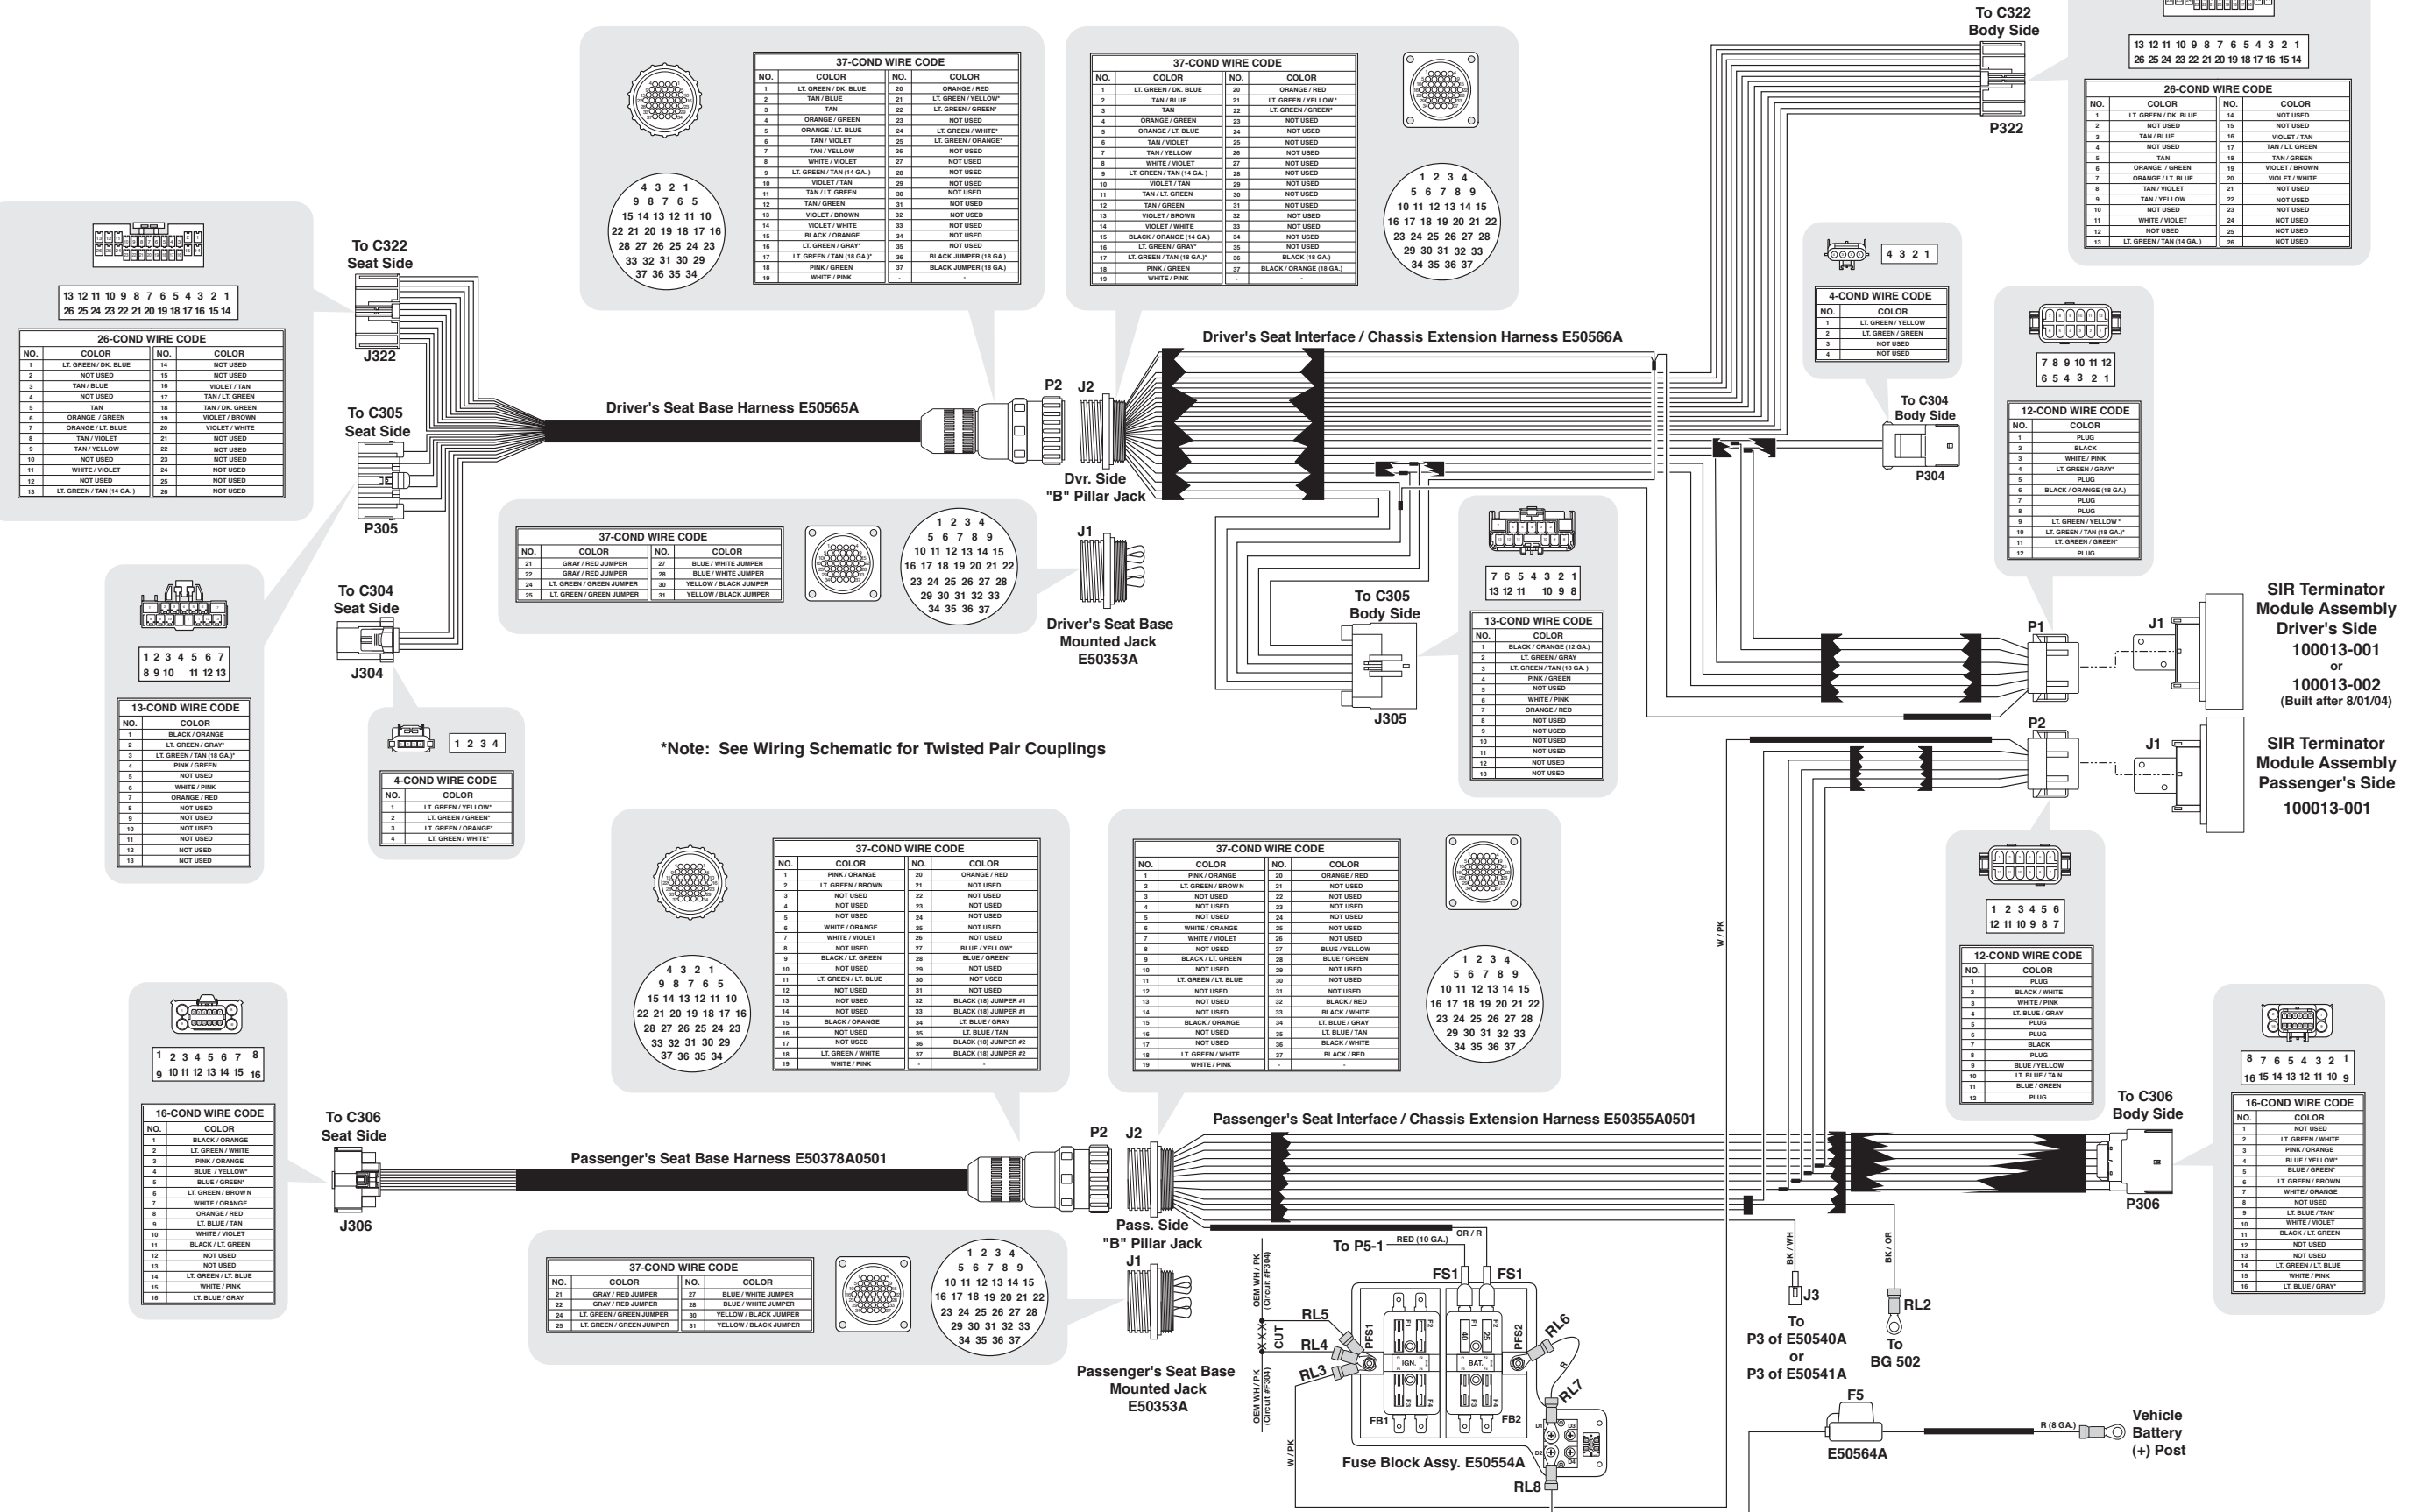


ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER POWER w/ MEMORY - PASSENGER UNIVERSAL - REV F

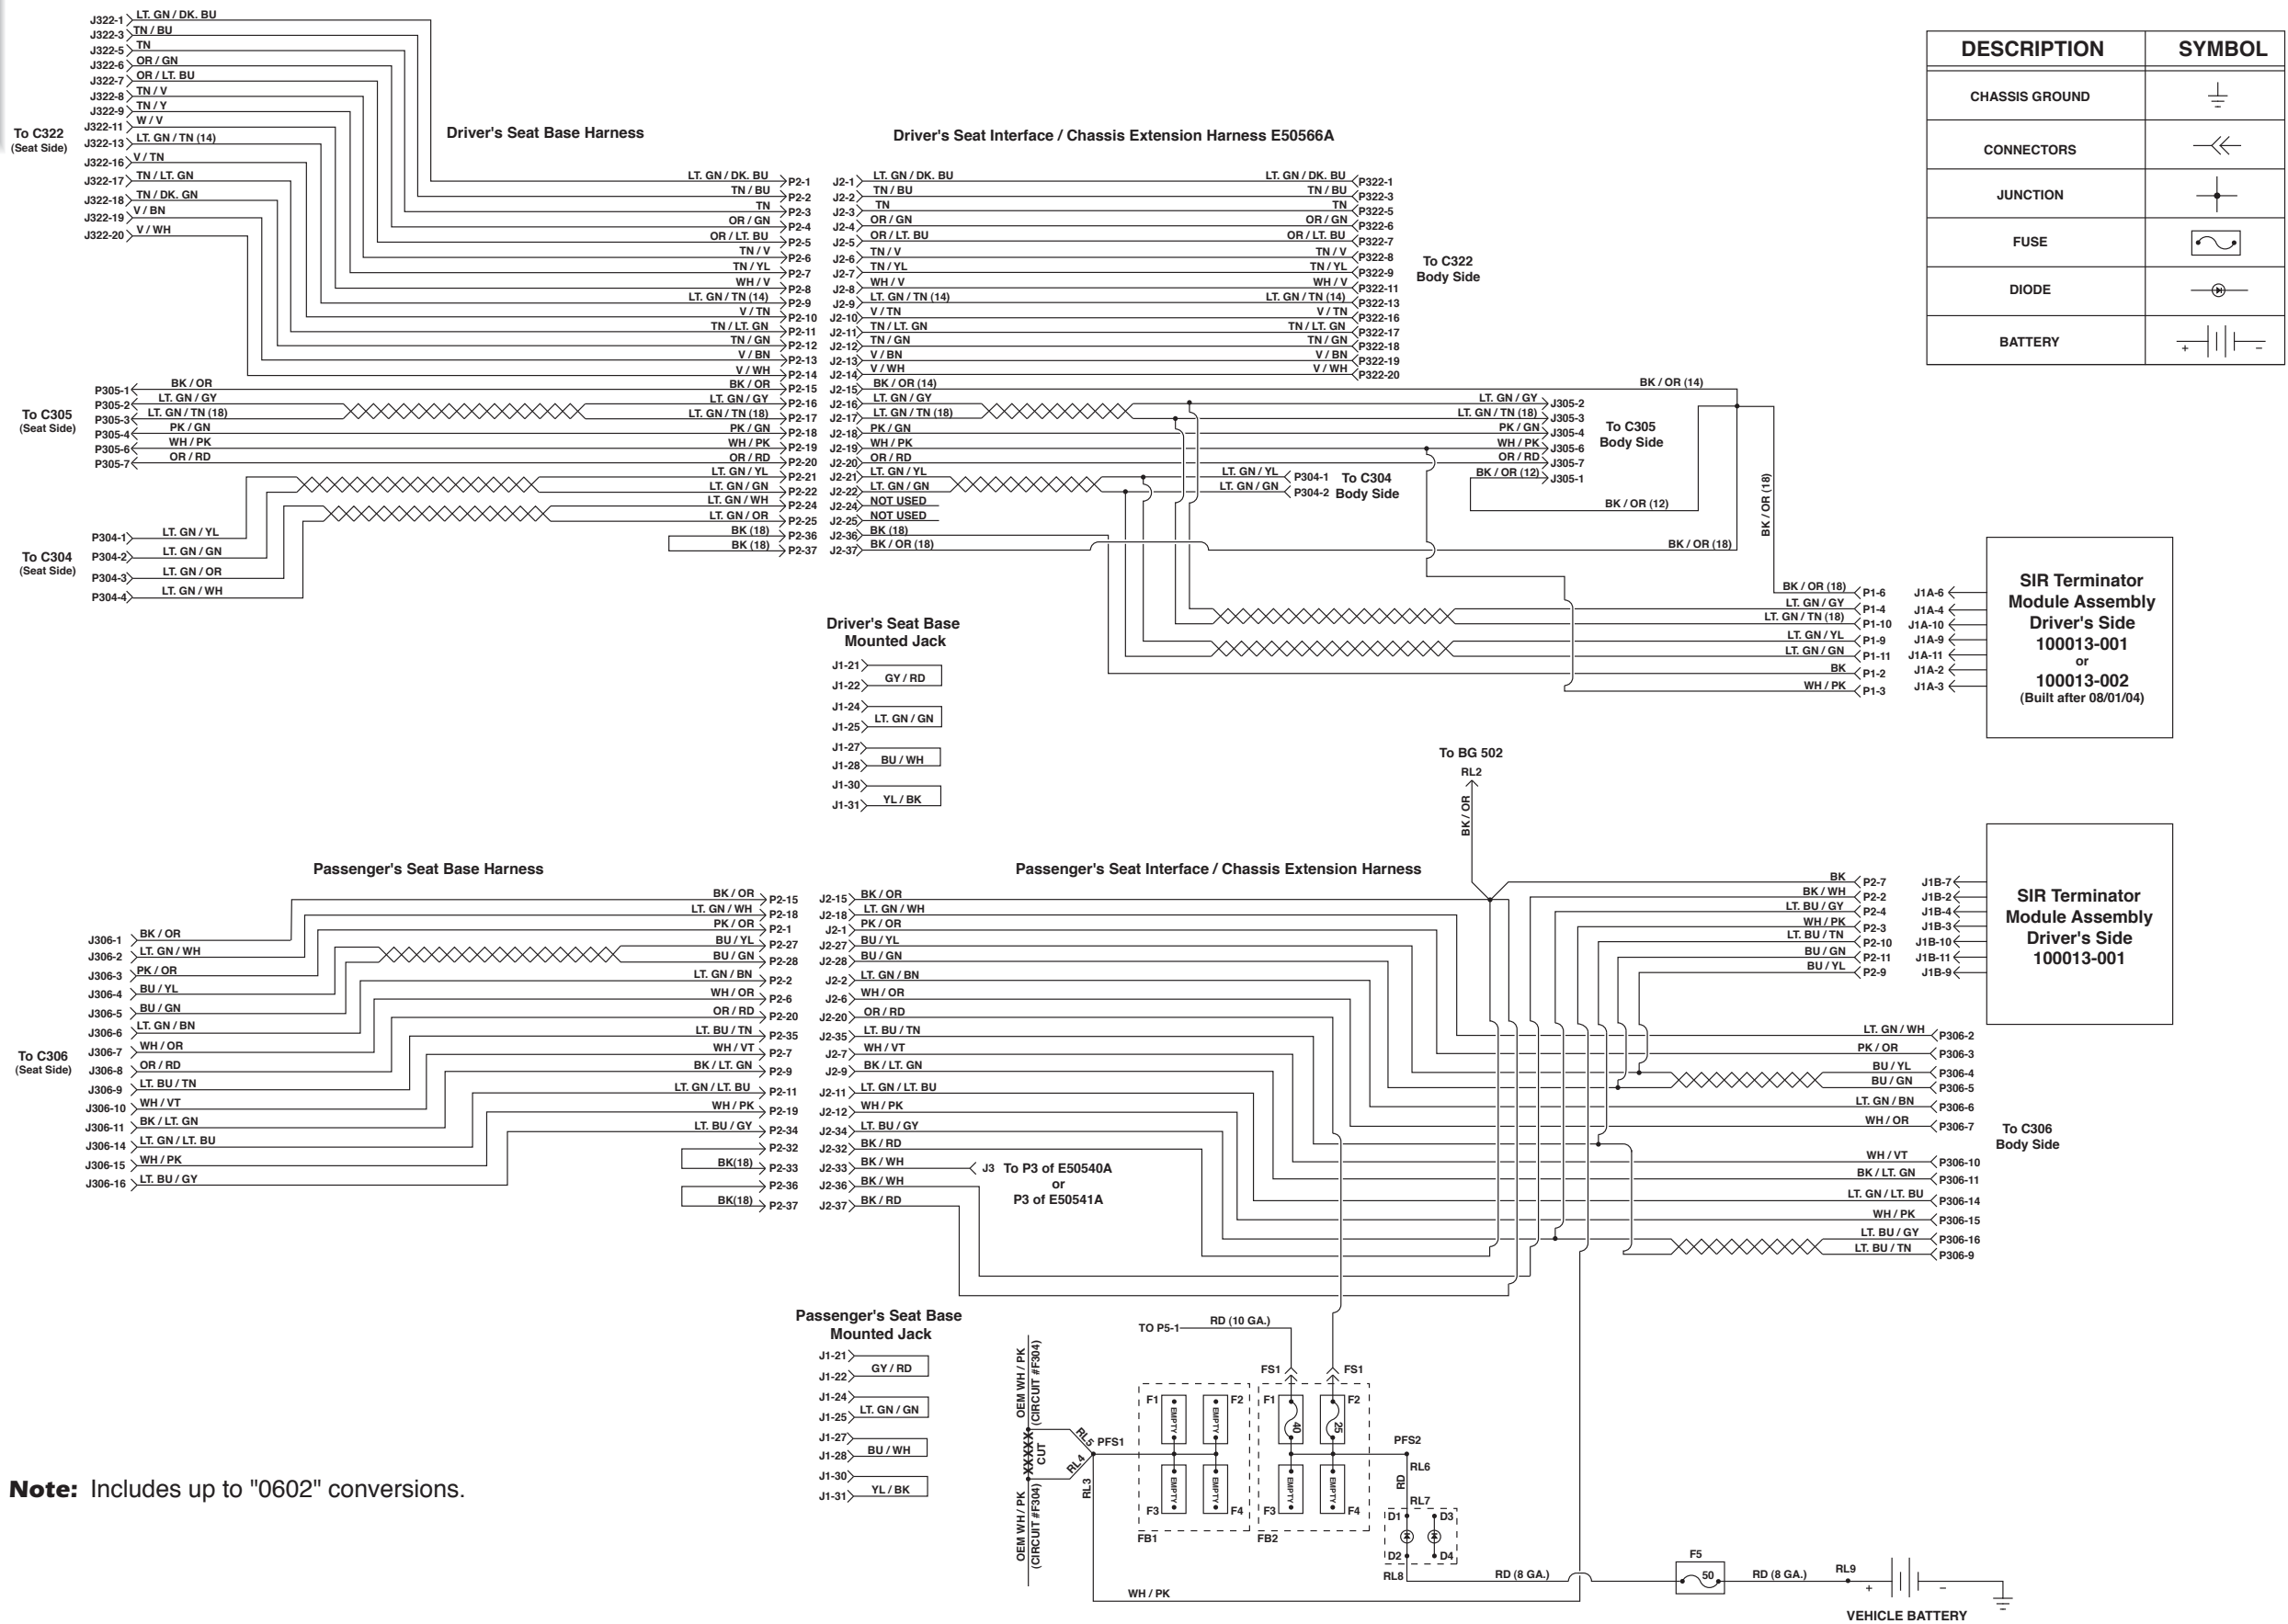

WIRING DIAGRAM - FRONT SEAT - DRIVER POWER w/o MEMORY - PASSENGER UNIVERSAL


Note: Includes up to "0602" conversions.

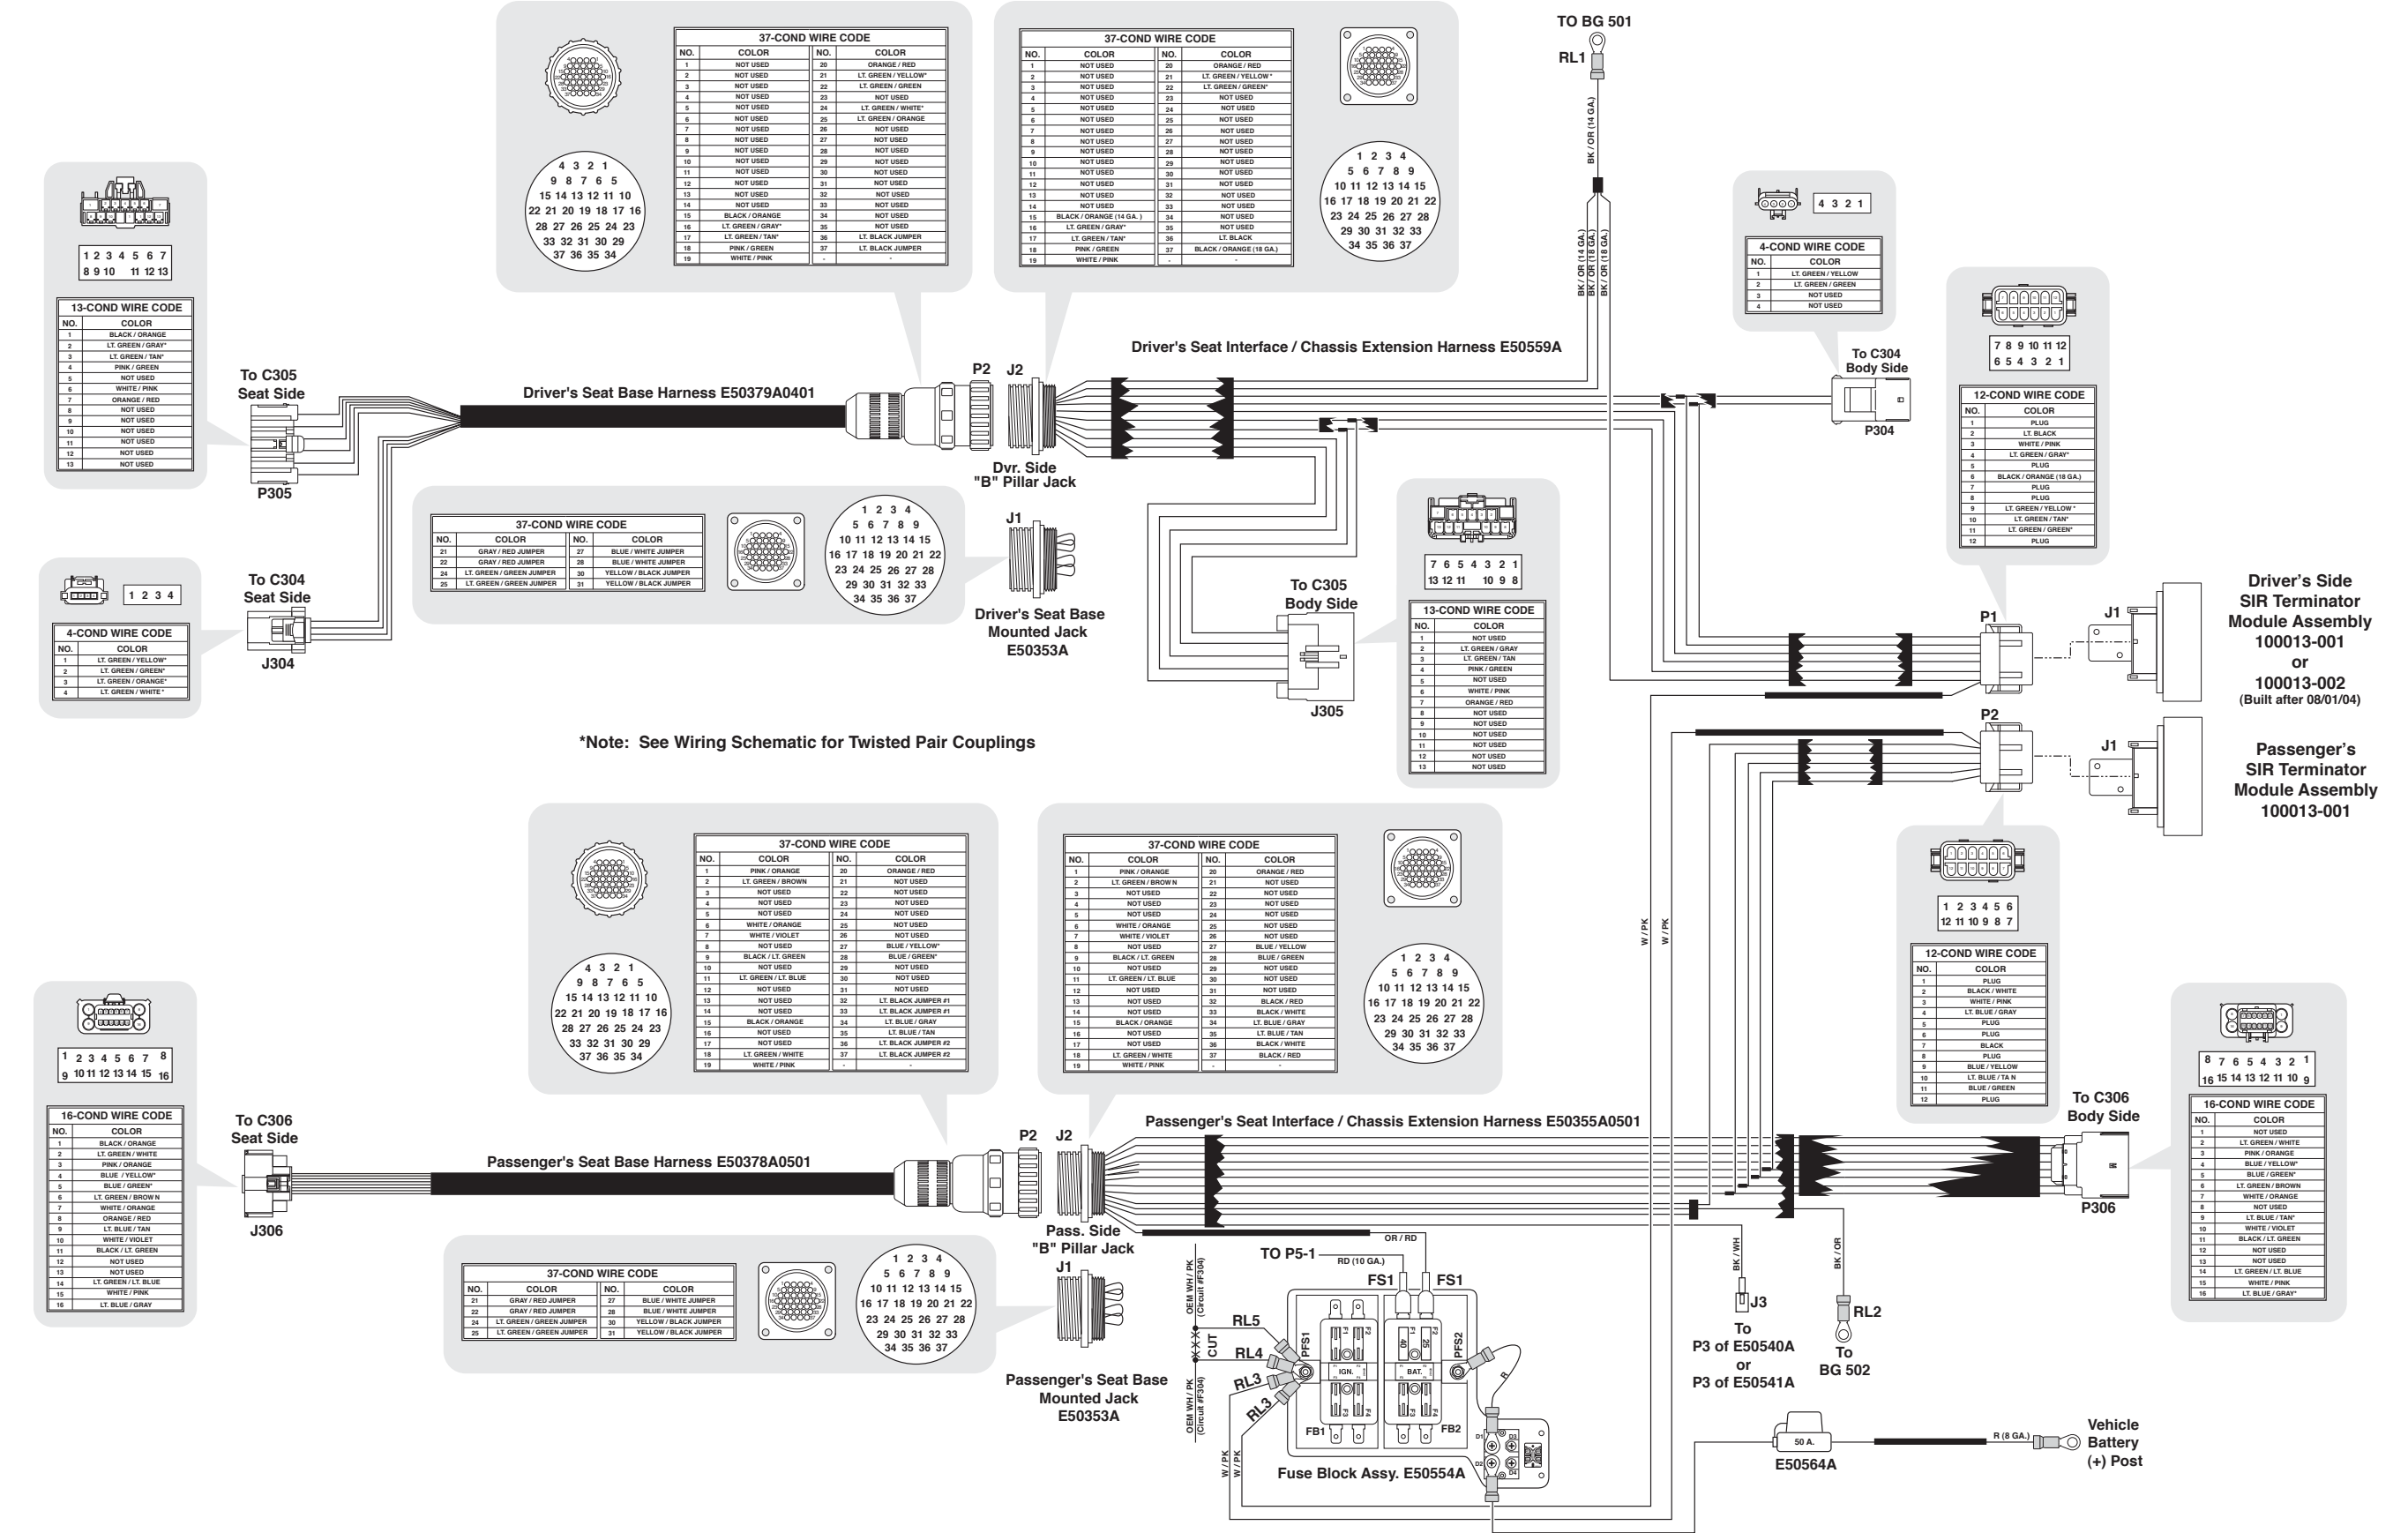

Unfold For:
Wiring Diagram
Front Seat
Driver Power w/o Memory
Passenger Universal

ELECTRICAL SCHEMATIC - FRONT SEAT - DRIVER POWER w/o MEMORY - PASSENGER UNIVERSAL


Note: Includes up to "0602" conversions.

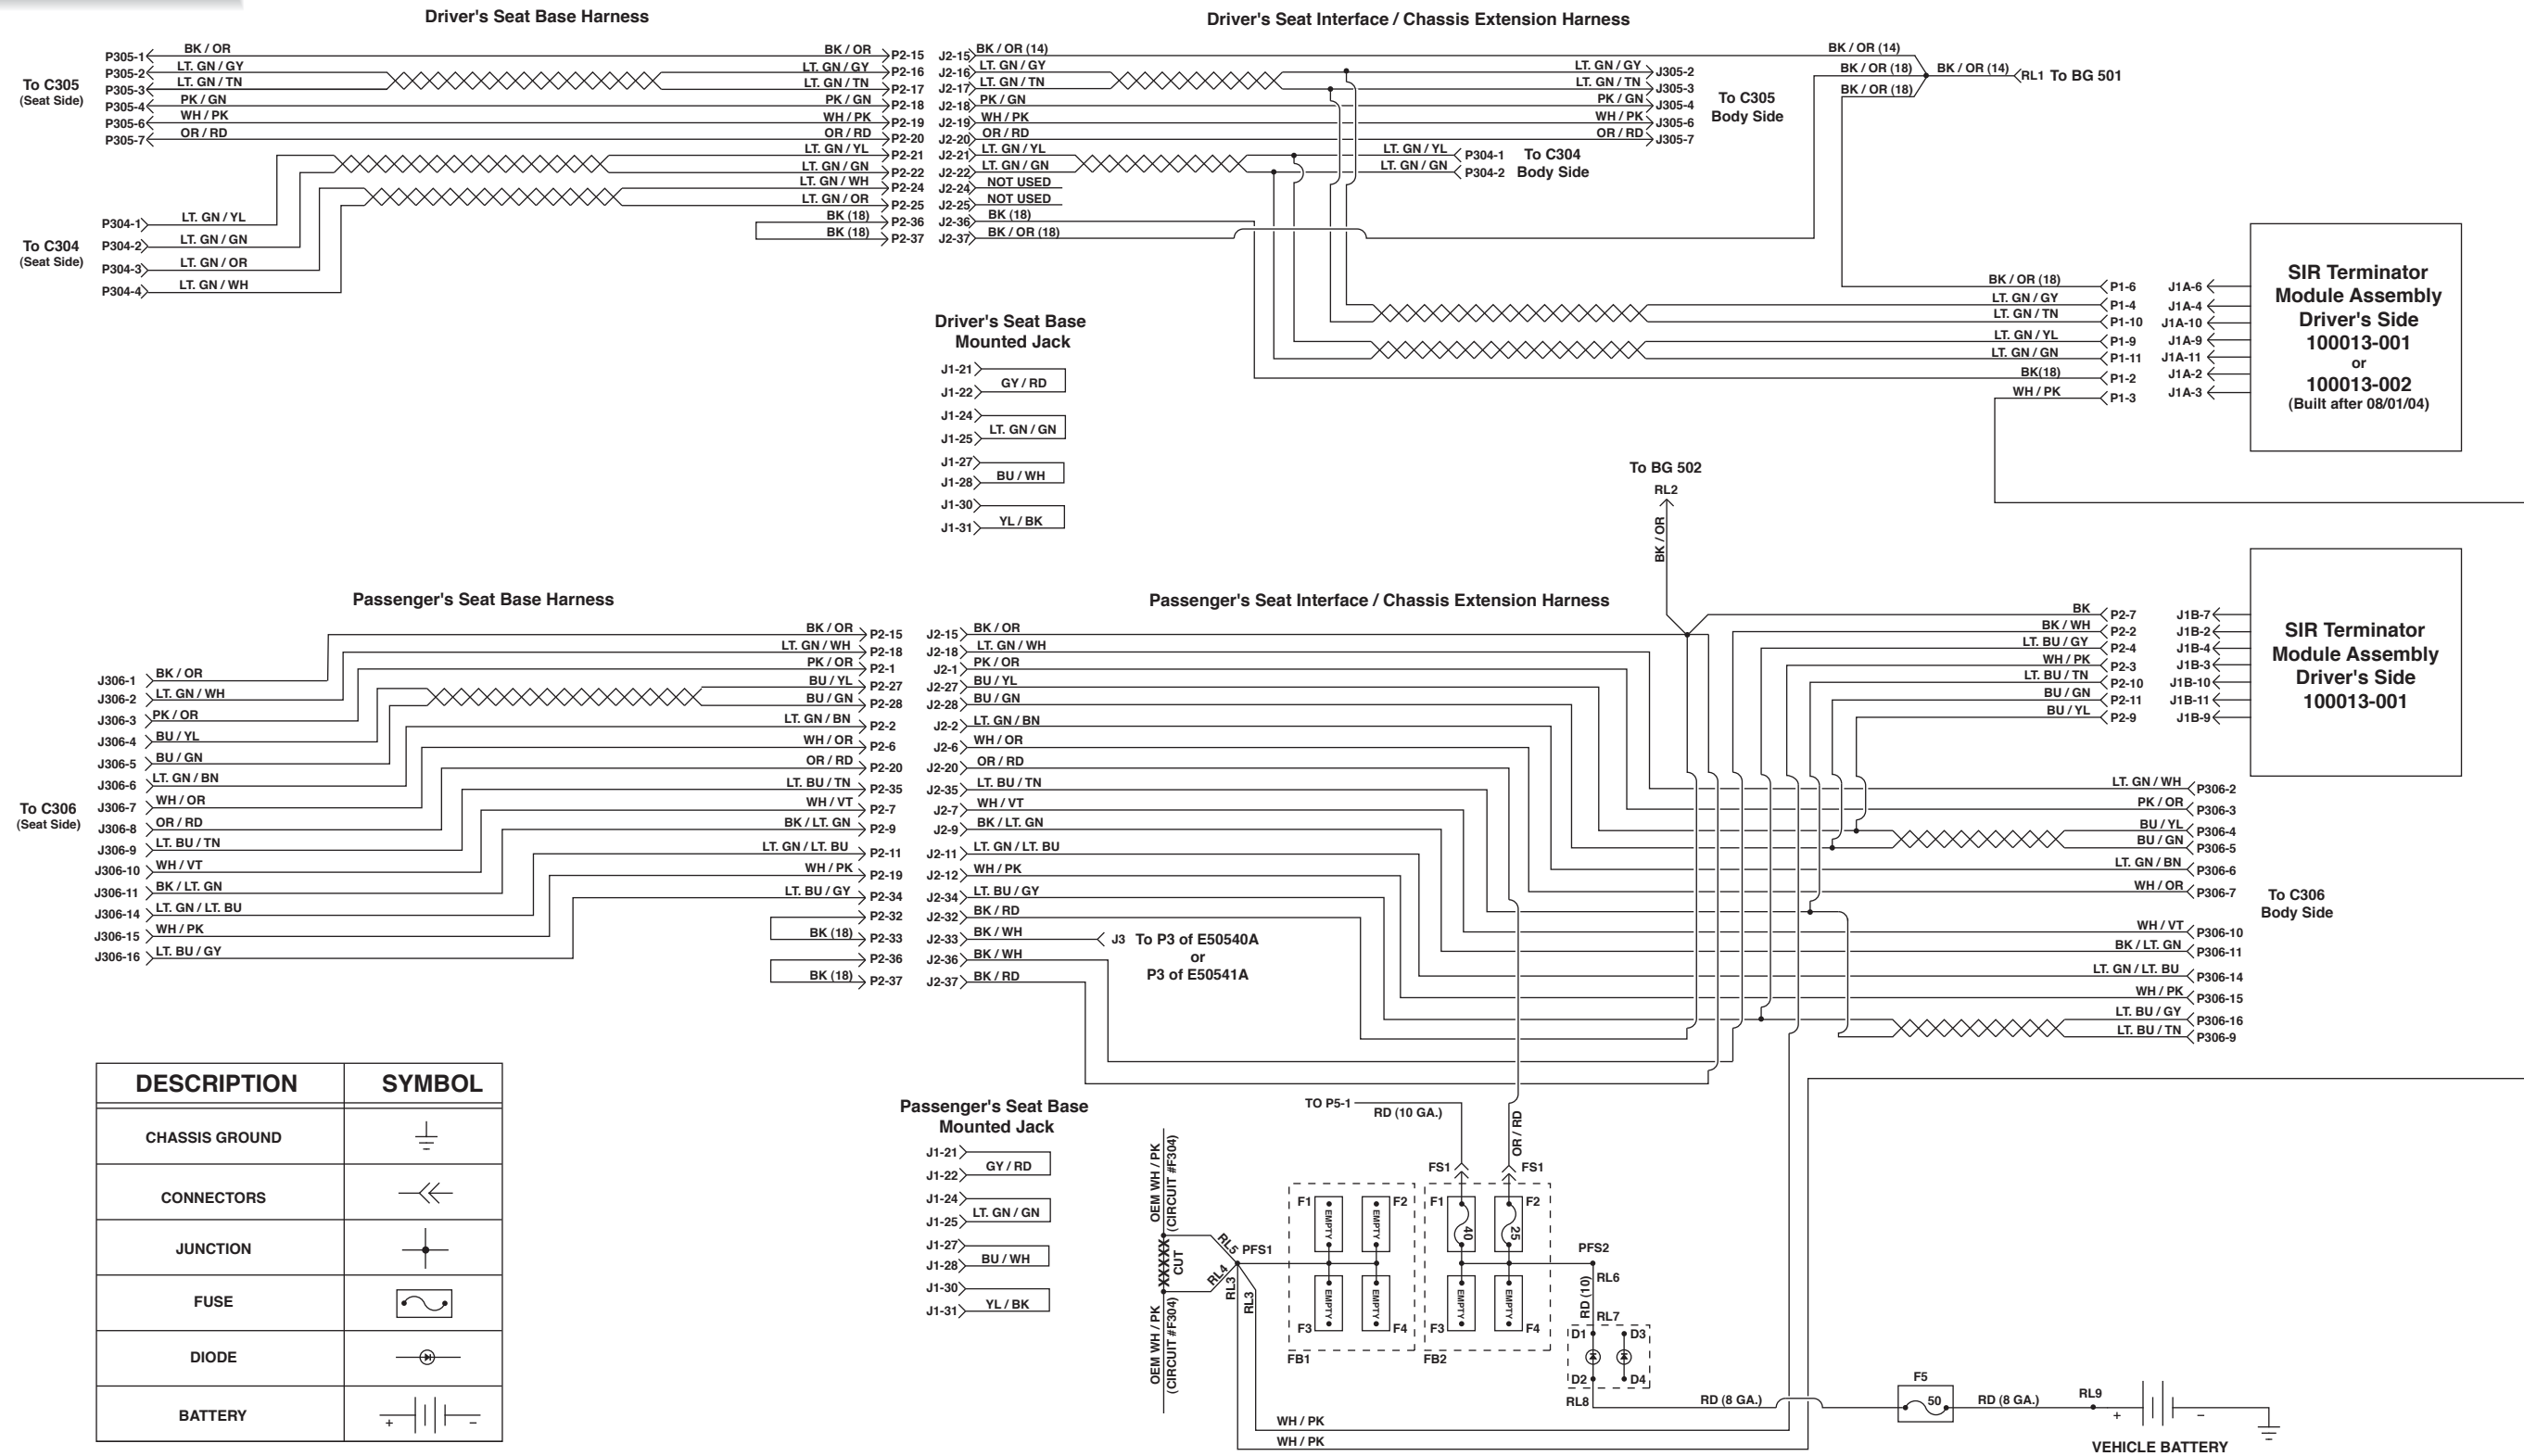


WIRING DIAGRAM - EXTENSIONS - OVERHEAD B PILLAR

Note: Includes up to "0602" conversions.


Wiring Diagram - Extensions - Overhead B-Pillar - Passenger Power Slide Door

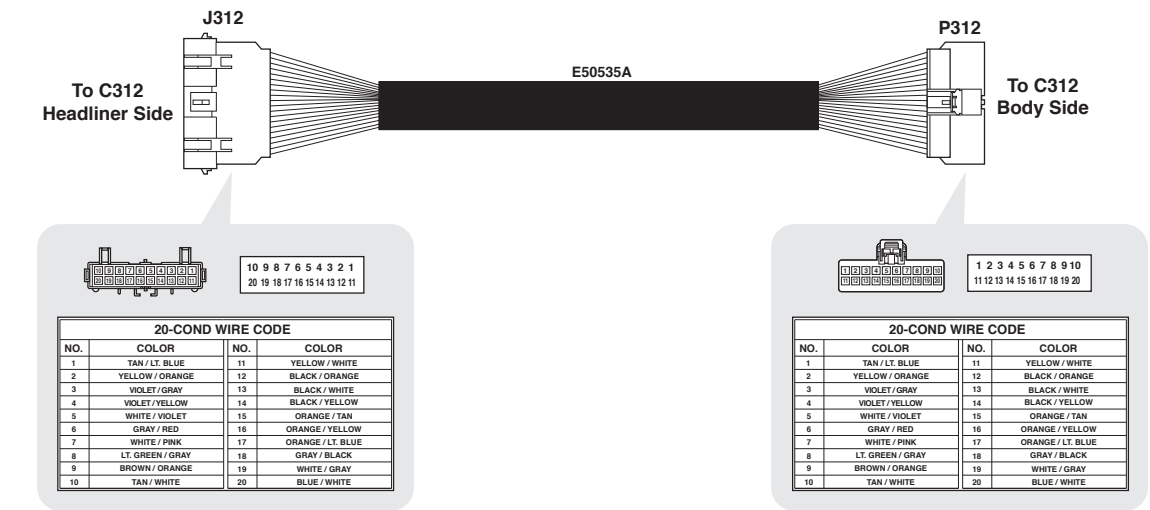


Wiring Diagram - Extensions - Overhead B-Pillar - Passenger Power Slide Door w/ Side Air Bags

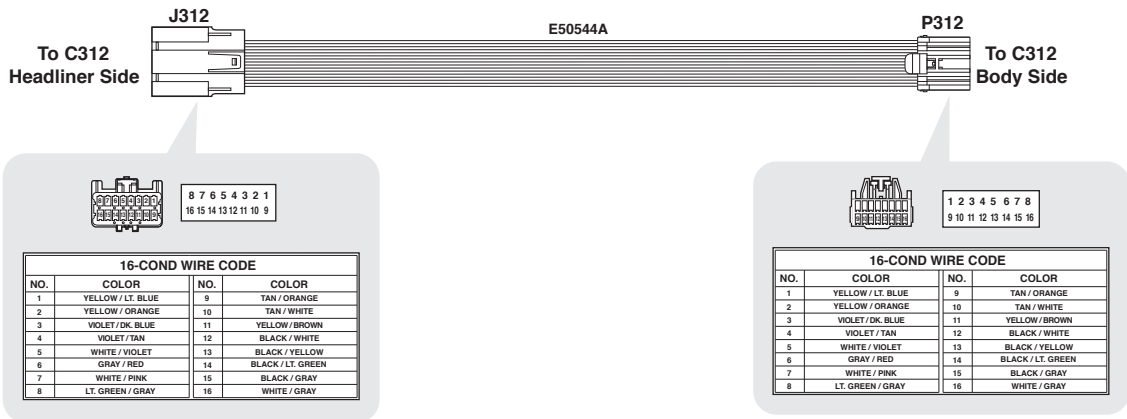


Wiring Diagram - Extensions - Overhead B-Pillar - Passenger Manual To Power Slide Door w/ Side Air Bags

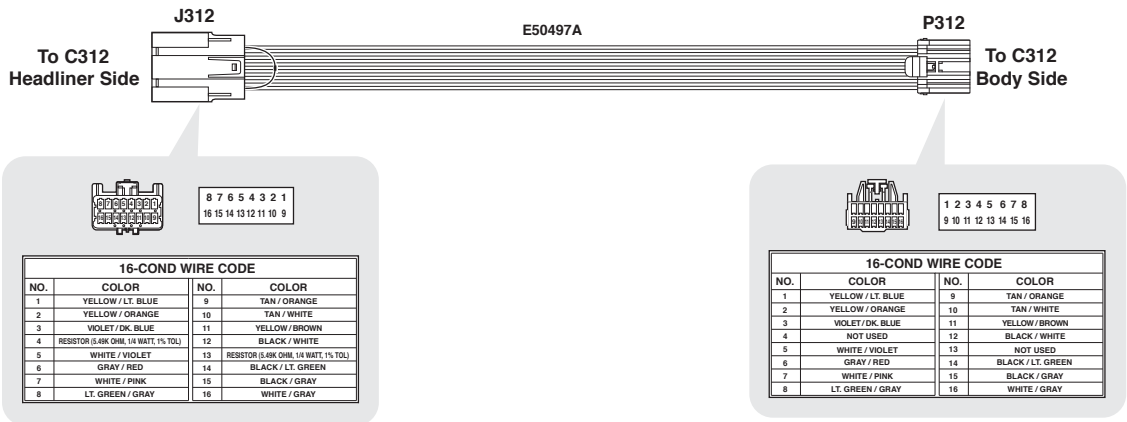

Wiring Diagram - Extensions - Overhead B-Pillar - Passenger Manual To Power Slide Door

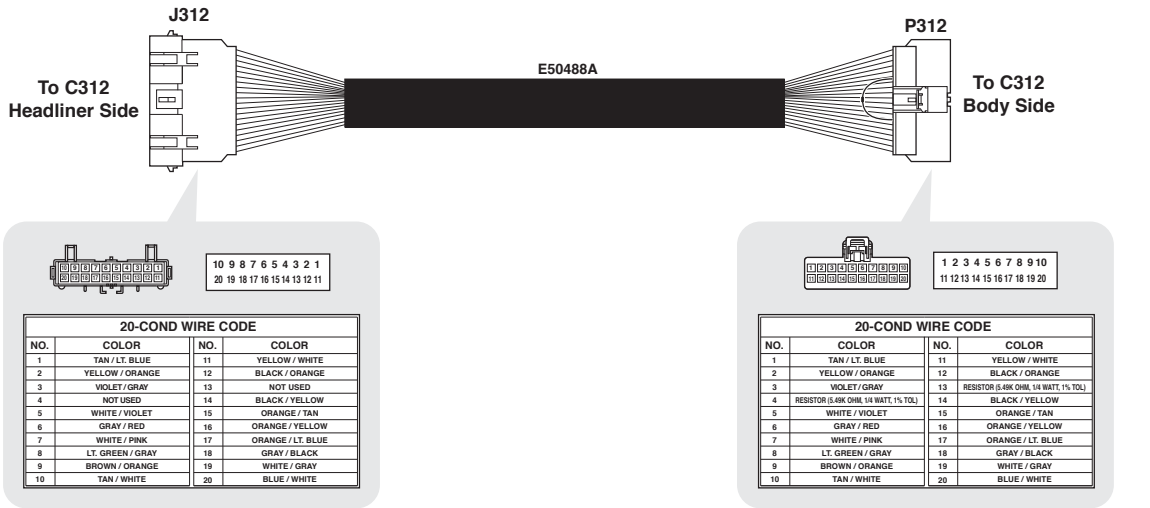

Wiring Diagram - Extensions - Overhead B-Pillar - Driver all Applications

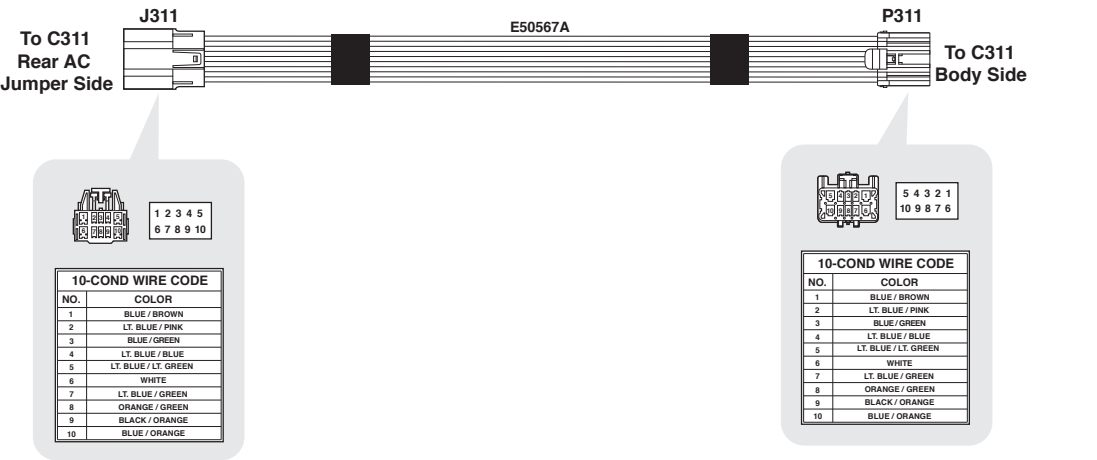


ELECTRICAL SCHEMATIC - EXTENSIONS - OVERHEAD B PILLAR


Note: Includes up to "0602" conversions.

DESCRIPTION	SYMBOL
CONNECTORS	
RESISTOR	


Electrical Schematic - Extensions - Overhead B-Pillar - Passenger Power Slide Door

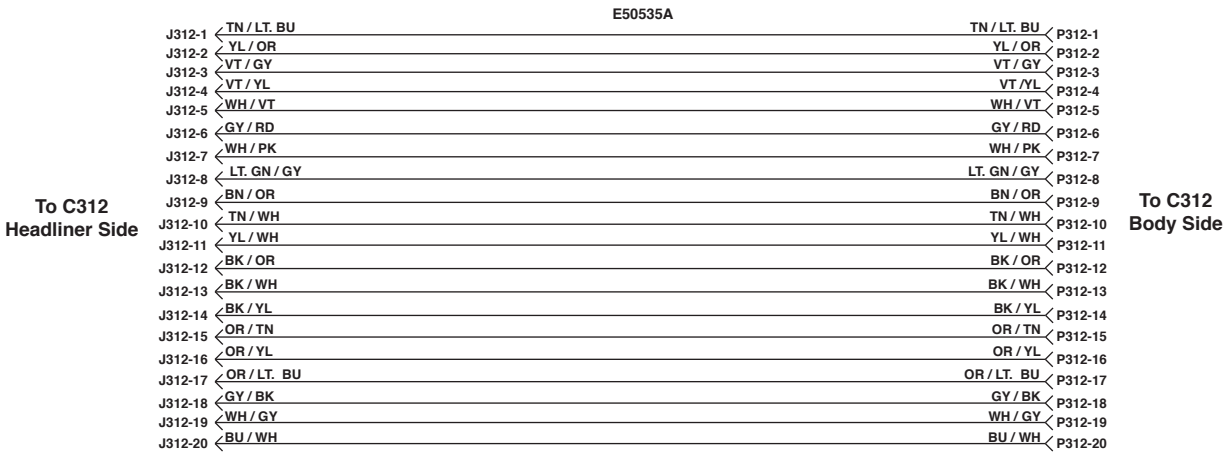


Electrical Schematic - Extensions - Overhead B-Pillar - Passenger Manual To Power Slide Door

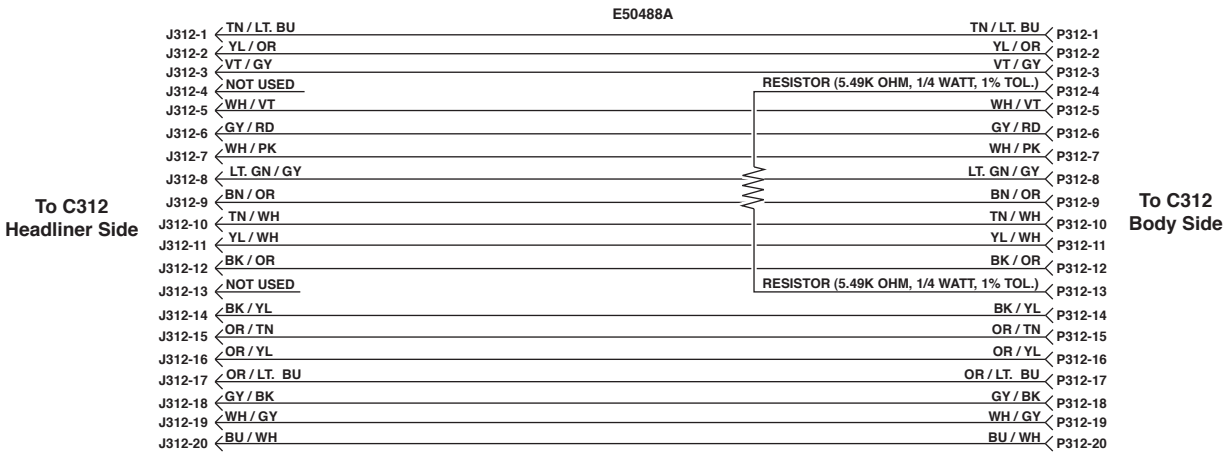


Electrical Schematic - Extensions - Overhead B-Pillar - Passenger Power Slide Door w/ Side Air Bags

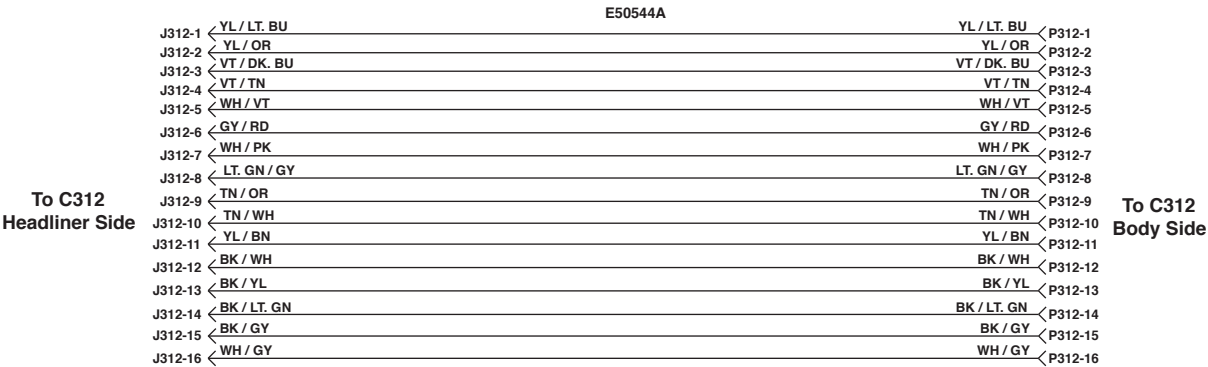

Electrical Schematic - Extensions - Overhead B-Pillar - Passenger Manual To Power Slide Door w/ Side Air Bags

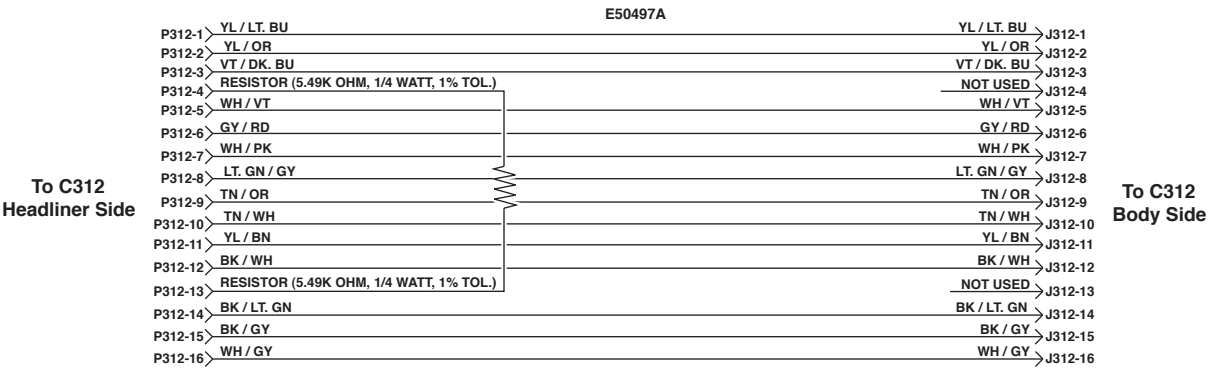


Electrical Schematic - Extensions - Overhead B-Pillar - Driver all Applications

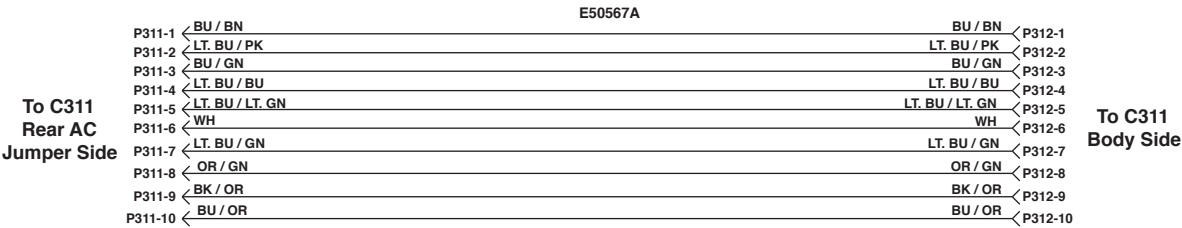


Note: Includes up to "0602" conversions.


Wiring Diagram - Extensions - Driver / Passenger Slide Door - Manual Door

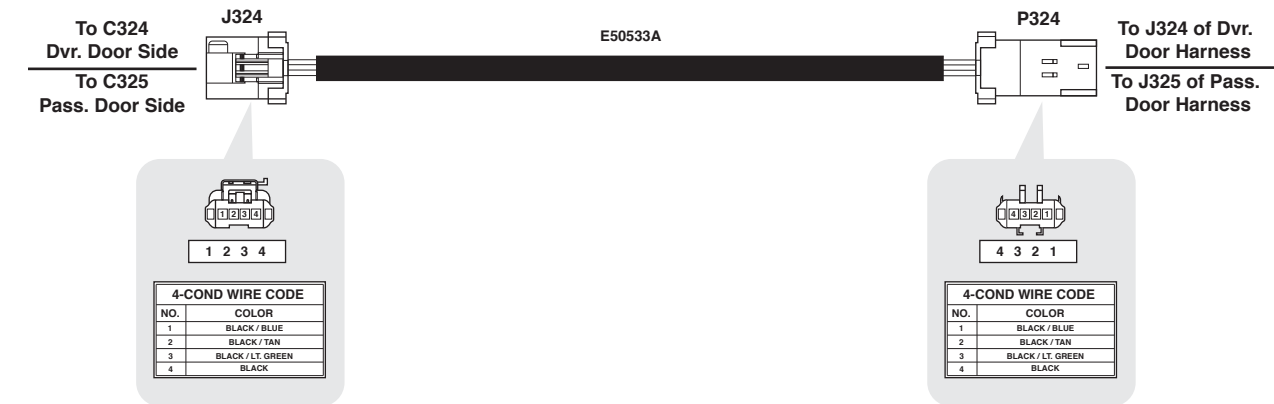


Wiring Diagram - Extensions - Fuel Pump w/ Stow-N-Go Seats

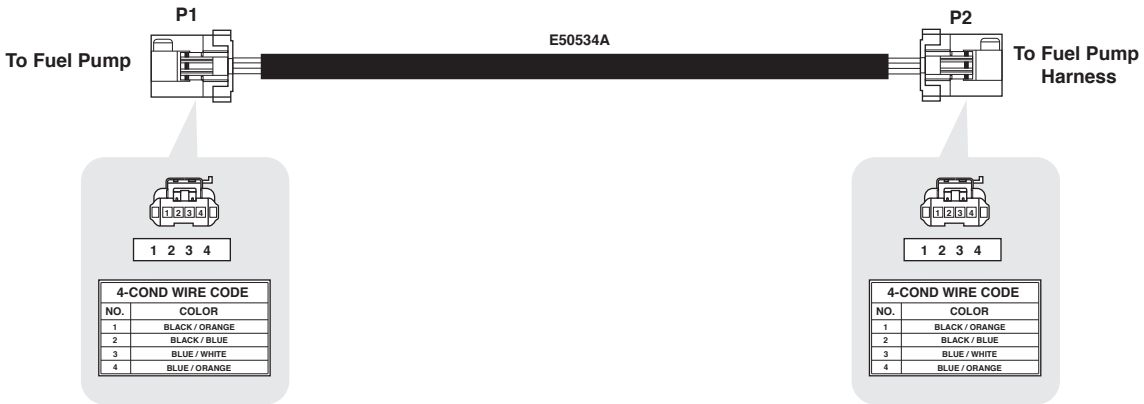

Wiring Diagram - Extensions - Driver / Passenger Slide Door - Power Door

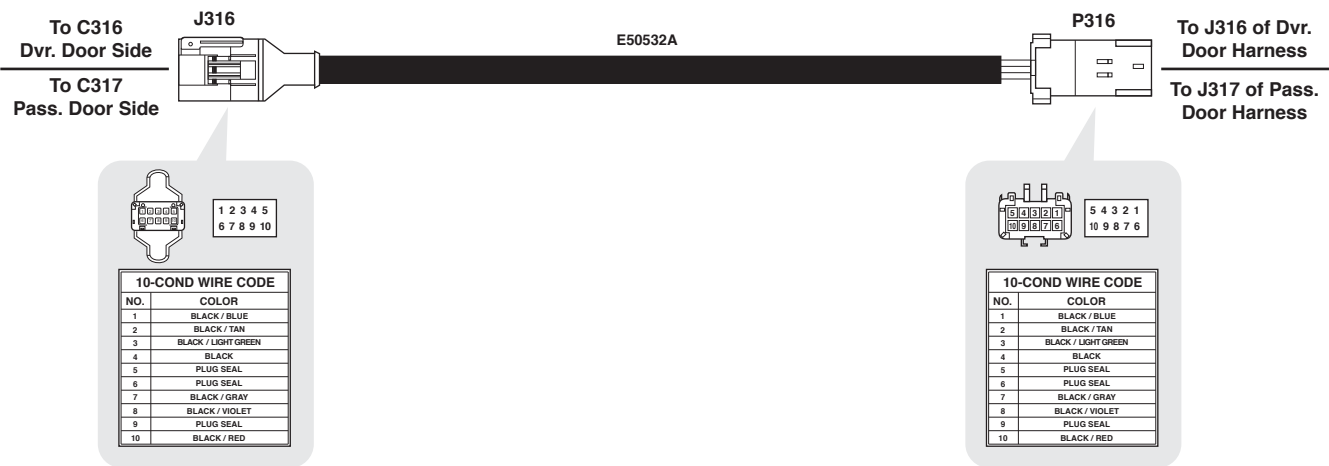

Wiring Diagram - Extensions - Fuel Pump w/o Stow-N-Go Seats

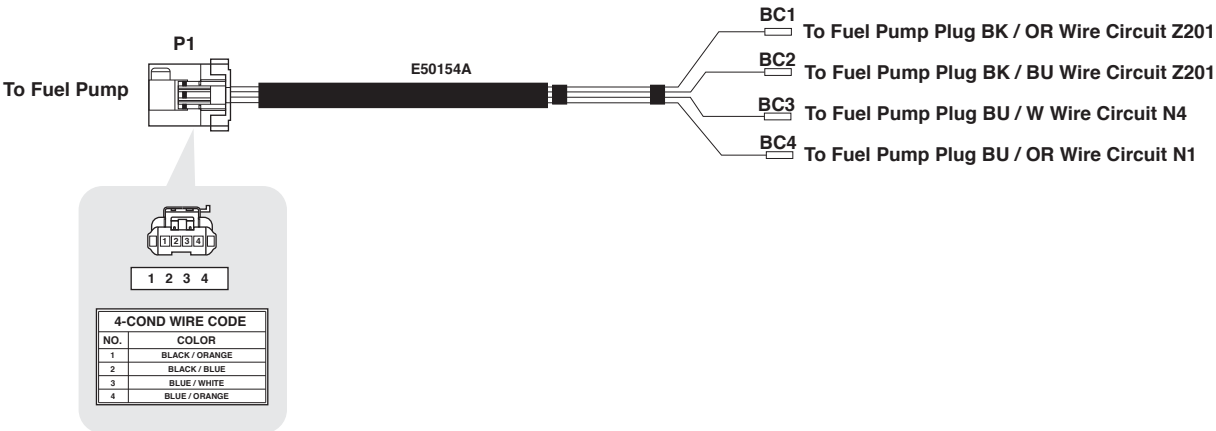


Unfold For:
Wiring Diagram
Extensions
Driver / Passenger Slide Door
Fuel Pump


ELECTRICAL SCHEMATIC - EXTENSIONS - DRIVER / PASSENGER SLIDE DOOR - FUEL PUMP

Note: Includes up to "0602" conversions.

 
Electrical Schematic - Extensions - Driver / Passenger Slide Door - Manual Door



 
Electrical Schematic - Extensions - Fuel Pump w/ Stow-N-Go Seats



Electrical Schematic - Extensions - Driver / Passenger Slide Door - Power Door

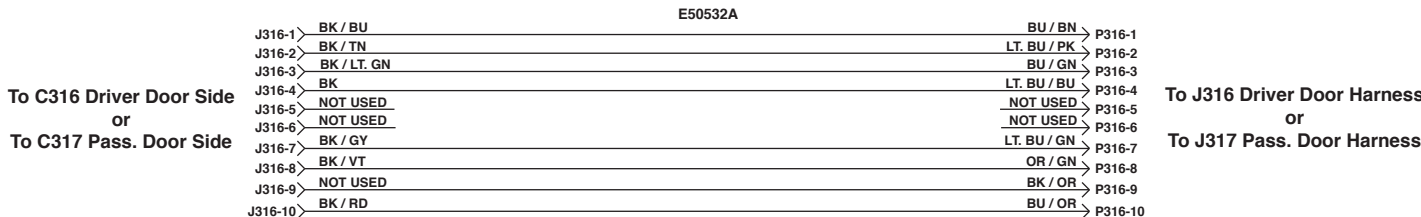

 
Electrical Schematic - Extensions - Fuel Pump w/o Stow-N-Go Seats




DESCRIPTION	SYMBOL
CONNECTORS	

Note: Includes up to "0602" conversions.


Wiring Diagram - Extensions - B-Pillar - Passenger Open / Close Switch

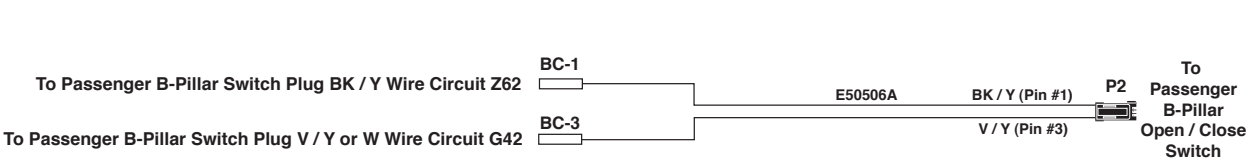


Wiring Diagram - Extensions - Driver Side Air Bag Sensor

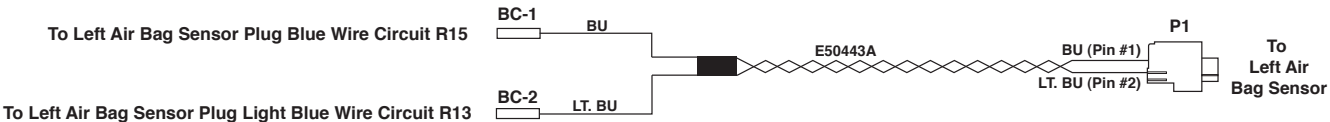

Wiring Diagram - Extensions - Driver / Passenger Power Slide Full Open Switch

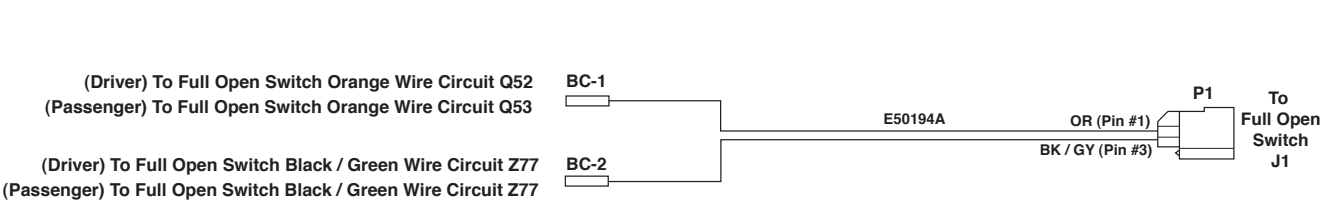

Wiring Diagram - Extensions -Passenger Side Air Bag Sensor

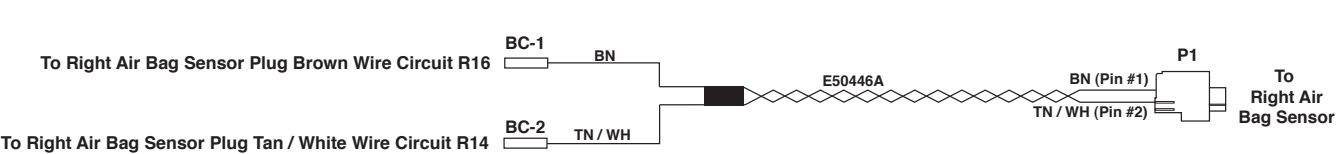


Unfold For:
Wiring Diagram
Extensions
B-pillar Switch
Full Open Switch
Air Bag Sensor


ELECTRICAL SCHEMATIC - EXTENSIONS - B PILLAR SWITCH - FULL OPEN SWITCH - AIR BAG SENSOR

Note: Includes up to "0602" conversions.

 
Electrical Schematic - Extensions - B-Pillar - Passenger Open / Close Switch



 
Electrical Schematic - Extensions - Driver Side Air Bag Sensor



 Electrical Schematic - Extensions - Driver / Passenger Power Slide Full Open Switch



 
Electrical Schematic - Extensions -Passenger Side Air Bag Sensor



DESCRIPTION	SYMBOL
CONNECTORS	—<<
TWISTED WIRES	≍≍≍≍

WIRING DIAGRAM - EXTENSIONS - DRIVER SLIDE DOOR

Note: Includes up to "0602" conversions.

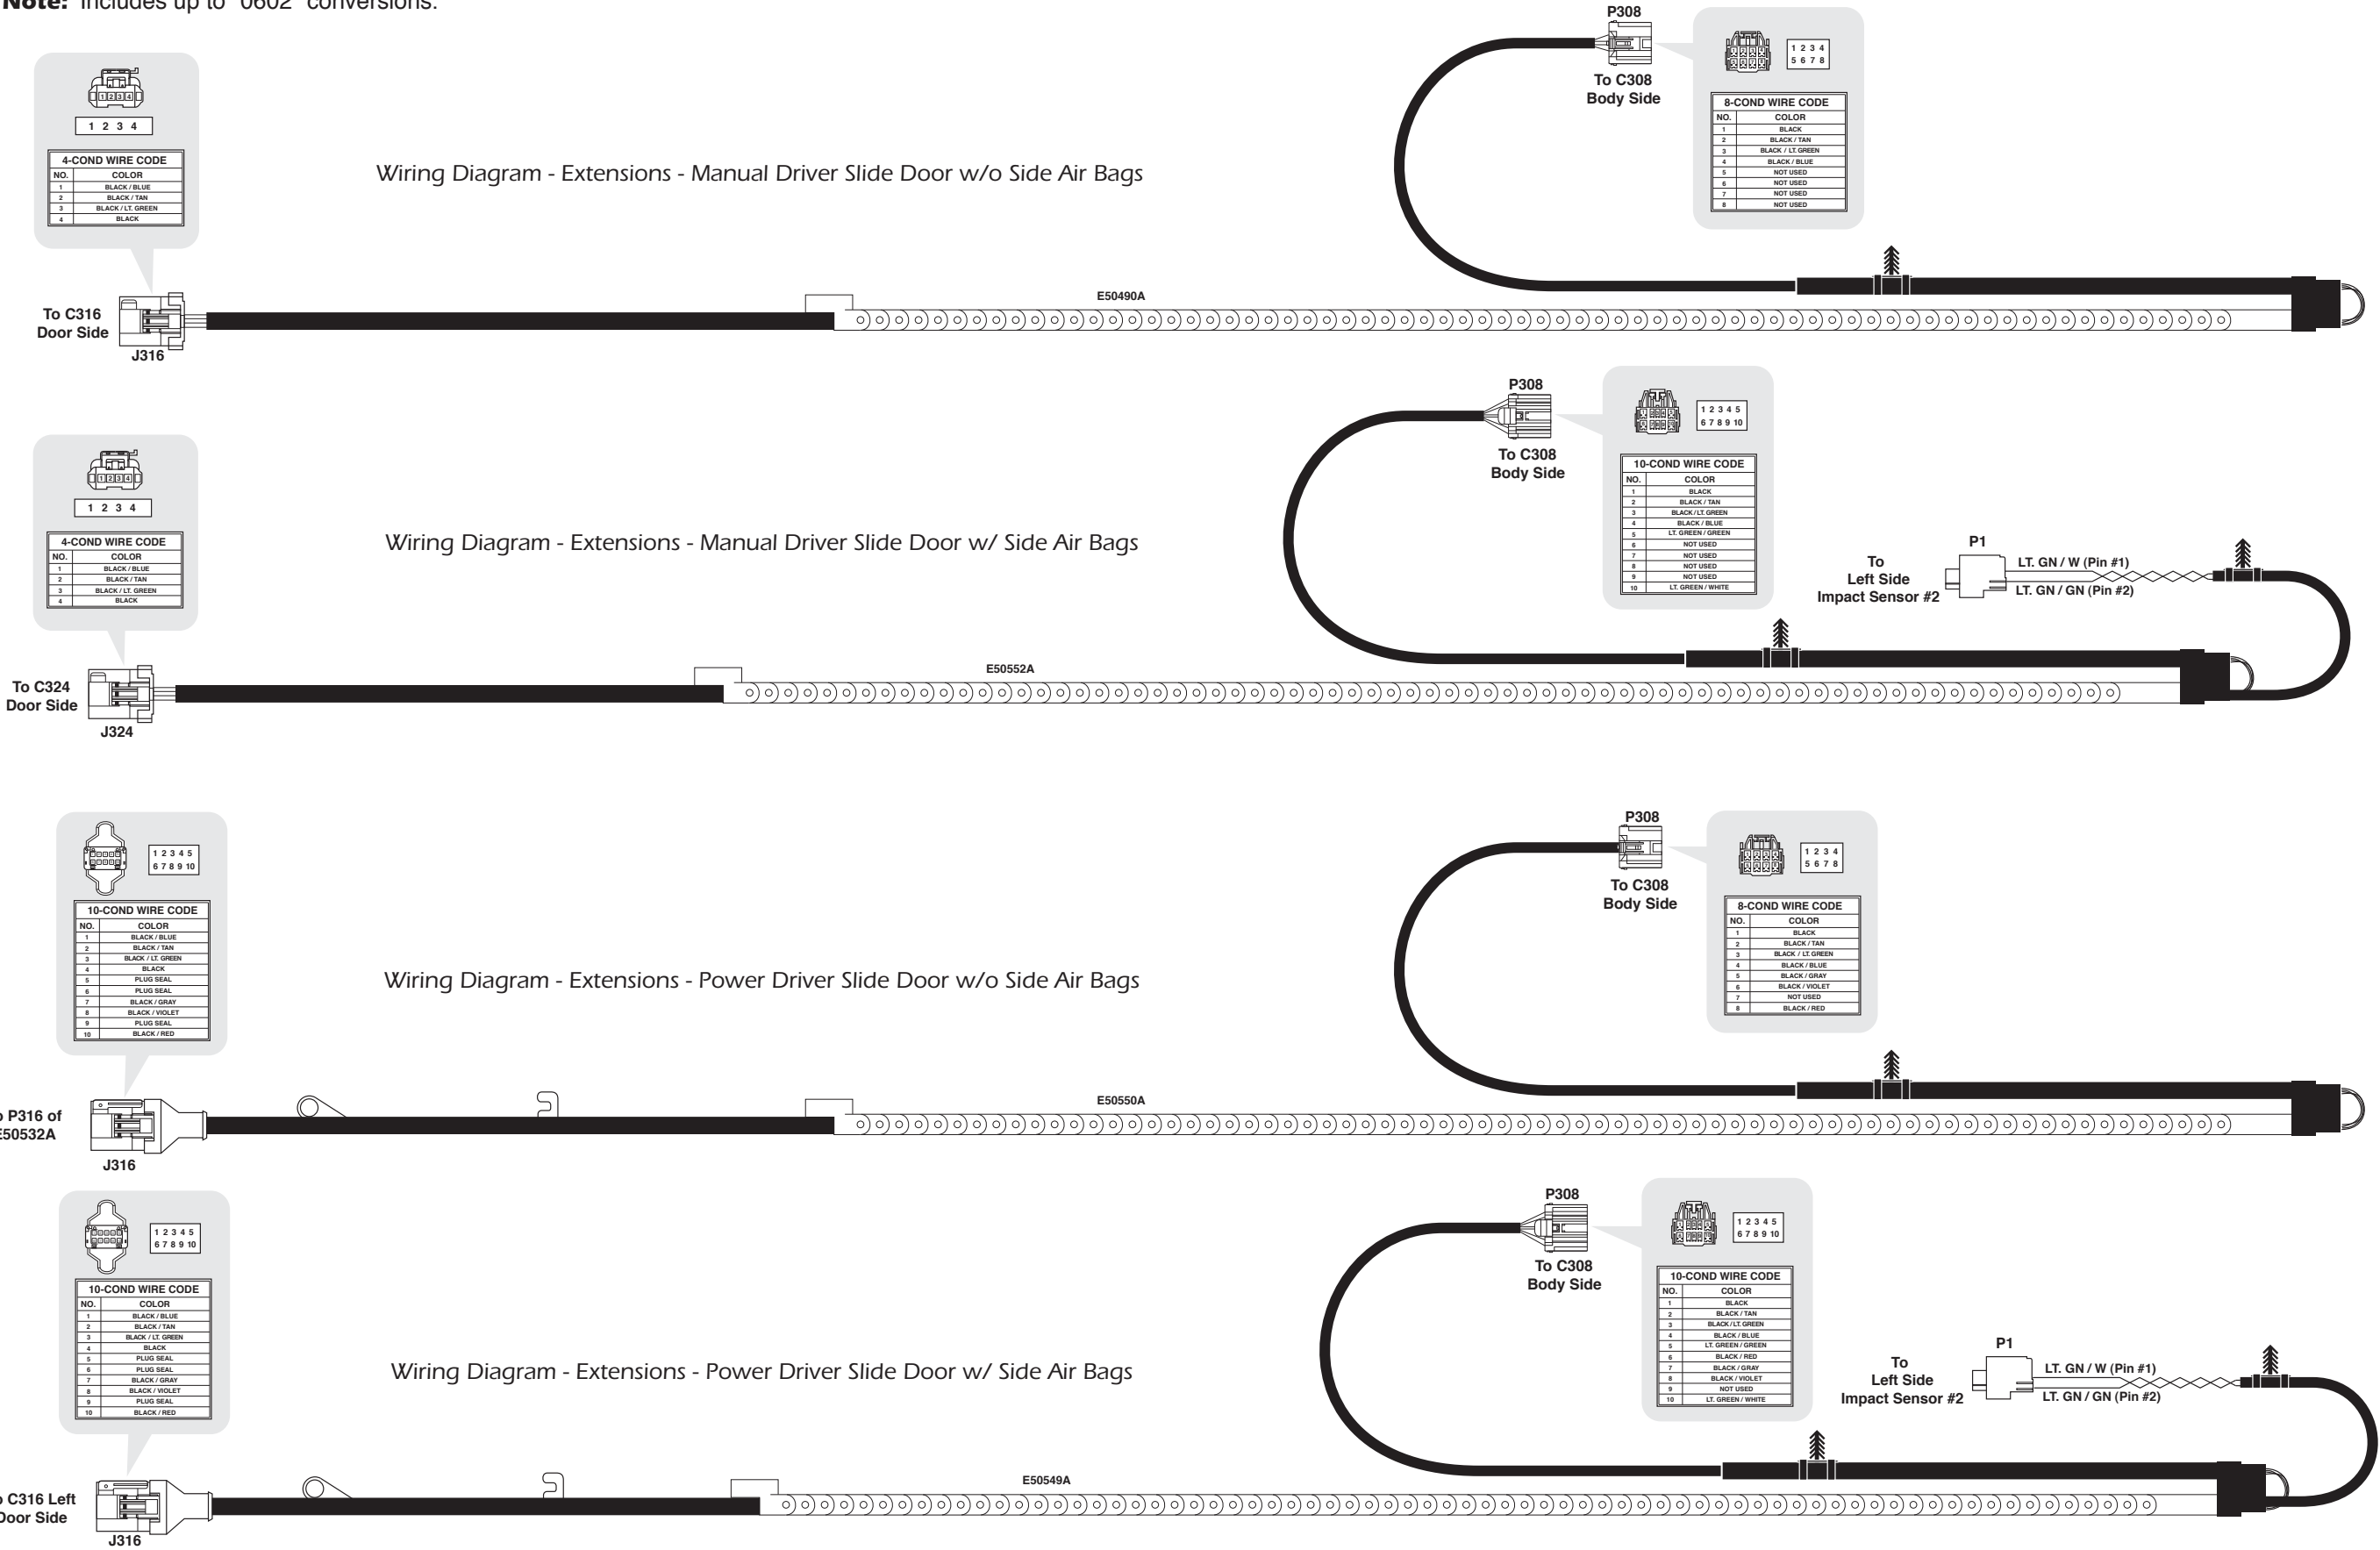


Unfold for:
Wiring Diagram
Extensions
Driver Slide Door


ELECTRICAL SCHEMATIC - EXTENSIONS - DRIVER SLIDE DOOR

Note: Includes up to "0602" conversions.


Electrical Schematic - Extensions - Manual Driver Slide Door w/o Side Air Bags

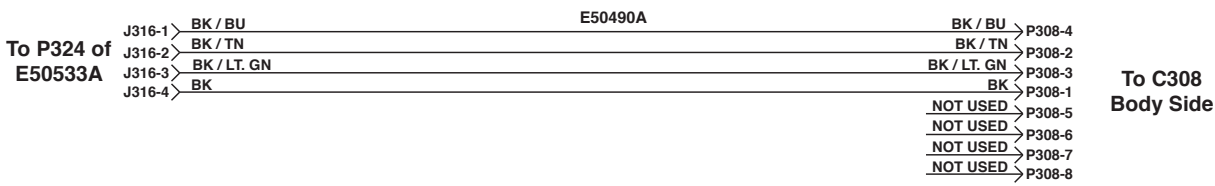


Electrical Schematic - Extensions - Power Driver Slide Door w/o Side Air Bags

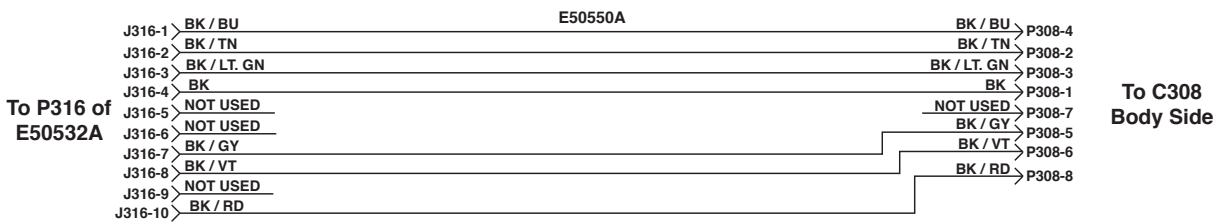

Electrical Schematic - Extensions - Manual Driver Slide Door w/ Side Air Bags

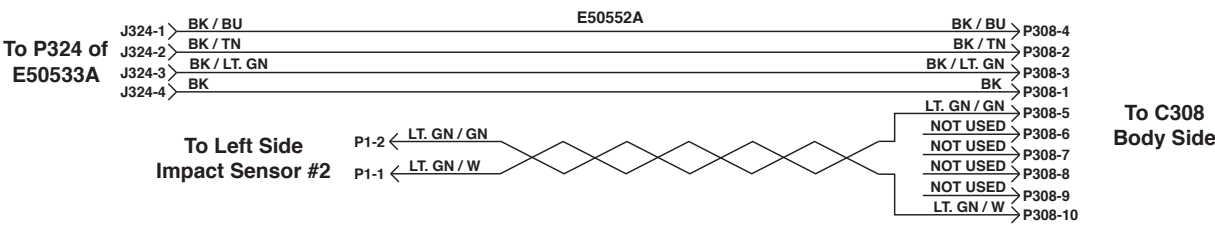


Electrical Schematic - Extensions - Power Driver Slide Door w/ Side Air Bags

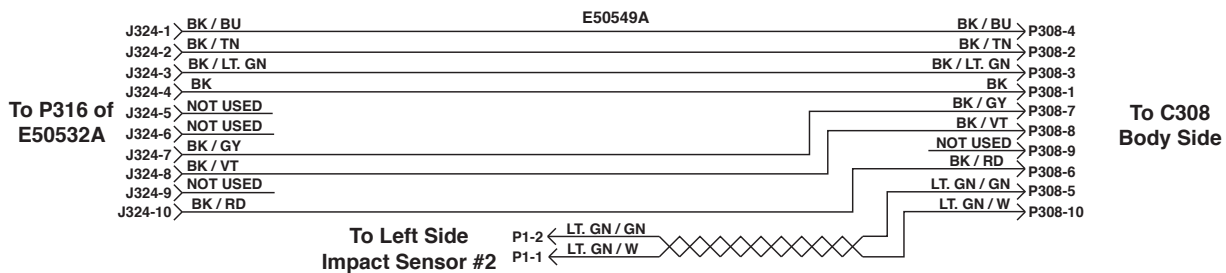

DESCRIPTION	SYMBOL
CONNECTORS	⌵⌵
TWISTED WIRES	⌵⌵⌵⌵

Note: Includes up to "0602" conversions.

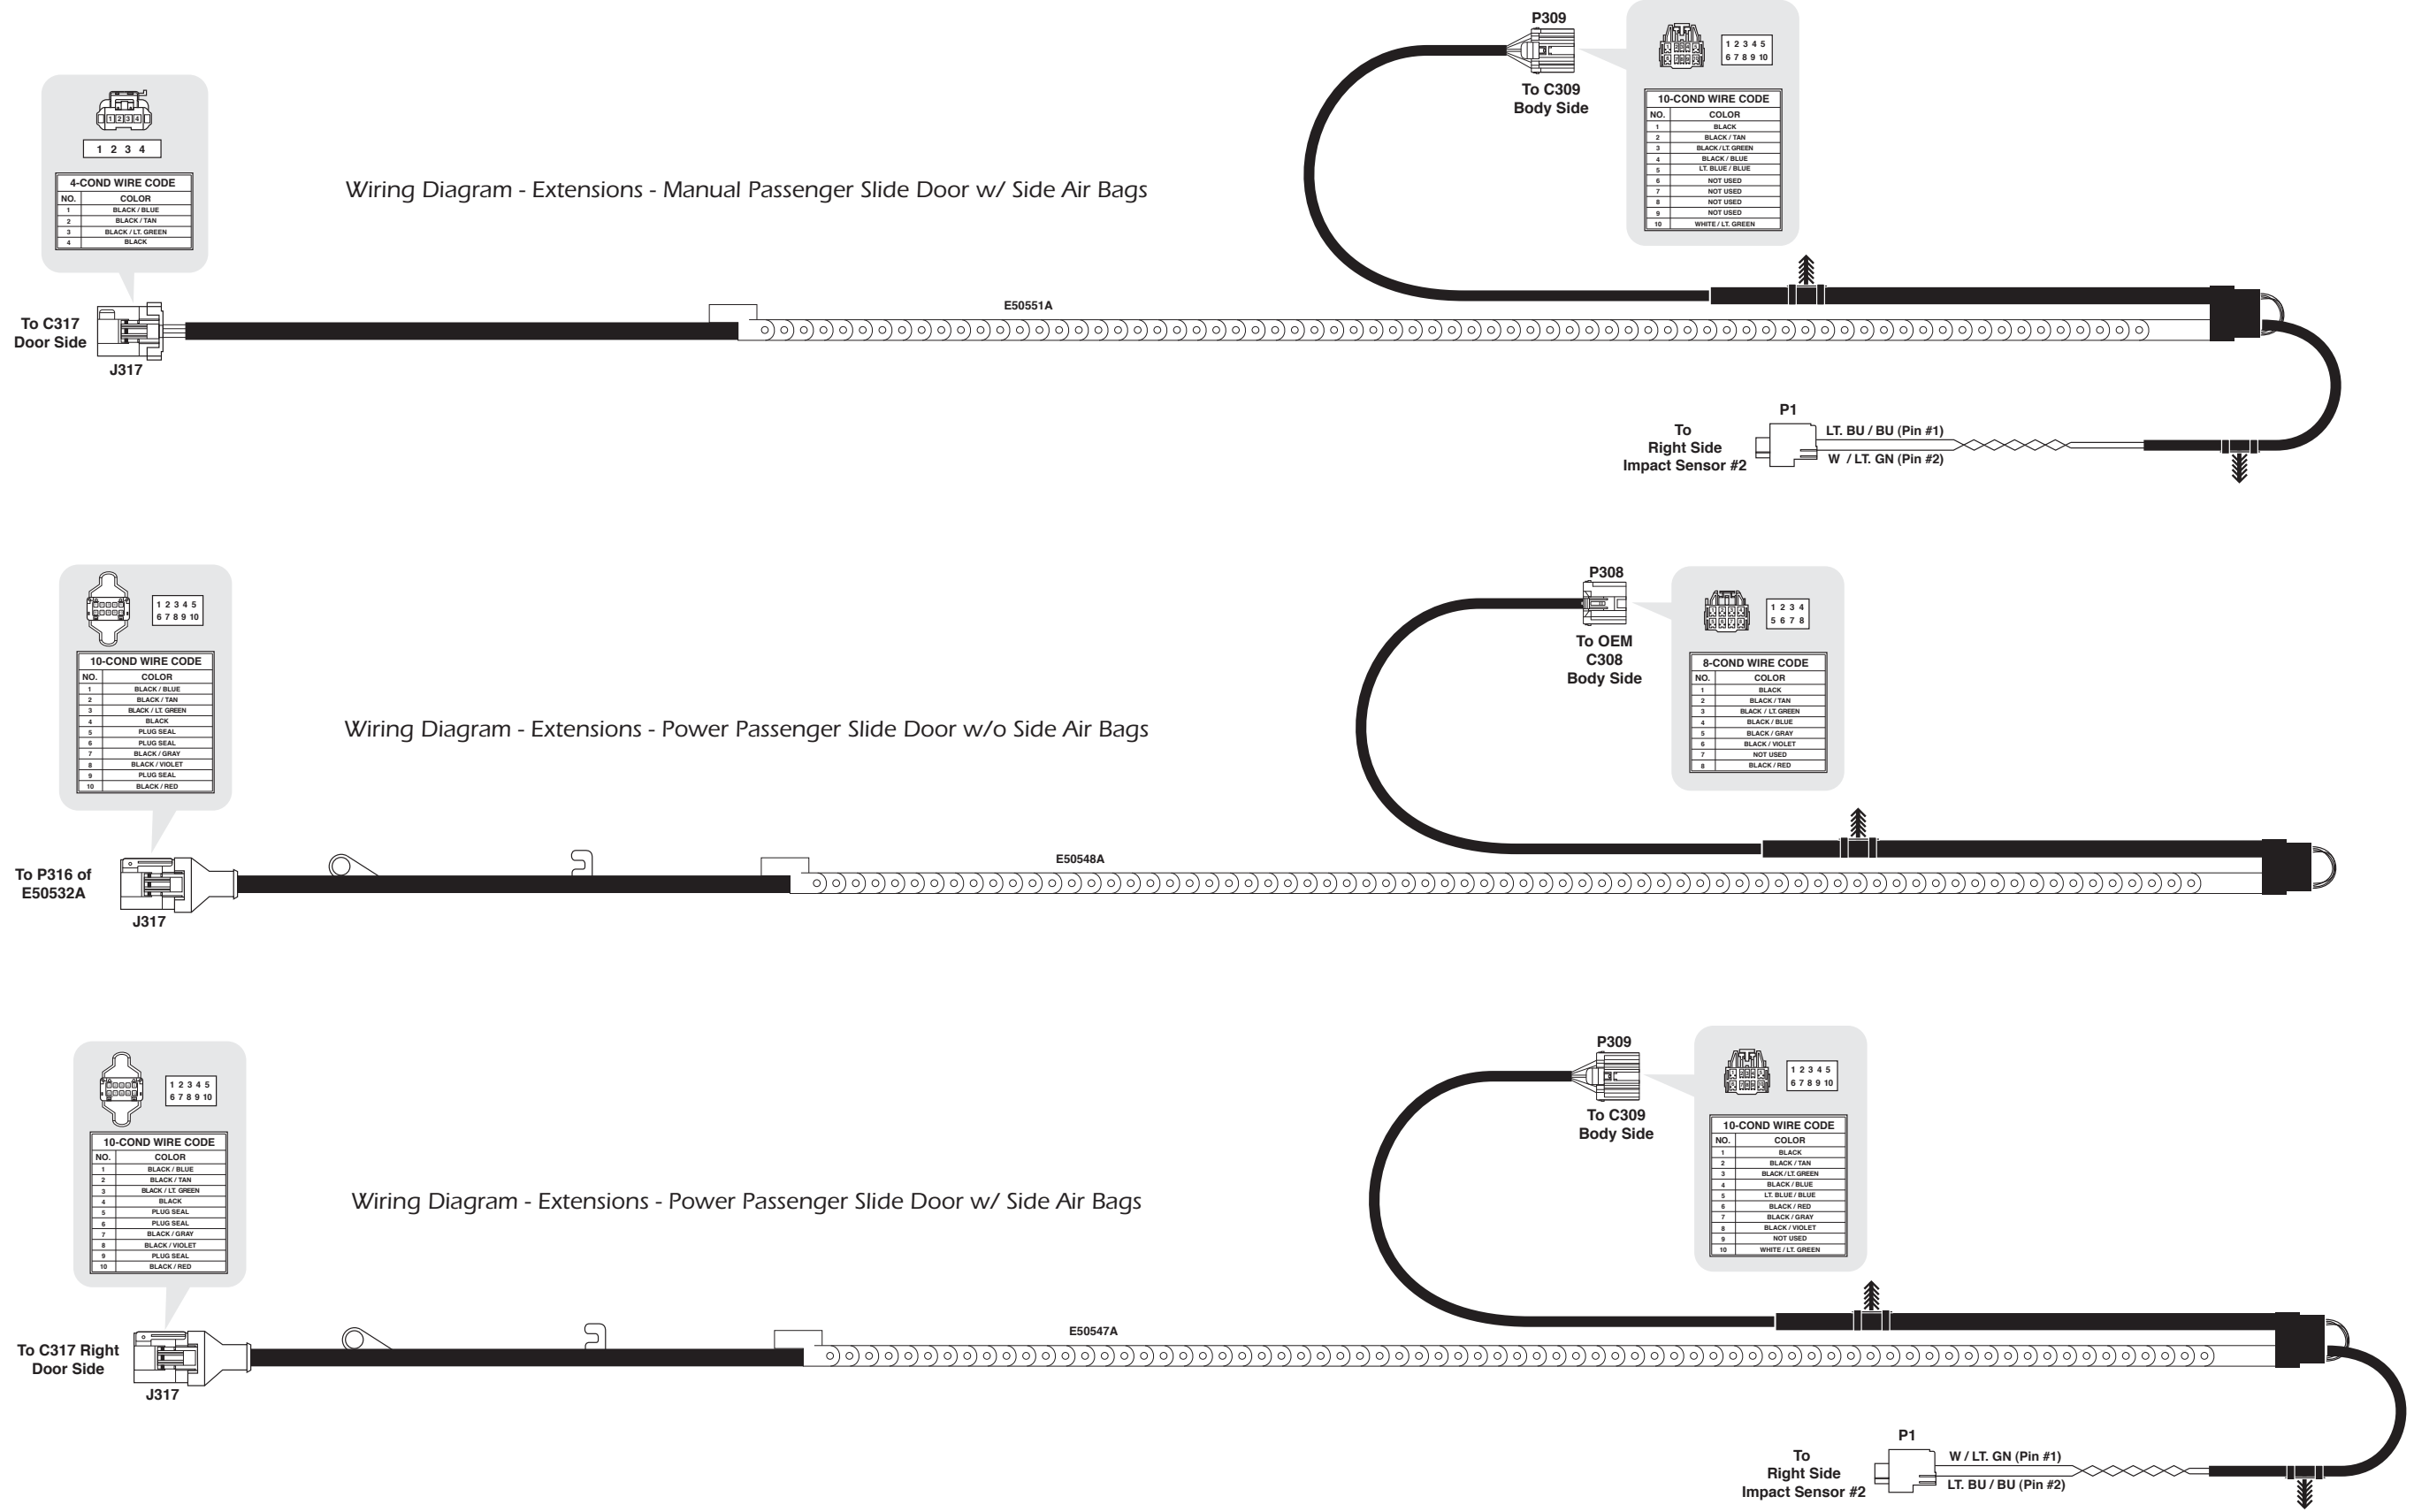


Unfold For:
Wiring Diagram
Extensions
Passenger Slide Door


ELECTRICAL SCHEMATIC - EXTENSIONS - PASSENGER SLIDE DOOR

Note: Includes up to "0602" conversions.


Electrical Schematic - Extensions - Power Passenger Slide Door w/ Side Air Bags

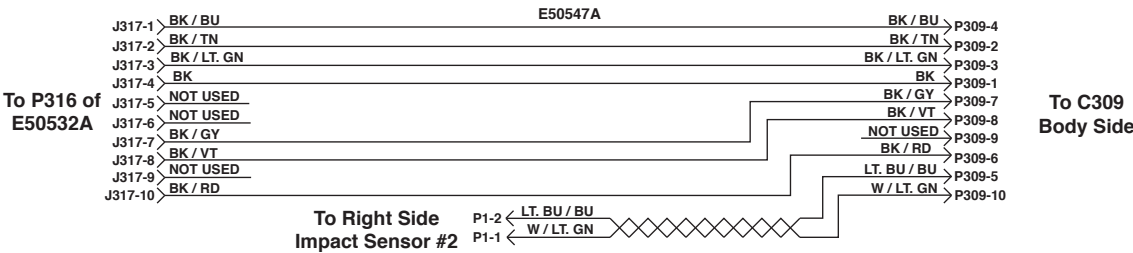

Electrical Schematic - Extensions - Manual Passenger Slide Door w/ Side Air Bags

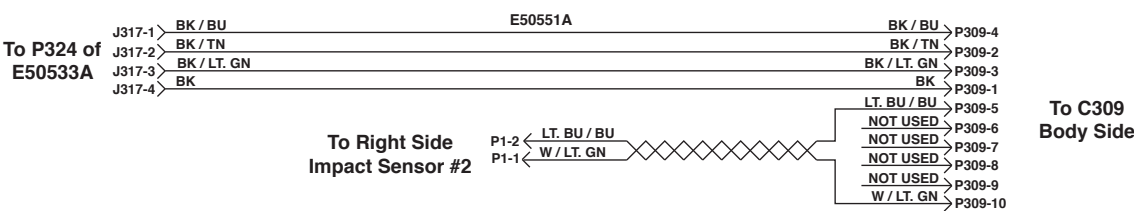

Electrical Schematic - Extensions - Power Passenger Slide Door w/o Side Air Bags

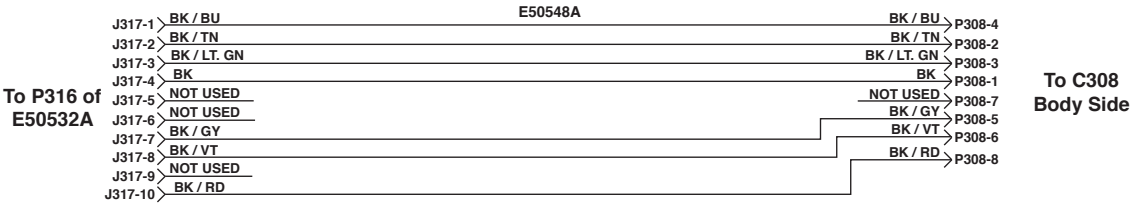

"Providing Access to the World"®



**Over 300 Braun
Dealers Worldwide**

 **THE BRAUN
CORPORATION®**
"Providing Access to the World"



International Corporate Hdqrs: P.O. Box 310 Winamac, IN 46996 USA
1-800-THE LIFT® (574) 946-6153 FAX: (574) 946-4670



Because Life is a Moving Experience

34852
October 2008



International Corporate Hdqrs: P.O. Box 310 Winamac, IN 46996 USA
1-800-THE LIFT® (574) 946-6153 FAX: (574) 946-4670
braunmobility.com™ Patent #6,825,628 B2 entervan.com™

All illustrations, descriptions and specifications in this manual are based on the latest product information available at the time of publication. The Braun Corporation reserves the right to make changes at any time without notice.

Braun Lowered Floor Conversions:
2006 & 2007 Chrysler Minivans