




DEPLOY

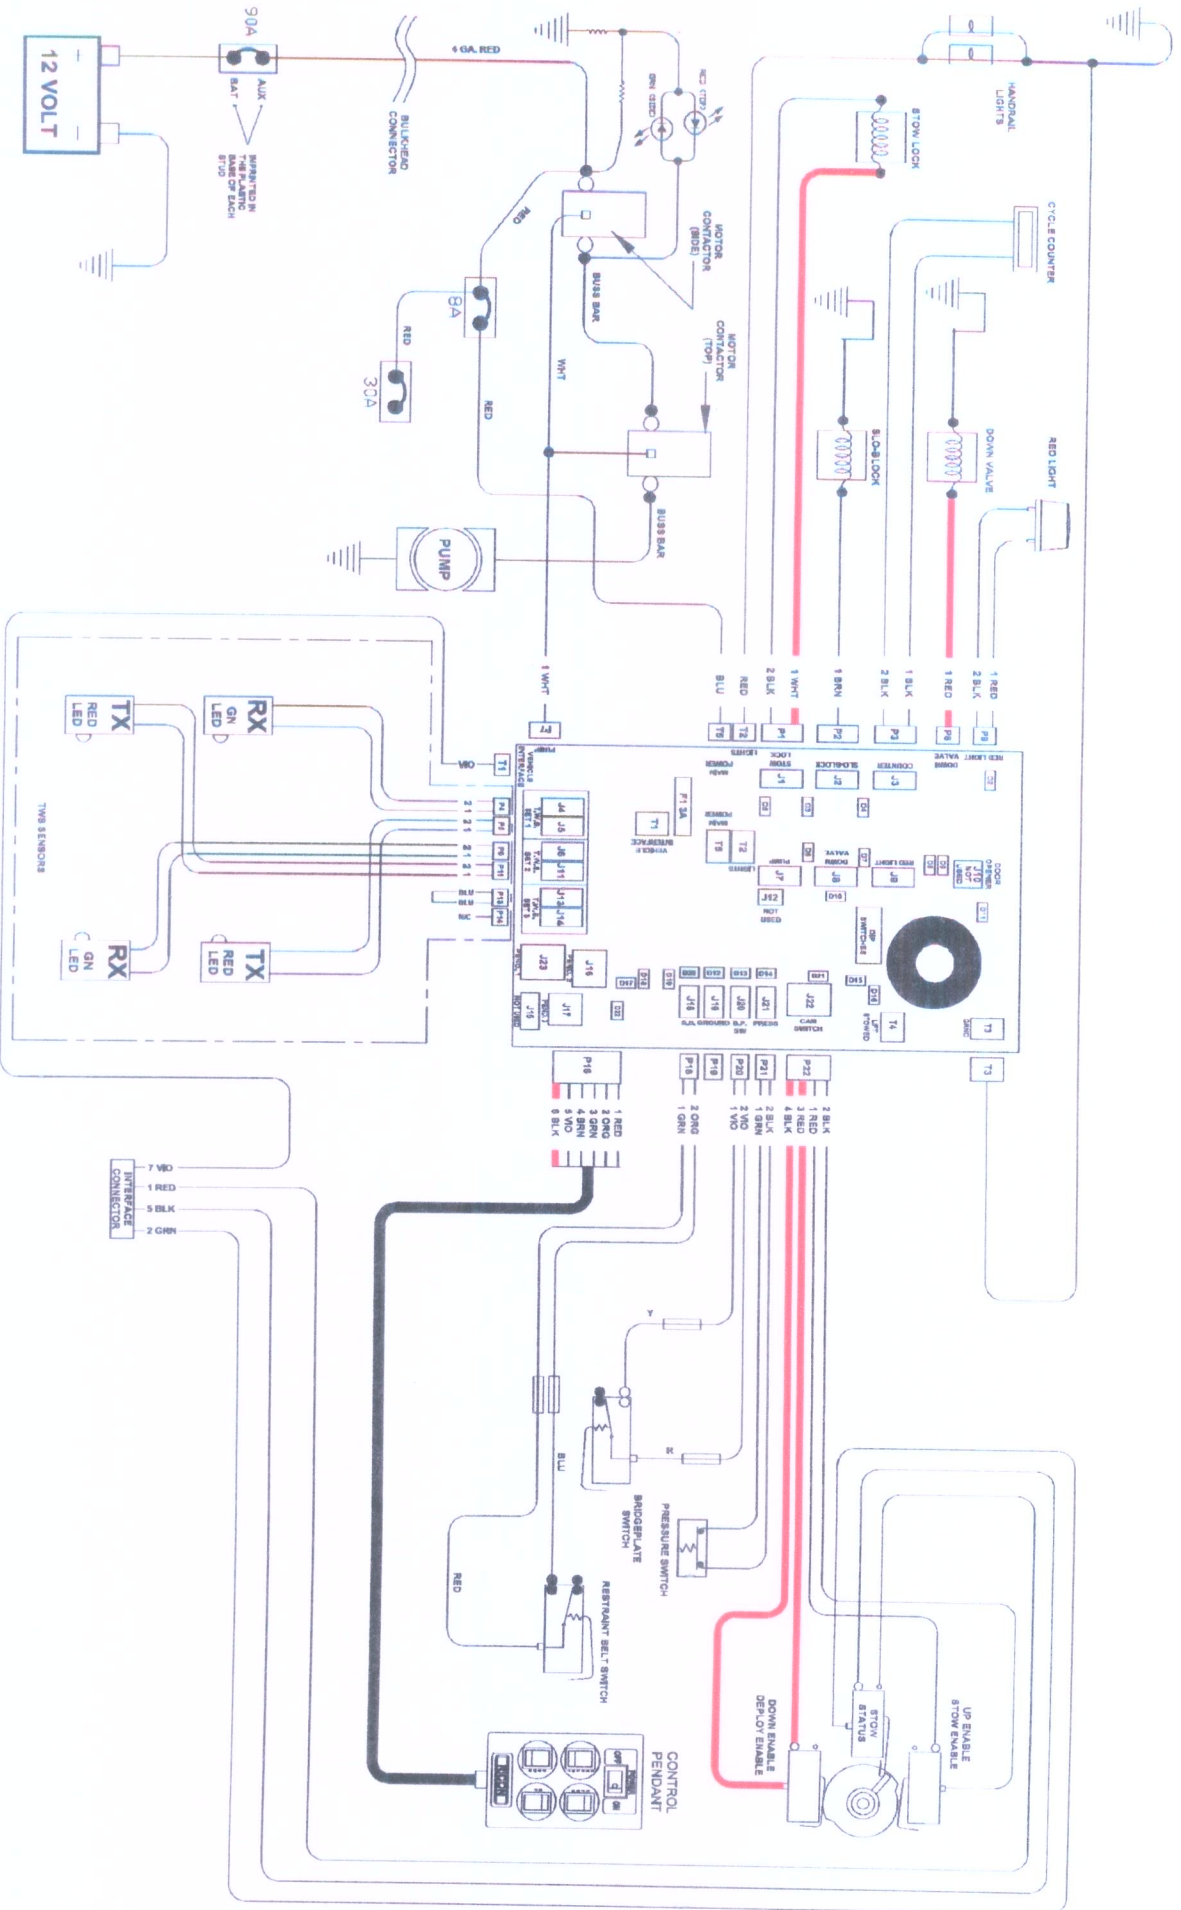



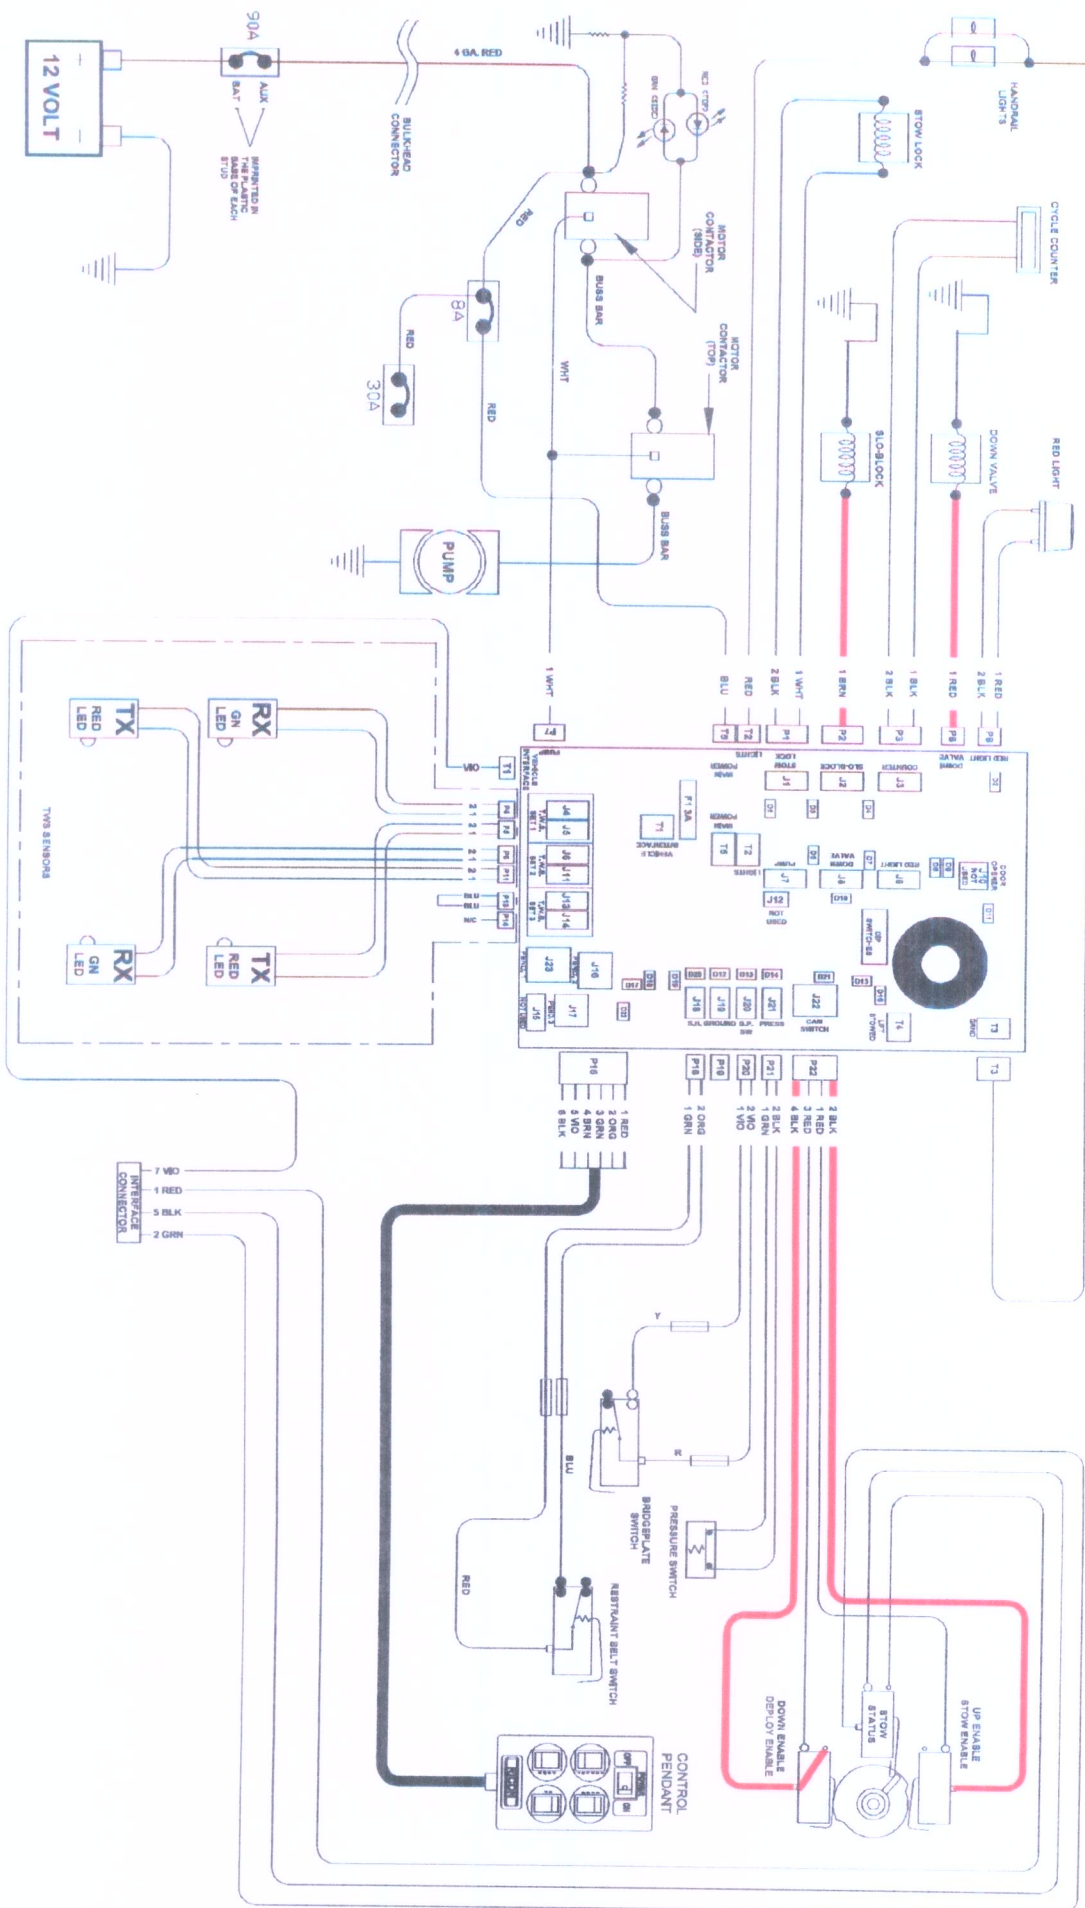

STOW

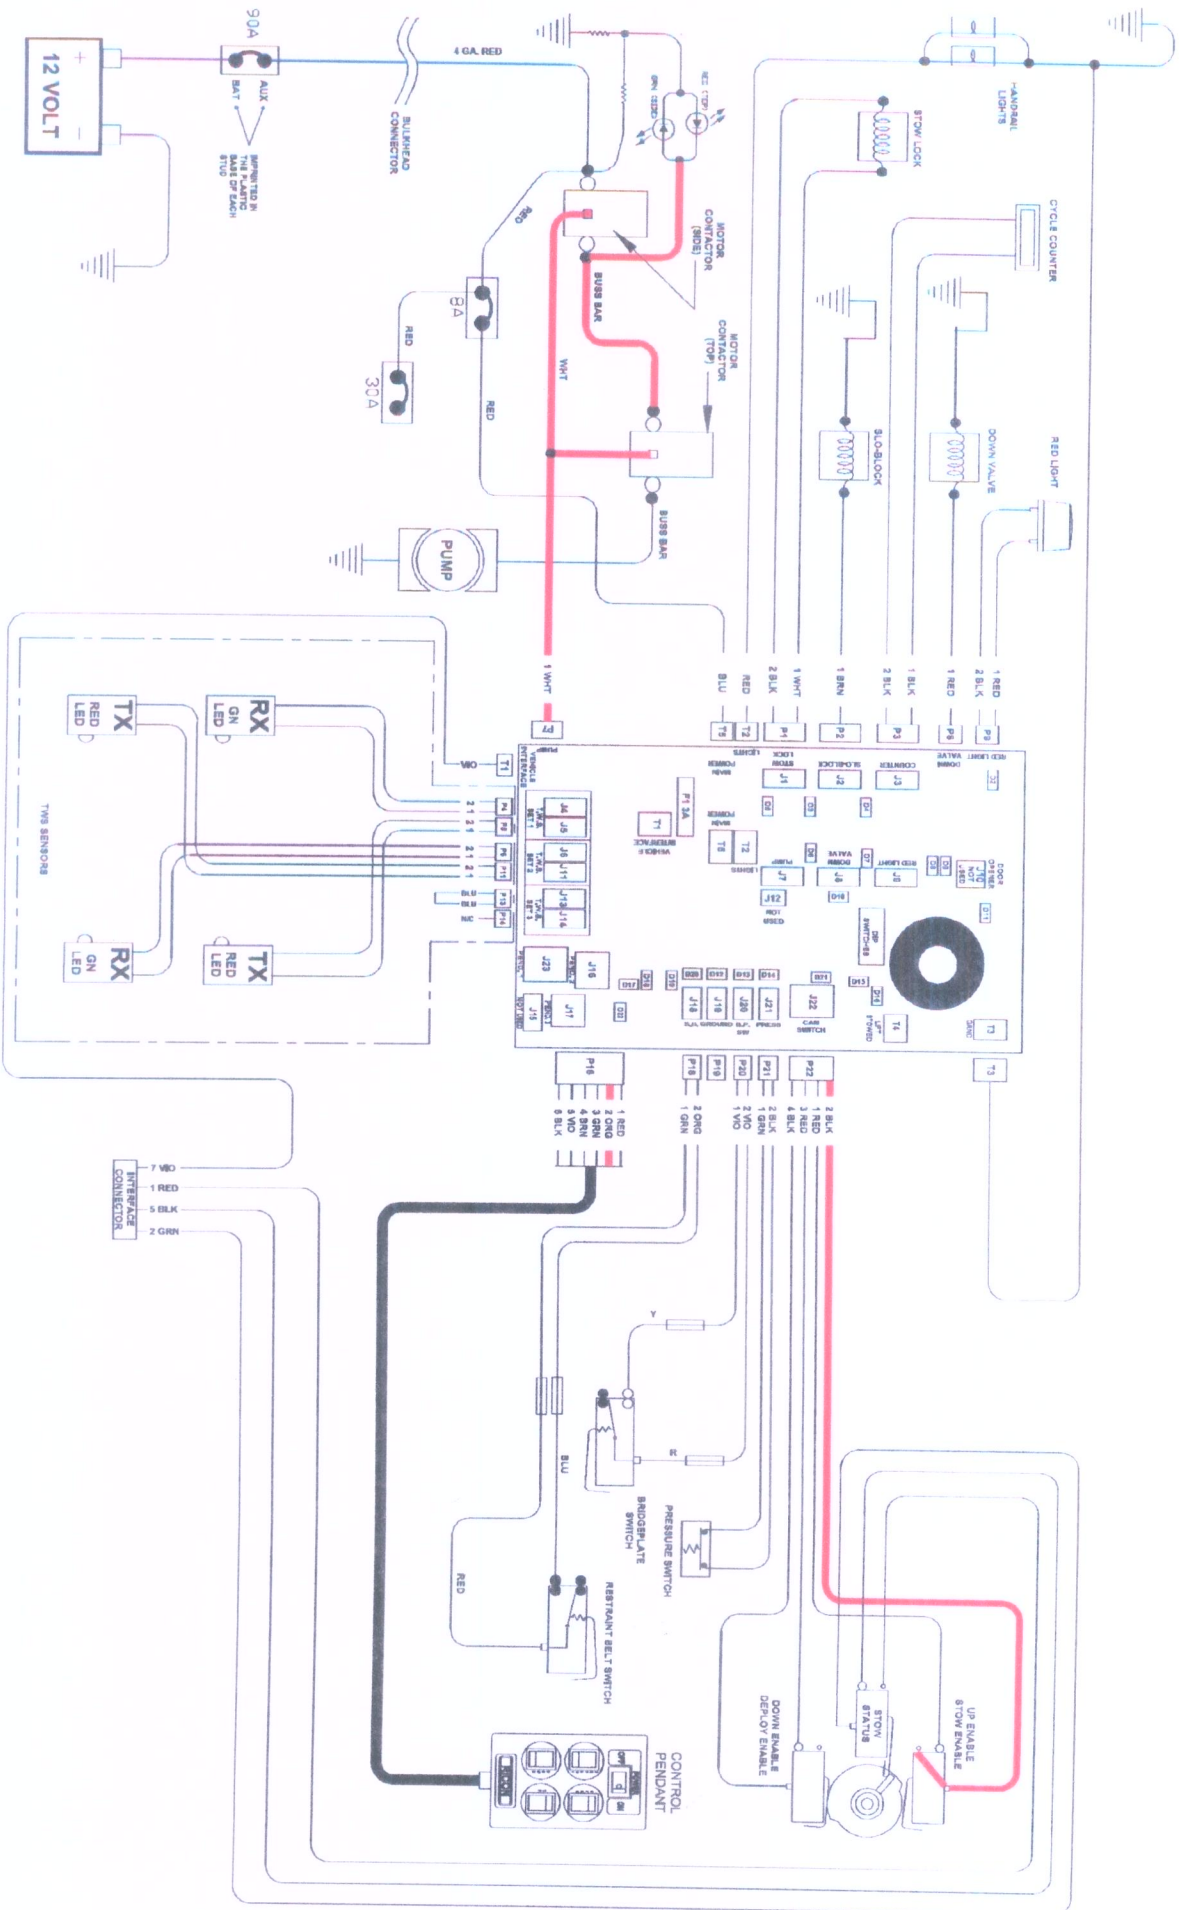

LED FUNCTIONS

INPUTS

- D13- BRIDGEPLATE SWITCH-ON when presence of a 25lb or higher load is detached on bridgeplate
- D14- PRESSURE SWITCH-OFF when platform is occupied
- D16- UP/STOW SWITCH- ON when platform is below floor level
- D17- DEPLOY- ON when DEPLOY pendant switch is activated
- D18- DOWN-ON when DOWN pendant switch I activated
- D19- UP-ON when UP pendant switch is activated
- D20- BELL- ON when occupant restraint belt is securely fastened (*Public use models only*)
- D21- DOWN/DEPLOY SWITCH- ON when platform is above floor level
- D22- STOW- ON when STOW pendant switch is activated

OUTPUTS

- D3- SLO-BLOC VALVE- ON when SLO-BLOC valve is activated to lift or lower platform
 - D4- COUNTER- ON when sending signal to counter to count one cycle
 - D5- STOW LOCK- ON when slow-lock solenoid is activated to release platform in order to deploy
 - D6- PUMP- ON when pump is activated in order to raise or stow platform
 - D7- DOWN VALVE- ON when hydraulic release valve is activated to lower platform
 - D10- RED LIGHT- LED flashes ON and OFF intermittently when red light and audible alarm are activated
- Red light and audible alarm are activated when the following conditions are met:
- Platform is 1" or more below floor level
 - Threshold Warning System detects something is interrupting sensor beams

